

User Manual

# High-resolution Oscilloscope MHO6 Series

Version Info

Version	Date	Remarks
V1.0	2025.05	
V2.0	2025.08	Appearance upgrade, BNC interface



## **Preface**

Dear User,

Greetings! We sincerely thank you for choosing Micsig products.

To ensure correct and safe operation, and to make full use of the instrument's performance, please read this manual carefully before use—especially the section on Safety Precautions. After reading, we recommend keeping the manual properly for future reference during routine maintenance or when consulting functional details.

We are committed to continuous product improvement and user experience optimization. In the future, the contents of this manual may be updated based on technological advancements and user feedback. For the latest information, please visit our official website ([www.micsig.com](http://www.micsig.com)).

This product strictly complies with the GB/T 15289-2013 standard. From design to production, it follows stringent quality control processes to ensure a stable and reliable user experience.

We wish you a pleasant and successful experience with our product!

Micsig Technology Team



## Features

### Parameters:

- Channels: 8 x Analog Channel, 1 x Auxout Channel
- Analog Channel Bandwidth: Max. 1GHz
- Max. Real Time Sampling Rate: 6GSa/s
- Max. Memory Depth: 1.8Gpts
- Max. Waveform Capture Rate: 280,000 wfms/s
- Vertical resolution: 12-bit
- Vertical Sensitivity Range: 1mV/div~10V/div (1M $\Omega$ ), 1mV/div~1V/div (50 $\Omega$ )
- Timebase Range: 250ps/div~1ks/div
- 16-inch TFT touch screen, 1920\*1200 resolution
- 256 GB Internal Storage
- Size: 443.6\*307.2\*37.6m



## **Functions:**

- Equipped with SigtestUI™ multitasking system, stable and reliable operation
- Built-in User Manual, large screen for easy reading
- Support channel label rename, quick setting of channel parameters
- Built-in AppStore, rich Android Apps: Electronic Tools, WPS, Browsers, etc.
- ES File Explorer support file management and FTP wireless transfer
- Waveform data saved in 3 formats (WAV, BIN, CSV)
- Support Screenshot, Timestamp and Color Inversion
- Support quick video recording
- Support wireless waveform screenshot printing
- Support 256-level grayscale digital fluorescent display and color temperature display
- Support waveform and FFT persistence display
- Support auto and manual Zero calibration
- Support 1M $\Omega$ /50 $\Omega$  impedance switching
- Support vertical scale fine-adjustment
- Support channel delay adjustment
- Support channel offset adjustment

- Support segmented storage function and can capture up to 10,000 events
- Support open 8 reference waveforms at the same time, support fixed selection of current channel
- 10 custom oscilloscope settings can be saved
- 50% key, support one-key centering of time base, trigger level, cursor, and channel position
- Support 4 sampling methods: normal, average, envelope, peak-to-peak
- Support Auto Setting & Auto Range, AUTO completed in 1 second
- Up to 31 measurements, support full screen and cursor-range measurement, support custom threshold and indicators
- Support 6-bit frequency meter and measurement statistics
- Rich trigger functions: edge, pulse width, logic, N edge, runt, slope, timeout, video, serial
- Rich serial bus decoding function: UART, I<sup>2</sup>C, SPI, CAN, CAN FD, LIN, 429, 1553B, support 2 decoding channels and decoding text mode
- Support advanced mathematical functions: square root Sqrt(), absolute value Abs(), degree Deg(), radian Rad(), exponent Exp(), differential Diff(), logarithm ln(), sine Sine(), cosine Cos(), Tangent Tan(), Integral Intg(), Logarithmic Log(), arcsin(), arccos(), arctan(), built-in ZOOM and FFT functions
- Support High/Low pass hardware filtering, rule out insignificant frequencies and interference
- Complete interfaces: USB 3.0 Host, USB type-C, Grounding, HDMI, Trigger out, 10MHz IN, 10MHz OUT
- Support PC software and mobile phone App remote control
- Support SCPI programming
- Support English, Chinese, German, French, Czech, Korean, Spanish, Italian and other languages

## *Functions*

- Support mouse operation
- Support anti-theft Kensington lock
- Support online firmware upgrade function
- Optional current probe, differential probe, optical isolated probe, special suitcase, handbag and other oscilloscope accessories



# Table of Contents

<b>TABLE OF CONTENTS .....</b>	<b>1</b>
<b>CHAPTER 1. SAFETY PRECAUTIONS .....</b>	<b>1</b>
1.1 SAFETY PRECAUTIONS .....	1
1.2 SAFETY TERMS AND SYMBOLS .....	5
<b>CHAPTER 2. QUICK START GUIDE OF OSCILLOSCOPE .....</b>	<b>8</b>
2.1 INSPECT PACKAGE CONTENTS .....	9
2.2 BRACKET INSTALLATION .....	10
2.3 FRONT OF THE OSCILLOSCOPE .....	11
2.4 BACK OF THE OSCILLOSCOPE .....	12
2.5 POWER ON/OFF THE OSCILLOSCOPE .....	13
2.6 UNDERSTAND THE OSCILLOSCOPE DISPLAY INTERFACE .....	14
2.7 INTRODUCTION BASIC OPERATIONS OF TOUCH SCREEN .....	20

---

2.8 MOUSE OPERATION .....	22
2.9 CONNECT PROBE TO THE OSCILLOSCOPE .....	24
2.10 USE AUTO .....	24
2.11 FACTORY SETTINGS .....	29
2.12 USE AUTO-CALIBRATION (SELF-ADJUST) .....	30
2.13 PASSIVE PROBE COMPENSATION .....	31
2.14 MODIFY THE LANGUAGE .....	35
<b>CHAPTER 3 OPERATE THE OSCILLOSCOPE WITH BUTTONS .....</b>	<b>36</b>
3.1 FUNCTION BUTTONS .....	38
3.2 MENU NAVIGATION BUTTON .....	39
3.3 CURSOR .....	39
3.4 TRIGGER SYSTEM .....	40
3.5 HORIZONTAL SYSTEM .....	42
3.6 VERTICAL SYSTEM .....	43

---

3.7 HOMEPAGE, SCREEN LOCK .....	45
<b>CHAPTER 4 HORIZONTAL SYSTEM .....</b>	<b>46</b>
4.1 MOVE THE WAVEFORM HORIZONTALLY .....	47
4.2 ADJUST THE HORIZONTAL TIME BASE (TIME/DIV) .....	48
4.3 PAN AND ZOOM SINGLE OR STOPPED ACQUISITIONS .....	50
4.4 ROLL, XY .....	50
4.5 ZOOM MODE .....	58
<b>CHAPTER 5 VERTICAL SYSTEM .....</b>	<b>61</b>
5.1 OPEN/CLOSE WAVEFORM (CHANNEL, MATH, REFERENCE WAVEFORMS) .....	63
5.2 ADJUST VERTICAL SENSITIVITY .....	68
5.3 ADJUST VERTICAL POSITION .....	69
5.4 OPEN CHANNEL MENU .....	69
5.4.1 Set Channel Coupling .....	71
5.4.2 Set Bandwidth Limit .....	74

---

5.4.3 Waveform Inversion .....	77
5.4.4 Set Probe Type .....	78
5.4.5 Set Probe Attenuation Ratio .....	79
5.4.6 Vertical Expansion Reference .....	81
5.4.7 Channel Label .....	81
5.4.8 Channel input impedance .....	83
5.4.9 Delay and offset .....	85
5.4.10 Fine scaling .....	85
<b>CHAPTER 6 TRIGGER SYSTEM .....</b>	<b>87</b>
6.1 TRIGGER AND TRIGGER ADJUSTMENT .....	88
6.2 EDGE TRIGGER .....	100
6.3 PULSE WIDTH TRIGGER .....	105
6.4 LOGIC TRIGGER .....	113
6.5 NTH EDGE TRIGGER .....	120

---

6.6 RUNT TRIGGER .....	123
6.7 SLOPE TRIGGER .....	126
6.8 TIMEOUT TRIGGER .....	131
6.9 VIDEO TRIGGER .....	134
6.10 SERIAL BUS TRIGGER .....	140
<b>CHAPTER 7 ANALYSIS SYSTEM .....</b>	<b>141</b>
7.1 AUTOMATIC MEASUREMENT .....	142
7.2 FREQUENCY METER MEASUREMENT .....	162
7.3 CURSOR .....	163
<b>CHAPTER 8 STORAGE .....</b>	<b>170</b>
8.1 SCREEN CAPTURE FUNCTION .....	171
8.2 VIDEO RECORDING .....	173
8.3 WAVEFORM STORAGE .....	174
8.4 OSCILLOSCOPE SETTING SAVE .....	182

---

8.5 SESSION SAVE .....	184
8.6 INVOKE FUNCTION .....	185
<b>CHAPTER 9 MATH AND REFERENCE .....</b>	<b>187</b>
9.1 DUAL WAVEFORM CALCULATION .....	188
9.2 FFT MEASUREMENT .....	193
9.3 ADVANCED MATH .....	200
9.4 REFERENCE WAVEFORM CALL .....	203
<b>CHAPTER 10 DISPLAY SETTINGS .....</b>	<b>208</b>
10.1 WAVEFORM SETTINGS .....	210
10.2 GRATICULE SETTING .....	210
10.3 PERSISTENCE SETTING .....	211
10.4 FFT INFORMATION .....	214
10.5 TXT MIX .....	215
10.6 TIME BASE MODE SELECTION .....	216

---

10.7 COLOR TEMPERATURE SETTING .....	217
<b>CHAPTER 11 SAMPLING SYSTEM .....</b>	<b>219</b>
11.1 SAMPLING OVERVIEW .....	220
11.2 RUN/STOP KEY AND SINGLE SEQ KEY .....	226
11.3 SELECT SAMPLING MODE .....	227
11.4 RECORD LENGTH AND SAMPLING RATE .....	233
11.5 SEGMENTED STORAGE .....	236
<i>11.5.1 Segment setting .....</i>	<i>237</i>
<i>11.5.2 Waveforms acquisition .....</i>	<i>239</i>
<i>11.5.3 Display and View .....</i>	<i>240</i>
<i>11.5.4 Example of segmented storage .....</i>	<i>243</i>
<b>CHAPTER 12 SERIAL BUS TRIGGER AND DECODE .....</b>	<b>246</b>
12.1 UART (RS232/RS422/RS485) BUS TRIGGER AND DECODE .....	252
12.2 LIN BUS TRIGGER AND DECODE .....	264

---

12.3 CAN (FD) BUS TRIGGER AND DECODE .....	271
12.4 SPI BUS TRIGGER AND DECODE .....	278
12.5 I <sup>2</sup> C BUS TRIGGER AND DECODE .....	285
12.6 ARINC429 BUS TRIGGER AND DECODE .....	293
12.7 1553B BUS TRIGGER AND DECODE .....	301
<b>CHAPTER 13 HOMEPAGE FUNCTIONS .....</b>	<b>309</b>
13.1 APP STORE .....	311
13.2 SETTINGS .....	314
13.3 FILE MANAGER .....	322
13.4 CALCULATOR .....	323
13.5 BROWSER .....	323
13.6 GALLERY .....	324
13.7 CALENDAR .....	327
13.8 ELECTRONIC TOOLS .....	327

---

13.9 CLOCK .....	328
13.11 POWER OFF .....	331
13.11 ES FILE EXPLORER .....	332
13.12 BINToCSV .....	336
<b>CHAPTER 14 REMOTE CONTROL .....</b>	<b>339</b>
14.1 HOST COMPUTER .....	340
<i>14.1.1 Installation of Host Computer Software .....</i>	<i>340</i>
<i>14.1.2 Connection of Host Computer .....</i>	<i>341</i>
<i>14.1.3 Main Interface Introduction .....</i>	<i>343</i>
<i>14.1.4 Operation Interface Introduction .....</i>	<i>345</i>
<i>14.1.5 Storage and View of Pictures and Videos .....</i>	<i>345</i>
14.2 MOBILE REMOTE CONTROL .....	348
14.3 SCPI .....	351
<b>CHAPTER 15 UPDATE AND UPGRADE FUNCTIONS .....</b>	<b>352</b>

---

15.1 SOFTWARE UPDATE .....	353
15.2 ADD OPTIONAL FUNCTIONS .....	354
<b>CHAPTER 16 REFERENCE .....</b>	<b>356</b>
16.1 MEASUREMENT CATEGORY .....	357
16.2 POLLUTION DEGREE .....	358
<b>CHAPTER 17 TROUBLESHOOTING .....</b>	<b>360</b>
<b>CHAPTER 18 SERVICES AND SUPPORT .....</b>	<b>366</b>
<b>ANNEX .....</b>	<b>368</b>
ANNEX A: MAINTENANCE AND CARE OF OSCILLOSCOPE .....	368
ANNEX B: ACCESSORIES .....	370

# Chapter 1. Safety Precautions

## 1.1 Safety Precautions

The following safety precautions must be understood to avoid personal injury and prevent damage to this product or any products connected to it. To avoid possible safety hazards, it is essential to follow these precautions while using this product.

- **Only professionally trained personnel can operate the maintenance procedure.**
- **Avoid fire and personal injury.**
- **Use proper power cord.** Use only the power cord specified for this product and certified for the country/region of use.
- **Connect and disconnect probes properly.** Connect the instrument probe correctly, and its ground terminal is ground phase. Do not connect or disconnect probes or test leads while they are connected to a voltage source.

Disconnect the probe input and the probe reference lead from the circuit under test before disconnecting the probe from the measurement product.

- **Ground the product.** To avoid electric shock, the instrument grounding conductor must be connected to earth ground.
- **Observe all terminal ratings.** To avoid fire or shock hazard, observe all rating and markings on the product. Consult the product manual for further information of ratings before making connections to the product.
- **Use correct probes.** To avoid excessive electric shock, use only correct rated probes for any measurement.
- **Disconnect AC power.** The adapter can be disconnected from AC power and the user must be able to access the adapter at any time.
- **Do not operate without covers.** Do not operate the product with covers or panels removed.
- **Do not operate with suspected failures.** If you suspect that there is damage to this product, have it inspected by service personnel designated by Micsig.

- **Use adapter correctly.** Supply power or charge the equipment by power adapter designated by Micsig, and charge the battery according to the recommended charging cycle.
- **Avoid exposed circuitry.** Do not touch exposed connections and components when power is present.
- **Provide proper ventilation.**
- **Do not operate in wet/damp conditions.**
- **Do not operate in a flammable and explosive atmosphere.**
- **Keep product surfaces clean and dry.**
- **The disturbance test of all models complies with Class A standards, based on EN61326:1997+A1+A2+A3, but do not meet Class B standards.**

### Measurement Category

The MHO 6 series oscilloscope is intended to be used for measurements in Measurement Category I.

## Measurement Category Definition

Measurement category I is for measurements performed on circuits not directly connected to the MAINS.

Examples are measurements on circuits not derived from MAINS, and specially protected (internal) MAINS derived circuits. In the latter case, transient stresses are variable; for that reason, the user must understand the transient withstand capability of the equipment.


## Warning


IEC Measurement Category. Under IEC Category I mounting conditions, the input terminal can be connected to the circuit terminal with a maximum line voltage of 300Vrms. To avoid the risk of electric shock, the input terminal should not be connected to the circuit with a line voltage greater than 300Vrms. Instantaneous overvoltage is present in circuits that are isolated from the mains supply. The MHO series digital oscilloscope is designed to safely withstand sporadic transient overvoltage up to 1000Vpk. Do not use this equipment for any measurements in circuits where the instantaneous overvoltage exceeds this value.

## 1.2 Safety Terms and Symbols

### Terms in the manual

These terms may appear in this manual:

 **Warning.** *Warning statements indicate conditions or practices that could result in injury or loss of life.*

 **Caution.** *Caution statements indicate conditions or practices that could result in damage to this product or other property.*

### Terms on the product

These terms may appear on the product:

**Danger** indicates an injury hazard immediately accessible as you read the marking.

**Warning** indicates an injury hazard not immediately accessible as you read the marking.

**Caution** indicates a hazard to this product or other properties.

## Symbols on the product

The following symbols may appear on the product:



Hazardous Voltage



Caution Refer to Manual



Protective Ground Terminal



Chassis Ground



Measurement Ground Terminal

**Please read the following safety precautions to avoid personal injury and prevent damage to this product or any products connected to it. To avoid possible hazards, this product can only be used within the specified scope.**

### **Warning**

*If the instrument input port is connected to a circuit with the peak voltage higher than 42V or the power exceeding 4800W, to avoid electric shock or fire:*

- *Use only insulated voltage probes supplied with the instrument, or the equivalent product indicated in the schedule.*
- *Before use, inspect voltage probes, test leads, and accessories for mechanical damage and replace when damaged.*
- *Remove voltage probes and accessories not in use.*
- *Plug the charger into the AC outlet before connecting it to the instrument.*

## Chapter 2. Quick Start Guide of Oscilloscope

This chapter contains checks and operations of the oscilloscope. You are recommended to read them carefully to understand appearance, power on/off, settings and related calibration requirements of the MHO series oscilloscope.

- Inspect package contents
- Install bracket
- Front panel
- Rear panel
- Power on/off the oscilloscope
- Understand the oscilloscope display interface
- Introduction to basic operations of oscilloscope
- Mouse operation
- Connect probe to the oscilloscope
- Use AUTO
- Use factory settings
- Use auto-calibration
- Passive probe compensation
- Modify the language

## 2.1 Inspect Package Contents

When you open package after receipt, please check the instrument according to the following steps.

### 1) Inspect if there is any damage caused by transportation

If the package or foam is found to be severely damaged, please retain it until the instrument and accessories pass the electrical and mechanical properties test.

### 2) Inspect the accessories

A detailed description is given in “[Annex B](#)” of this manual. You can refer it to check if the accessories are complete. If the accessories are missing or damaged, please contact Micsig’s agent or local office.

### 3) Inspect the instrument

If any damage to oscilloscope is found by the appearance inspection or it fails to pass the performance test, please contact Micsig’s agent or local office. If the instrument is damaged due to transportation, please retain the package and contact the transportation company or Micsig’s agent, and Micsig will make arrangement.

## 2.2 Bracket installation

Just install the standard bracket and knurled screws by hand as shown in Figure 2-1.

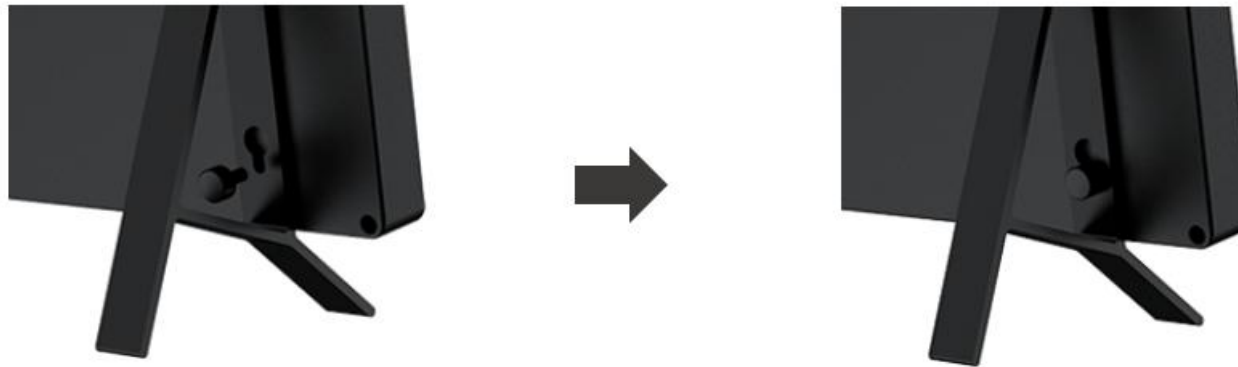


Figure 2-1

## 2.3 Front of the oscilloscope

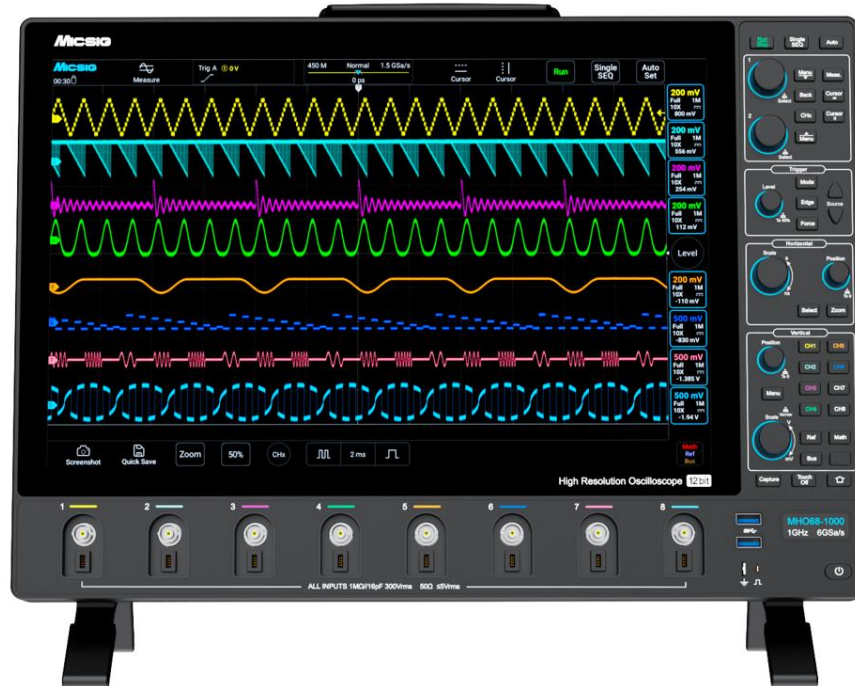


Figure 2-2

There are 2 USB 3.0 interfaces on the front of the oscilloscope, 1 probe compensation signal output interface, and 8 BNC probe interfaces. Aux out is an auxiliary channel, mainly used to cascade the current oscilloscope signal to other oscilloscope devices.

## 2.4 Back of the oscilloscope



Figure 2-3

There is 1 HDMI interface, 2 USB 3.0 interfaces, 1 Type-C interface, 1 LAN interface, 1 grounding jack, 1 TRIG IN interface, 1 TRIG OUT interface, 1 10MHz OUT interface and 1 10MHz IN interface on the back of the

oscilloscope. In addition to being fixed with the standard bracket, the back of the oscilloscope can also be installed with a wall-mounted bracket.




## 2.5 Power on/off the Oscilloscope


### Power on/off the oscilloscope

#### Power ON

- Press the power button  to start the instrument while ensuring it is connected to a power supply.

#### Power OFF

- Press the power button , go to power-off interface, and click  to turn off the instrument.
- Long press the power button  for 5 seconds to force shut down the instrument.

 **Caution:** Forced power-off may result in loss of unsaved data, please use with caution.

## **2.6 Understand the Oscilloscope Display Interface**

This section provides a brief introduction and description of the MHO Series oscilloscope user's interface. After reading this section, you can be familiar with the oscilloscope display interface content within the shortest possible time. The specific settings and adjustments will be detailed in subsequent chapters and sections. The following items may appear on the screen at a given time but not all items are visible. The oscilloscope interface is shown in Figure 2-4.

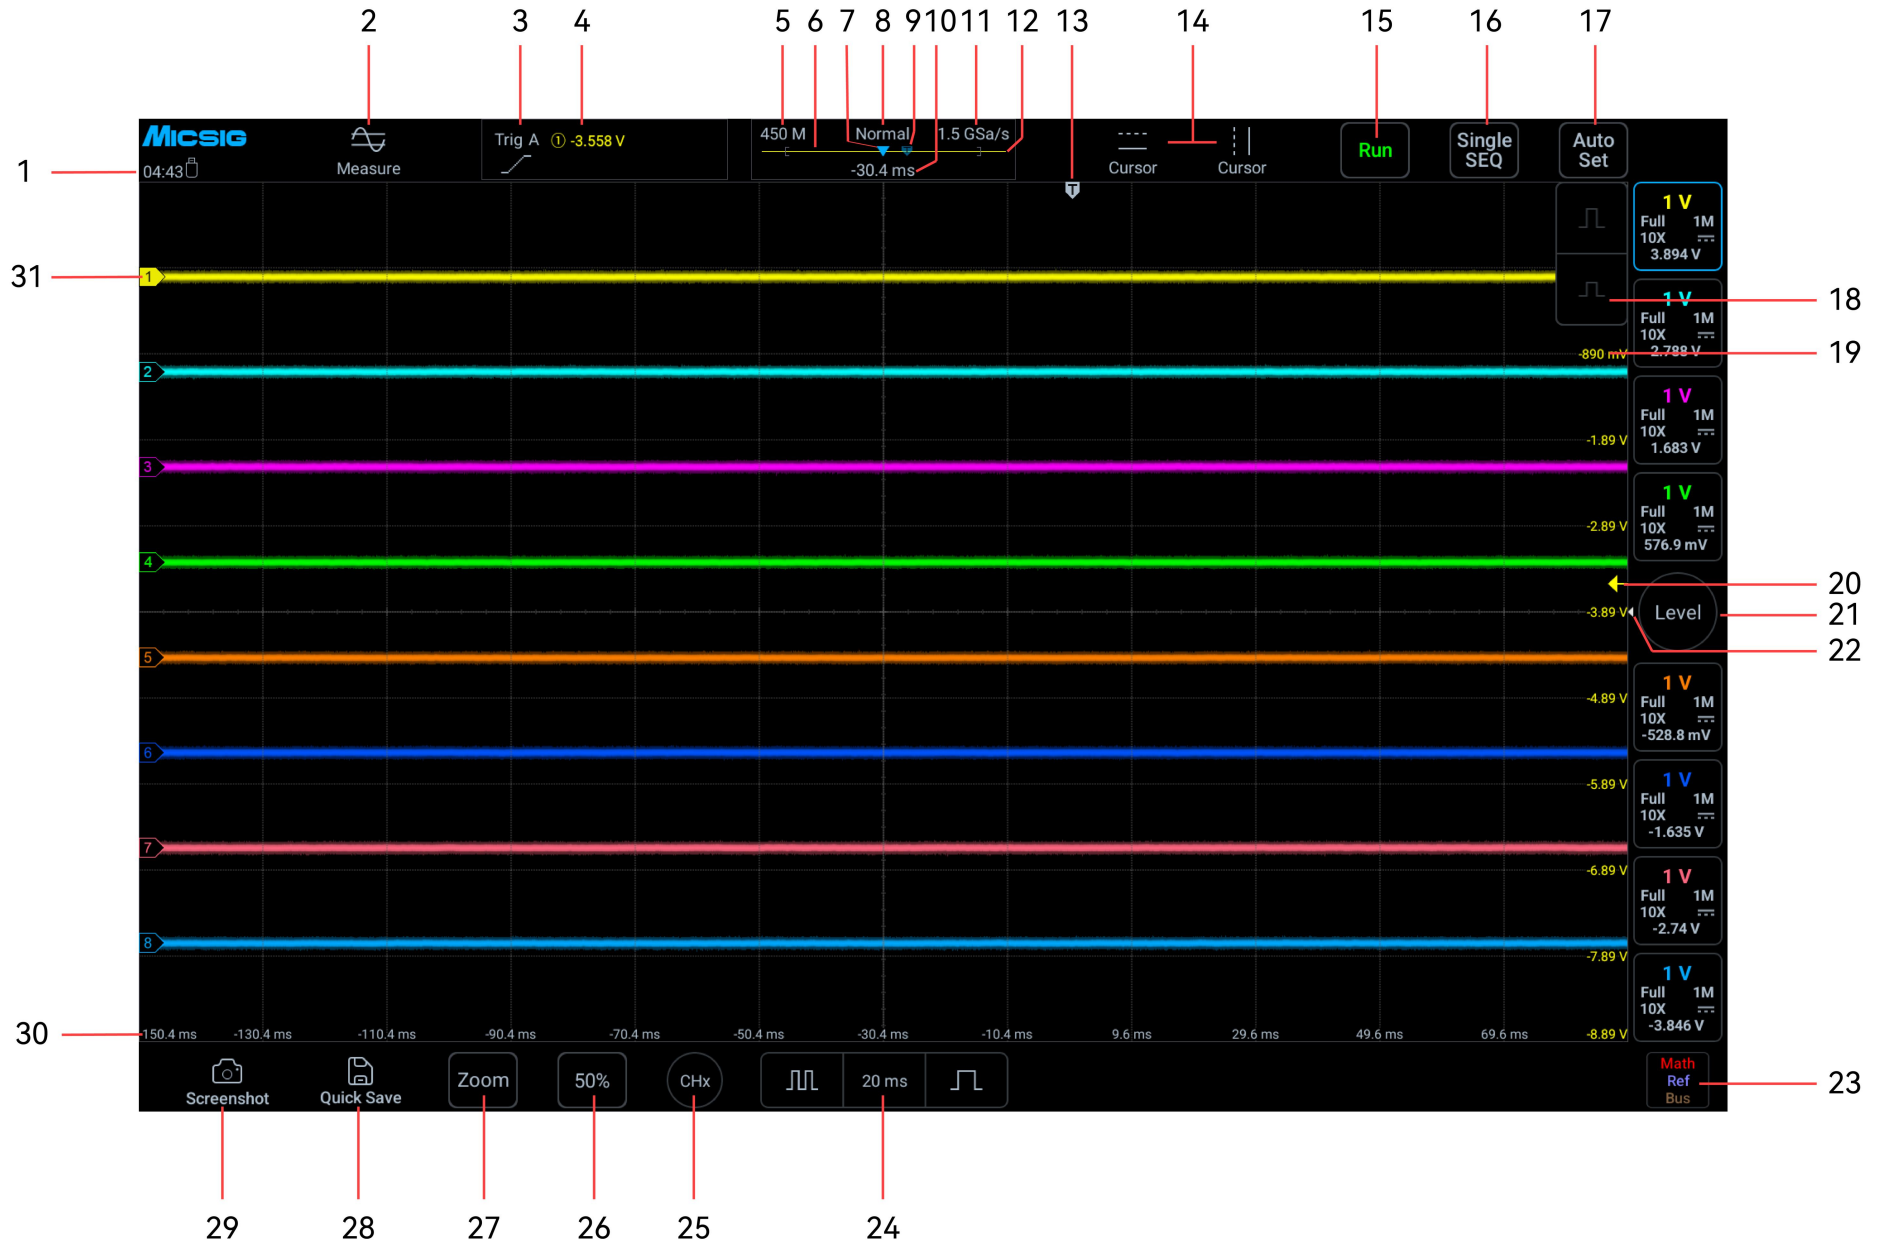


Figure 2-4 Oscilloscope Interface Display

No.	Description
1	USB-PC connection, USB peripheral access, time, logo and other display areas, click to return to the desktop
2	Open the main menu
3	The current trigger type and trigger mode are displayed. A means Auto, N means Normal
4	Current trigger source and trigger level value
5	Current record length
6	Record length indicator line
7	Waveform display area center indicator
8	Sampling mode display, including normal, average, envelope, peak
9	Trigger position
10	Delay time, the time between the center line of the waveform display area and the trigger position

---

No.	Description
11	Current sampling rate
12	The “[ ]” middle area indicates the position of the waveform displayed on the screen in the entire record length
13	Trigger position
14	Horizontal and vertical cursor opening and closing
15	Oscilloscope status, including RUN, STOP, and WAIT, tap to switch to stop
16	Single trigger, tap for single trigger
17	Auto setting and Auto range indication, tap to enter the AUTO, the oscilloscope automatically adjusts the waveform to the appropriate display mode
18	Display area for relevant information of each channel, including channel switch status, vertical sensitivity, coupling mode, phase inversion, bandwidth limit, impedance, etc. Swipe left on the corresponding channel to open the channel menu corresponding to the channel; swipe right to close

---

---

No.	Description
19	the channel. Click or to adjust the vertical sensitivity of the channel
20	Trigger level indicator
21	Trigger level adjustment. Press and hold the button and drag up and down to adjust the trigger level. Swipe left to open the current trigger quick setting menu.
22	Instructions for opening the trigger quick settings bar: Swipe left to open the trigger shortcut settings bar for quick settings of the trigger menu
23	Math, Ref and Bus Setting
24	Time base control icon. Tap the left/right button of the time base to adjust the waveform horizontal time base. Tap the current time base to open the matrix and select the required time base.
25	Current channel selection. After clicking, the current channel switching menu pops up to switch the current channel.

---

---

26	50% key: Touch to quickly return the channel zero point to the center of the screen; the trigger position quickly returns to the center of the screen; the trigger level quickly returns to the center of the waveform; the cursor quickly returns to the center of the upper, lower, left and right sides of the screen
27	ZOOM function
28	Quick Save. Tap to quickly save the currently opened channel waveform as a reference waveform and take a screenshot.
29	Screenshots
30	Horizontal time scale
31	Channel Indicator: The displayed ground level of each analog channel signal, identified by the channel indicator icon on the left side of the display.

---

Table 2-1 Description of Oscilloscope Display Interface

## 2.7 Introduction Basic Operations of Touch Screen

The MHO Series oscilloscope operates mainly by tap, swipe, single-finger drag.

### Tap

Tap button on the touch screen to activate the corresponding menu and function. Tap any blank space on the screen to exit the menu.

### Swipe

Single-finger swipe: to open/close menus, including main menu, shortcut menu button and other channel menu operations. For example, the main menu is opened as shown in Figure 2-7. The closing method is the opposite of the opening method.

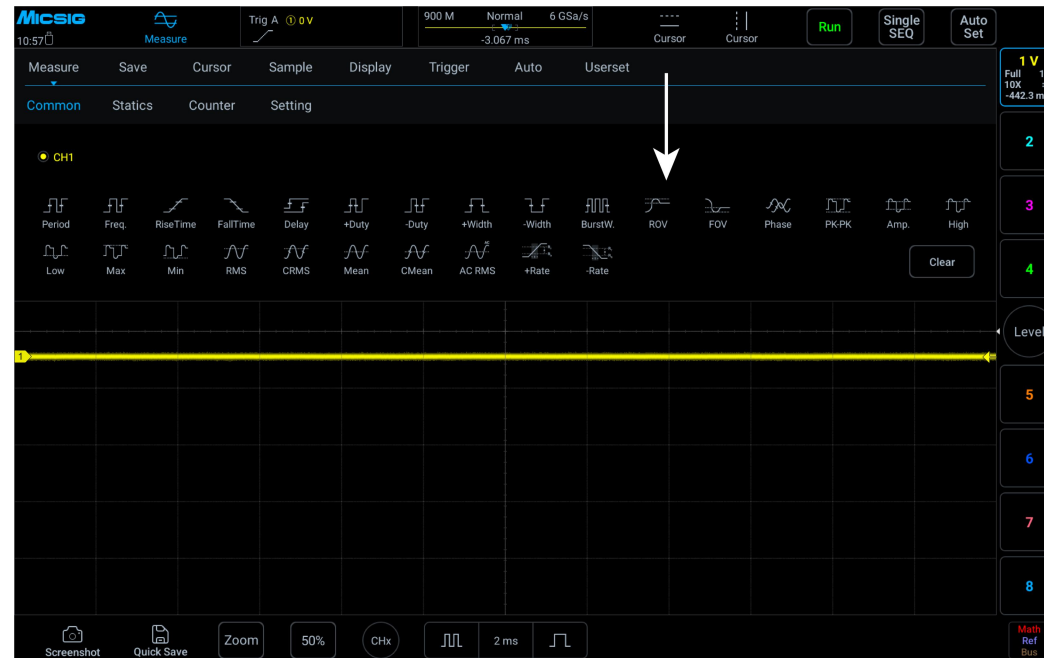


Figure 2-5 Slide out of Main Menu

Tap the options in the main menu to enter the corresponding submenu.



**Single-finger drag:** For coarse adjustments of vertical position, trigger point, trigger level, cursor, etc. of the waveform. Refer to “[4.1 Horizontal Move Waveform](#)” and “[5.3 Adjust Vertical Position](#)” for details.



**Zoom in / out:** for fine adjust the waveform on vertical scales

## 2.8 Mouse Operation

Connect the mouse to the "USB Host" interface, and you can operate the oscilloscope through the mouse. The left button, right button, and click wheel of the mouse have the same functions as finger touch. The mouse wheel can control the size of the time base. Under mouse control, the screen will be automatically locked. The right mouse button can unlock the screen or lock the screen again.



Figure 2-6 Mouse Cursor

## 2.9 Connect Probe to the Oscilloscope



- 1) Connect the probe to the oscilloscope channel Mic-OPI interface, or use an MSP-BNC adapter to connect to the BNC port.

Attach the retractable hook on the end of the probe to the circuit point or device under test to be measured. Be sure to connect the probe ground lead to the ground point of the circuit

### **Maximum input voltage of the analog input**

$1\text{M}\Omega // 14\text{pF}$ , 300Vrms, CAT I;  $50\Omega \leq 5\text{Vrms}$

## 2.10 Use Auto

Once the oscilloscope is properly connected and a valid signal is input, tap the Auto Set button  to quickly configure the oscilloscope to be the best display effects for the input signal. While the oscilloscope in auto state, the Auto Set button will light up .

Auto is divided into **Auto Set** and **Auto Range**. It is defaulted as Auto Set. Auto Set and Auto Range cannot take effect superimposed, only one can be enabled at a time.

**Auto Set** — Single-time auto, and each time press “Auto”, the screen displays “Auto” in the upper left corner. The oscilloscope can automatically adjust the vertical scale, horizontal scale and trigger setting according to the amplitude and frequency of signals, adjust the waveform to the appropriate size and display the input signal. After adjustments, exit from the auto set, the “Auto” in the upper left corner disappears.

Channels may be automatically opened. Any channel greater or less than the threshold level can be opened or closed automatically according to the set threshold level. The threshold level can be settable.

Source can be automatically triggered, and the triggered source channel can be automatically set to select priority to the current signal or to the maximum signal.

Open the main menu. Tap “Auto” to open the auto set menu, including channel open/close setting, threshold voltage setting and trigger source setting.

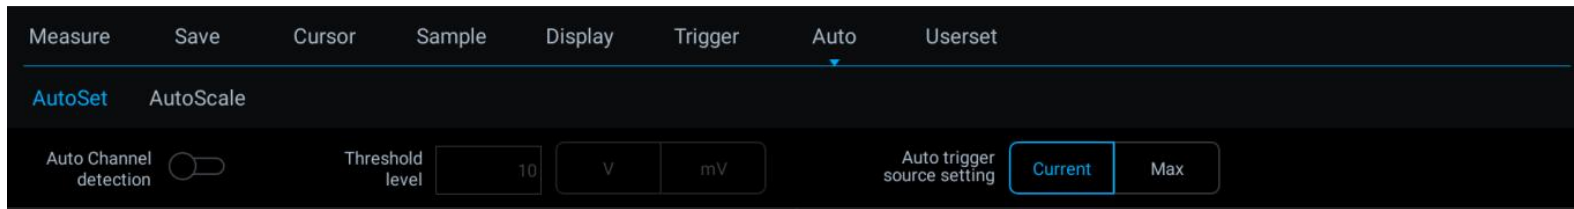


Figure 2-7 Open Auto Set

Automatic configuration includes: single channel and multiple channels; automatic adjustment of the horizontal time base, vertical sensitivity and trigger level of signal; the oscilloscope waveform is inverted off, the bandwidth limit sets to full bandwidth, it sets as DC coupling mode, the sampling mode is normal; the trigger type is set to edge trigger and the trigger mode is automatic.

**Note:** The application of Auto Set requires that the frequency of measured signal is no less than 20Hz, the duty ratio is greater than 1% and the amplitude is at least 2mVpp. If these parameter ranges are exceeded, Auto Set will fail.



Figure 2-8 Auto Set Waveform

**Auto Range** - Continuously automatic, the oscilloscope continuously adjusts the vertical scale, horizontal time base and trigger level in a real-time manner according to the magnitude and frequency of signal. It is defaulted as off and needs to be opened in the menu. This function is mutually exclusive with “Auto Set”.

Open the main menu and tap “Auto” to open the auto range menu for the corresponding settings. When the oscilloscope auto range function is turned on, the oscilloscope will automatically set various parameters, including: vertical scale, horizontal time base, trigger level, etc. When the signal is connected, these parameters will

automatically change, and the signal does not need to be operated again after the change. The oscilloscope will automatically recognize and make the appropriate changes.

- Auto range: Turn the auto range function on or off
- Vertical scale: Turn on the vertical scale automatic adjustment function;
- Horizontal time base: Turn on the horizontal time base automatic adjustment function;
- Trigger level: Turns on the auto-adjust trigger level function.

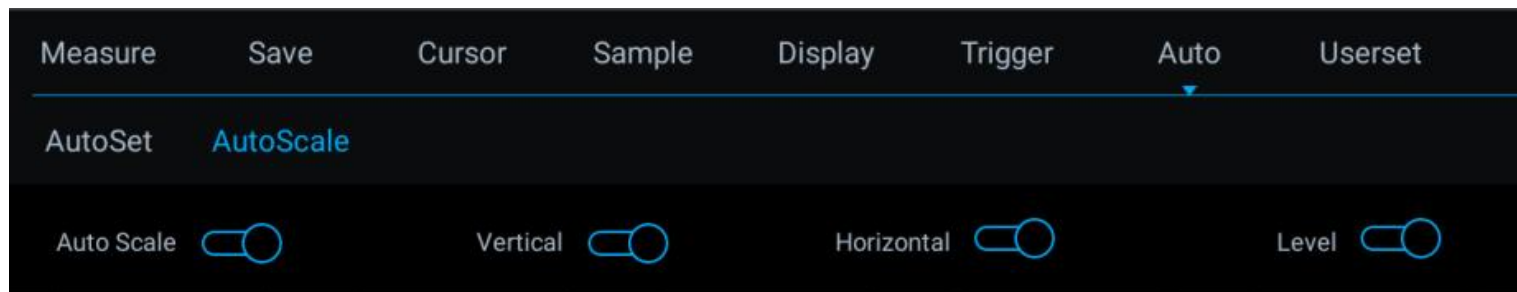


Figure 2-9 Open Auto Range

Auto Range is usually more useful than Auto Set under the following situations:

- 1) It can analyze signals subject to dynamic changes.
- 2) It can quickly view several continuous signals without adjusting the oscilloscope. This function is very useful if you need to use two probes at the same time, or if you can only use the probe with one hand because the other hand is full.
- 3) Control the automatic adjustment setting of the oscilloscope.

## 2.11 Factory Settings

Open the main menu, tap “User Settings” to enter the user setting page. Tap “Factory Settings” and the dialog box for loading factory settings will pop-up. Press “OK” and load the factory settings. The dialog box for loading factory settings is shown in Figure 2-10.

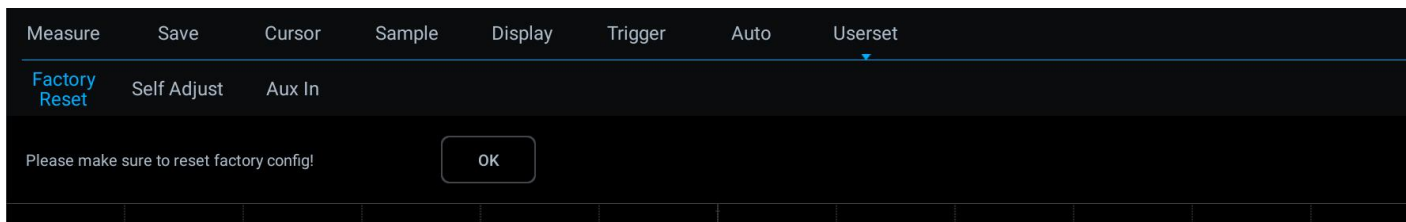



Figure 2-10 Load Factory Settings

## 2.12 Use Auto-calibration (Self-Adjust)

Open the main menu, tap “User Settings” to enter the user setting page. Tap “Self Adjust” to enter the auto-calibration mode. When the auto-calibration function is active, the upper left corner of the screen displays “Calibrating” in red, and after calibrating is finished, the word in red disappears. When the temperature changes largely, the auto-calibration function can make the oscilloscope maintain the highest accuracy of measurement.

- Remove all probes before auto-calibration.
- Auto-calibration process takes about 10-15 minutes.
- If the temperature changes above 10°C, it is recommended to perform a auto-calibration.

### Quick Zero

Swipe up on the bottom of the oscilloscope to open the bottom menu. Click to  quickly zero-calibrate the channel. When the quick zero-calibration function is activated, there will be a red font in the upper left corner of

the screen showing "Automatic zero calibration in progress". After the zero calibration is completed, the red font disappears. Fast zero calibration can quickly solve the problem of zero drift caused by environmental temperature differences. Compared with self-calibration, fast zero calibration can be set up in a few seconds.

## 2.13 Passive Probe Compensation

When connecting a probe to any input channel for the first time, probe compensation adjustments need to be made to match the probe to the input channel. Uncompensated probes can cause large measurement errors or errors. Probe compensation optimizes the oscilloscope's signal path to achieve higher measurement accuracy. If the ambient temperature changes by 10°C or more, probe compensation adjustment is required to ensure the accuracy of the measurement results.

The MSP500 probe is a standard passive probe of the MHO series high-resolution oscilloscopes. It adopts the Mic-OPI interface dedicated to Micsig. It can be automatically calibrated after being connected to the MHO, and no need to manually adjust the compensation.


### **Probe compensation steps:**

- 1) First, connect the oscilloscope probe to the target channel
- 2) Connect the probe to the calibration square wave signal output terminal and the probe ground clip to the ground terminal. As shown in Figure 2-11.



Figure 2-11 Probe Connection

- 3) Open the channel (if the channel is closed).

- 4) Tap  button or manually adjust the waveform vertical sensitivity and horizontal time base. Observe the waveform. As shown in Figure 2-12.

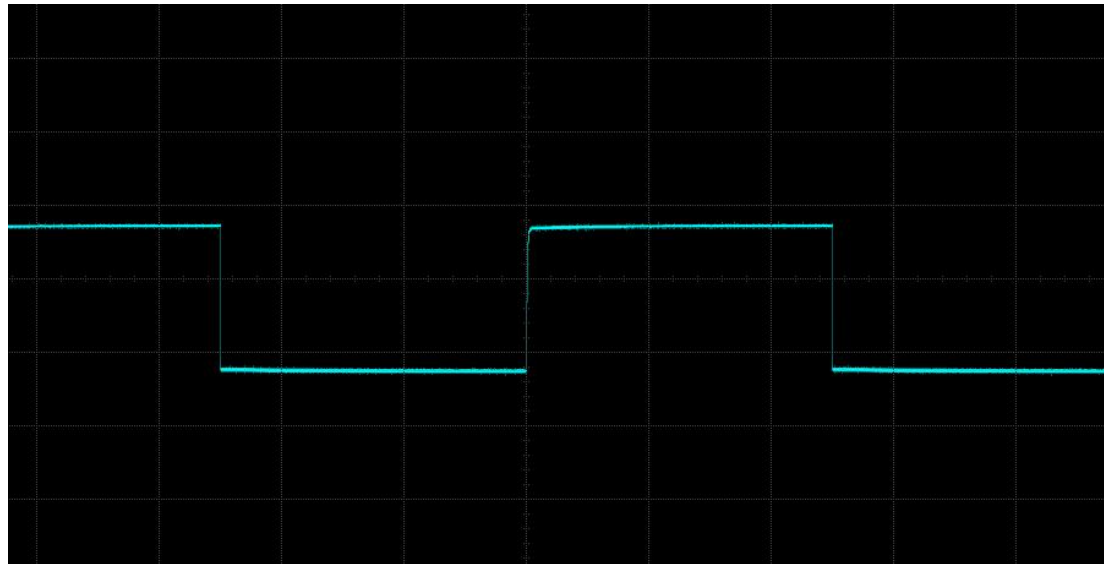


Figure 2-12 Probe Compensation

If the waveform displayed on the screen is like the "Under-compensated" or "Over-compensated", please adjust the trimmer capacitor on the probe until the waveform displayed on the screen is like the "Correctly Compensated" in the above figure. For the probe adjustment, refer to Figure 2-13.



Figure 2-13 Probe Adjustment

**⚠ Warning**

- *Ensure the wire insulation is in good condition to avoid probe electric shock while measuring high voltage.*
- *Keep your fingers behind the probe safety ring to prevent electric shock.*

- *When the probe is connected a voltage source, do not touch metal parts of the probe-head to prevent electric shock.*
- *Before any measurement, please correctly connect the probe ground end.*

## **2.14 Modify the Language**

To modify the display language, please refer to “[13.3 Settings - Language and Input Method](#)”.

## Chapter 3 Operate the Oscilloscope with Buttons

This chapter contains operating details of the oscilloscope with buttons. The button areas can be used to either operate oscilloscope without touch screen, or used with the touch screen. You are recommended to read this chapter carefully to understand the operation of buttons of the MHO series oscilloscope.


- Function buttons
- Menu control keys
- Cursor
- Vertical system
- Horizontal system
- Trigger system
- Home page, screen lock



Figure 3-1 Button Panel


## 3.1 Function Buttons



### Auto

Use  on the right function button area to turn on the Auto Set function. Each time you press “Auto”, the oscilloscope can recognize the type of input signal and adjust the control mode. It automatically adjusts the vertical scale, horizontal scale and trigger settings. Adjust to the waveform to the best display state.

For details, please refer to “[2.10 Use Auto](#)” in Chapter 2.

### Run/Stop and Single SEQ


Press  to quickly freeze and capture the current signal waveform, and click again, the waveform continues to run;


Press  for single acquisition. The oscilloscope displays the waveform acquired in a single acquisition. In the roll mode and large time base mode, the acquisition will stop at full screen .

For details, please refer to “[11.2 Run/Stop and Single SEQ Buttons](#)” in Chapter 11.



## 3.2 Menu Navigation Button

### Menu opening and closing



Press  to open or close the top menu.







Press  to open or close the bottom menu.

### Menu switching

Use knob 1  in the menu control area to switch menus. Press to select the menu and automatically enter the next menu. Press to return  to the previous menu.



## 3.3 Cursor


- Cursor on and off: Press  button to turn on the horizontal cursor, press  button to turn on the vertical cursor.


- Cursor switching: Press knob 1  and knob 2  in the menu control area to switch between cursor and cursor linkage.
- Cursor movement: In the non-linked state, rotating knob 1  can control the X1 or Y1 cursor, and knob 2  can control the X2 or Y2 cursor; in the linked state, rotating knob 1 , the cursor will move in the opposite direction at the same time, rotating knob 2 , the cursor will move in the same direction at the same time.



### 3.4 Trigger System

**Open the trigger menu:** In the trigger system control area , press the trigger menu button  to open the trigger menu.

**Adjust the trigger level:** In the trigger system control area , rotate the trigger level knob  to adjust the current trigger level;

**Trigger source switching:** Press the trigger source switching button  to switch the trigger source;

**Edge and polarity switching:** Press  to switch between edges (rising, falling, double edges) or polarity (positive, negative, any) according to the current trigger mode.

**Adjust the trigger suppression time:** Rotate knob 1  and knob 2  in the menu control area to coarsely adjust and finely adjust the trigger suppression time respectively.

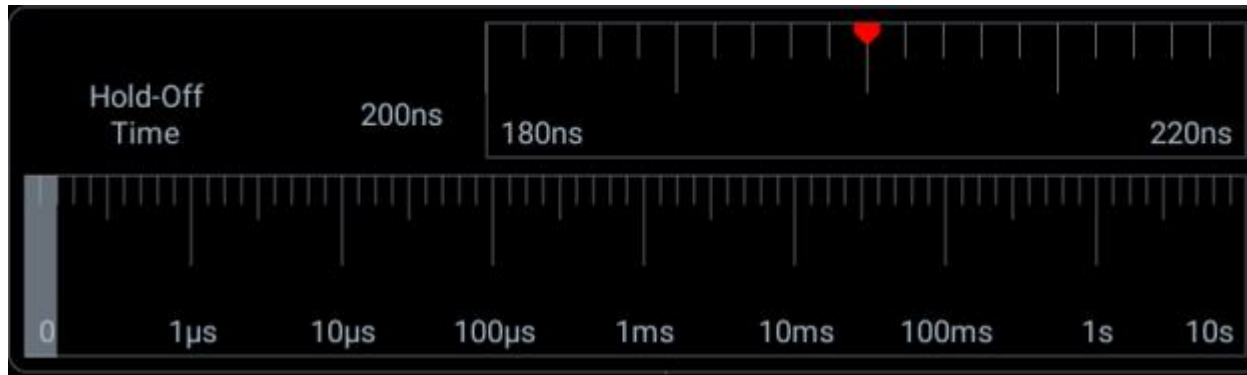


Figure 3-2 Trigger hold-off time


For details, please refer to “[Chapter 6 Trigger System](#)”.

### 3.5 Horizontal System

Adjust the horizontal time base: Rotate the time base knob  to adjust the horizontal time base of all analog channels (current channel).

Adjust the horizontal position: In the horizontal system control area , rotate the horizontal position

knob  to move the horizontal position of the waveforms of all analog channels (current channel). Press the

horizontal position knob  to move the trigger positions of all analog channels (current channel) to the horizontal position. The center position of the direction.












Press  to turn Zoom on or off. When Zoom is turned on, the button  will be lit. Rotate the horizontal



position knob  to move the horizontal position of the Zoom window.


For details, please refer to “[4.5 Zoom Mode](#)” in Chapter 4.




## 3.6 Vertical System





### Analog Channel

Open/close: Press the analog channel button , , , , , , , , , ,  to cycle through the functions: open the channel, switch the current channel, and close the channel.


When the channel is open, the button lights will light up , , , , , , , .



Adjust the vertical sensitivity: Rotate the vertical gear knob  to adjust the vertical sensitivity of the current channel so that the waveform is displayed on the screen at a suitable size.

Adjust the vertical position: In the vertical system control area , rotate the vertical position knob  to adjust the vertical position of the current channel. Press the vertical position knob  to move the current channel waveform to the vertical center of the screen.

Menu opening and selection: In the vertical system control area , press  to open the current channel menu. Use knob 1  in the menu control area to select the menu. Press to select the menu and automatically enter the next menu. Press  to return to the previous menu.

## 3.7 Homepage, Screen Lock

**Home:** Press , switch to the oscilloscope homepage. For details, please refer to “[Chapter 13 Homepage Functions](#)”.

**Screen lock:** Press  make touch screen function of the oscilloscope fails, and the button light is on .

**Note:** The Home button function can also be accessed by simply clicking on the menu option in the pull-up menu.

## Chapter 4 Horizontal System

This chapter contains the detailed information of the horizontal system of the oscilloscope. You are recommended to read this chapter carefully to understand the set functions and operation of the horizontal system of the MHO series oscilloscope.

- Move the waveform horizontally
- Adjust the horizontal time base (time/div)
- Pan and zoom single or stopped acquisitions
- Roll, XY
- Zoom mode

## 4.1 Move the Waveform Horizontally

Put one finger on the waveform display area to swipe left and right, for the coarse adjustment of the waveform position horizontally of all analog channels; after moving the waveform, tap the fine adjustment button in the lower left corner of the screen for fine adjustment.

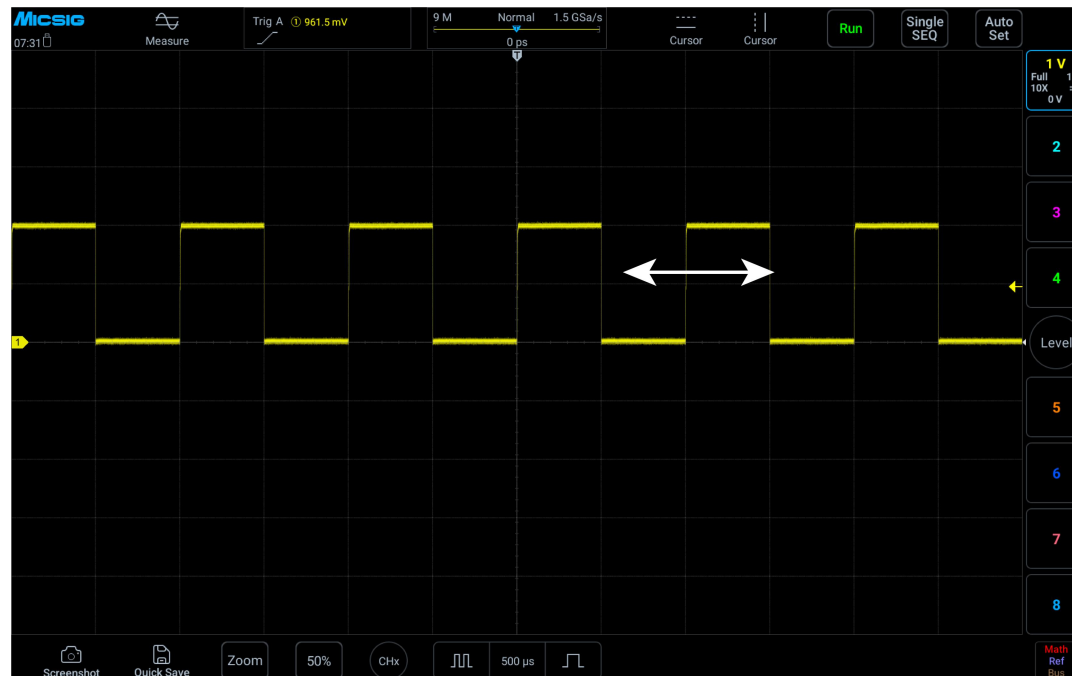






Figure 4-1 Move the Waveform Horizontally on the Screen

## 4.2 Adjust the Horizontal Time Base (time/div)

### Method 1: Soft Keys

Tap ,  buttons to adjust the horizontal time base of all analog channels (current channels). Tap  button to increase the horizontal time base; tap  button to zoom out the horizontal time base (see Figure 4-3 Adjust the Horizontal Time Base). The horizontal time base is stepped in 1-2-5, while the waveform changes as the time base changes.

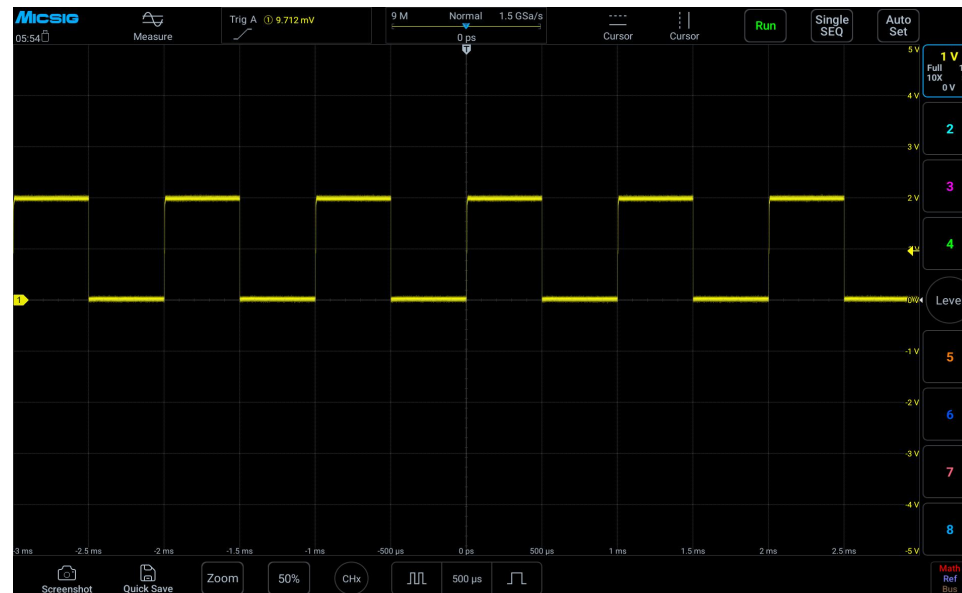


Figure 4-2 Adjust the Horizontal Time Base

## Method 2: Time Base Knob

Tap **500ms** to open the time base list (see Figure 4-4 Horizontal Time Base List), then tap the list to select the appropriate time base. The time base with the blue filled background is the currently selected time base.




Figure 4-3 Horizontal Time Base Knob

### 4.3 Pan and Zoom Single or Stopped Acquisitions

After the oscilloscope is stopped, the stopped display screen may contain several acquired data with useful information, but only the data in the last acquisition can be horizontally moved and zoomed. The data of the single acquisition or stopped acquisition is moved horizontally and zoomed. For details, refer to “[4.1 Move the Waveform Horizontally](#)” and “[4.2 Adjust the Horizontal Time Base \(time/div\)](#)”.

### 4.4 Roll, XY

In the main menu, tap the soft key , then select the desired time base mode. The time base mode is divided into YT, ROLL, and XY.

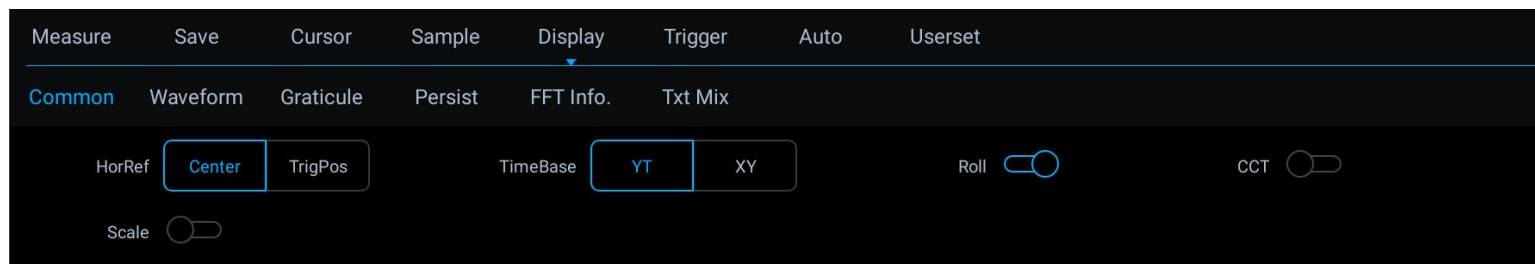


Figure 4-4 Display Mode

## **YT——Normal View Mode of Oscilloscope**

In YT mode, the relative relationship between vertical voltage and horizontal time is displayed. Y axis represents the voltage, X axis represents the time, and the waveform is displayed after triggering (waveform displayed from left to right).

**Note:** When the time base is large (such as 200ms and above), sometimes the waveform will not be displayed for a long time; this is because in YT mode, the waveform must be triggered before display. It is closely related to the time base and can be roughly calculated as: the number of divisions on the left side of the trigger position \* time base level position; if you want to reduce the waiting time, move the trigger position to the left.

**The case that trigger position is moved out of the waveform screen is not considered here.**

## **ROLL——ROLL Mode**

In ROLL mode, the waveform rolls from right to left to refresh the display (see Figure 4-6 ROLL Mode). The horizontal time base adjustment range of the ROLL mode in the running state is 200ms/div~1ks/div.

In ROLL mode, trigger related information is invalid, including trigger position, trigger level, trigger voltage, etc.

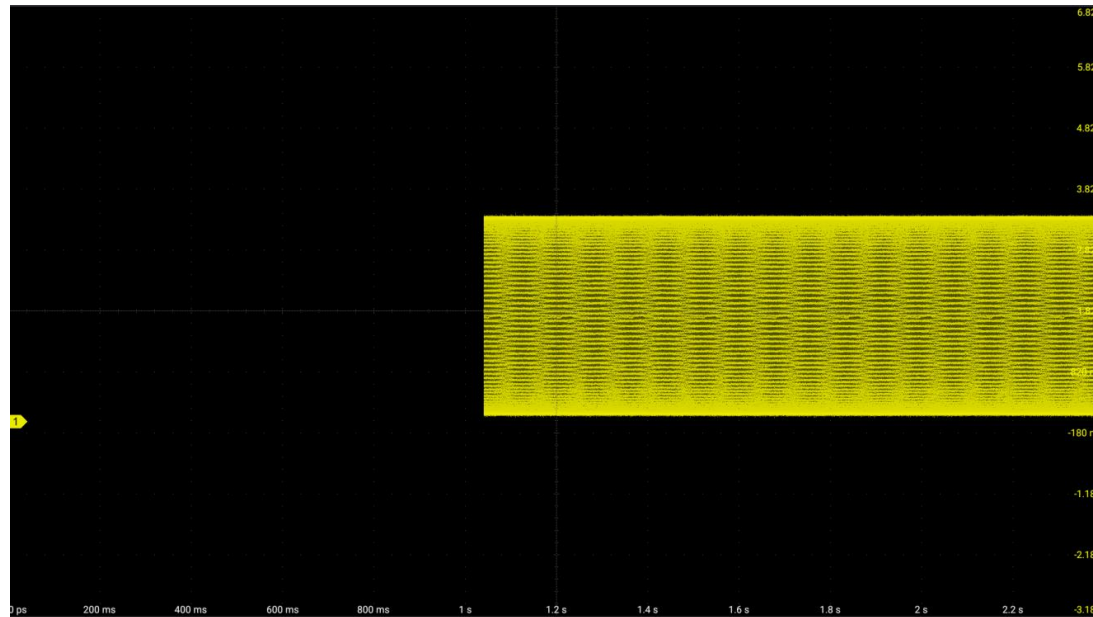





Figure 4-5 ROLL Mode

In ROLL mode, press  to stop waveform display; press  again to clear waveform display and restart acquisition; press  to execute single sequence, it will stop automatically after completing a full screen acquisition.

ROLL mode is generally used to observe waveforms with frequencies below 5 Hz.

ROLL mode is defaulted as open. When the time base is greater than 100ms, it automatically enters the ROLL mode. If the signal to be triggered under a large time base needs to be viewed, turn off the ROLL mode.

Roll mode on and off: In the main menu, tap the soft key **Display**. In the “Common” option, you can turn the roll mode on and off (refer to Figure 4-7). When the roll mode is on and the time base is within 200ms~1ks, the oscilloscope automatically enters the roll mode.

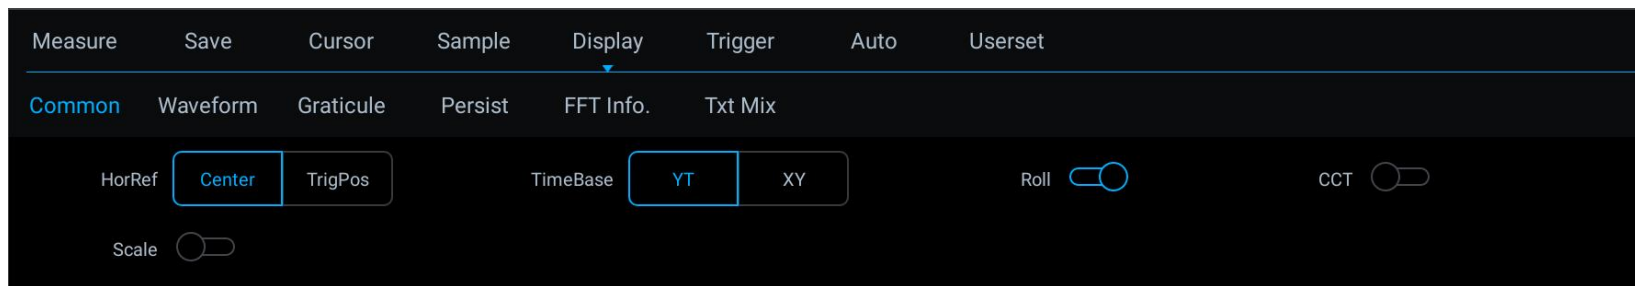


Figure 4-6 Roll Mode On/Off

## XY——XY Mode

The vertical amount of CH1 is displayed on the horizontal axis in XY mode, and the vertical amount of CH2 is

displayed on the vertical axis (see Figure 4-8 XY Mode).

You can use XY mode to compare the frequency and phase relationship of two signals.

XY mode can be used for sensors to display stress-displacement, flow-pressure, voltage-frequency or voltage-current, for example: plotting a diode curve.

You can also use the cursor to measure the waveform in XY mode.

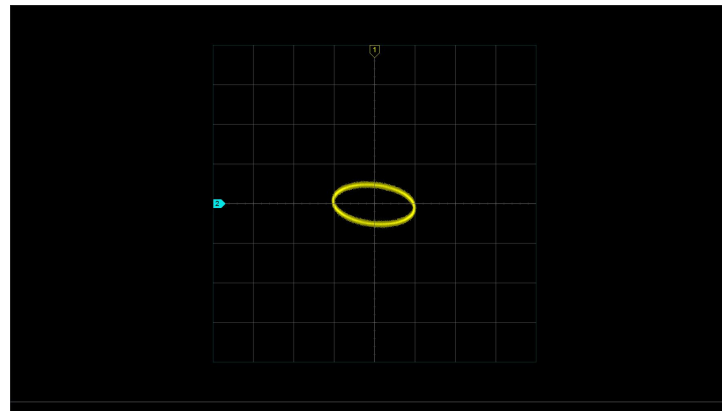


Figure 4-7 XY Mode

### XY Mode Example

This exercise shows the usual practice of XY display mode by measuring the phase difference between two signals of the same frequency using the Lissajous method.

- 1) Connect sine wave signals to CH1 and connect sine wave signals of the same frequency and different phases to CH2.
- 2) Press “Auto” set button, tap “Display” in the main menu, then select “XY” in “Time Base”.
- 3) Drag signals so that they are centered on the display screen. Adjust the vertical sensitivity of CH1 and CH2, and extend signals for viewing.

The phase difference ( $\theta$ ) can be calculated using the following formula (assuming that the amplitudes of the two channels are the same):

$$\sin\theta = \frac{A}{B} \text{ or } \frac{C}{D}$$

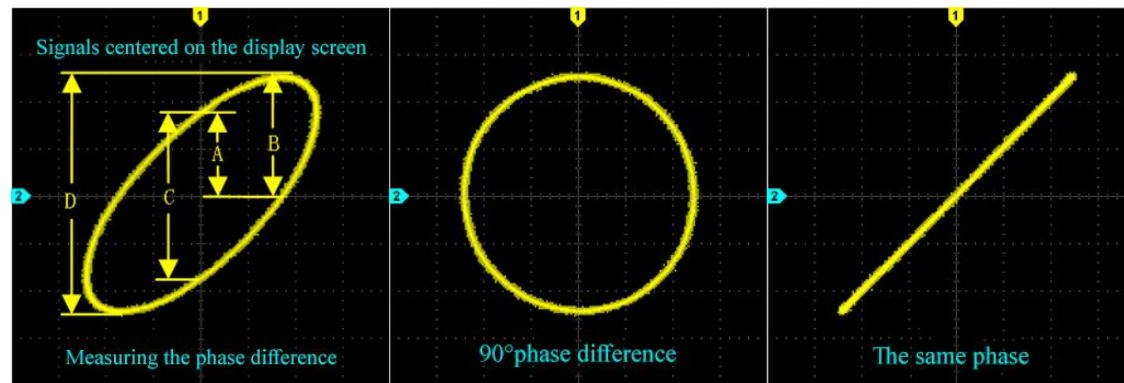


Figure 4-8 XY Time Base Mode Signal, Center on the Display Screen

- 4) Tap the “Cursor” button to open the horizontal cursor.
- 5) Set the cursor y2 at the top of the signal and the cursor y1 at the bottom of the signal. Record the  $\Delta y$  value in the upper right corner of the screen.
- 6) Move y1 and y2 cursors to the intersection point of the signal and the y-axis. Record the  $\Delta y$  value again.

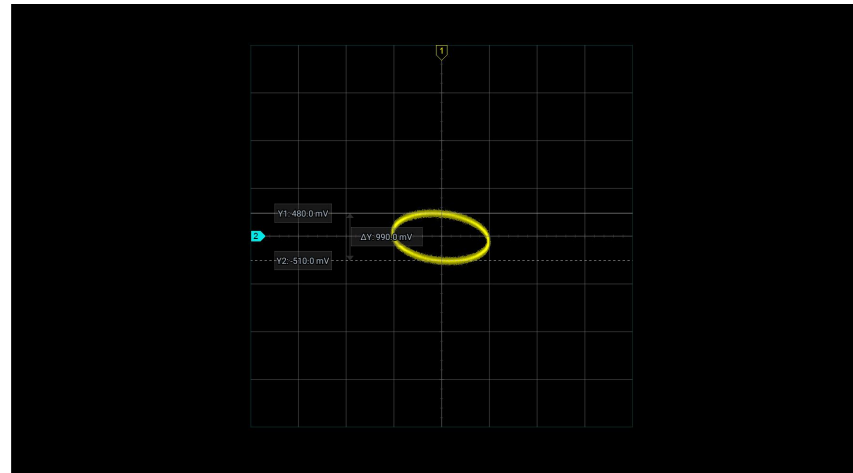


Figure 4-9 Phase Difference Measurement and Using the Cursor

7) The following formula is used to calculate the phase difference.

$$\sin\theta = \frac{Y2}{Y1}; \quad \theta = \arcsin\frac{Y2}{Y1}$$

For example, if the first  $\Delta y$  value is 9.97V, the second  $\Delta y$  value is 5.72V:

$$\sin\theta = \frac{5.72}{9.97}; \quad \theta = \arcsin\frac{5.72}{9.97}$$

## 4.5 Zoom Mode

Zoom is a horizontally expanded version of the normal display. Open the zoom function, the display is divided into two parts (see Figure 4-11 Zoom Interface). The upper part of the display screen shows the normal display window view and the lower part shows the zoomed display window.

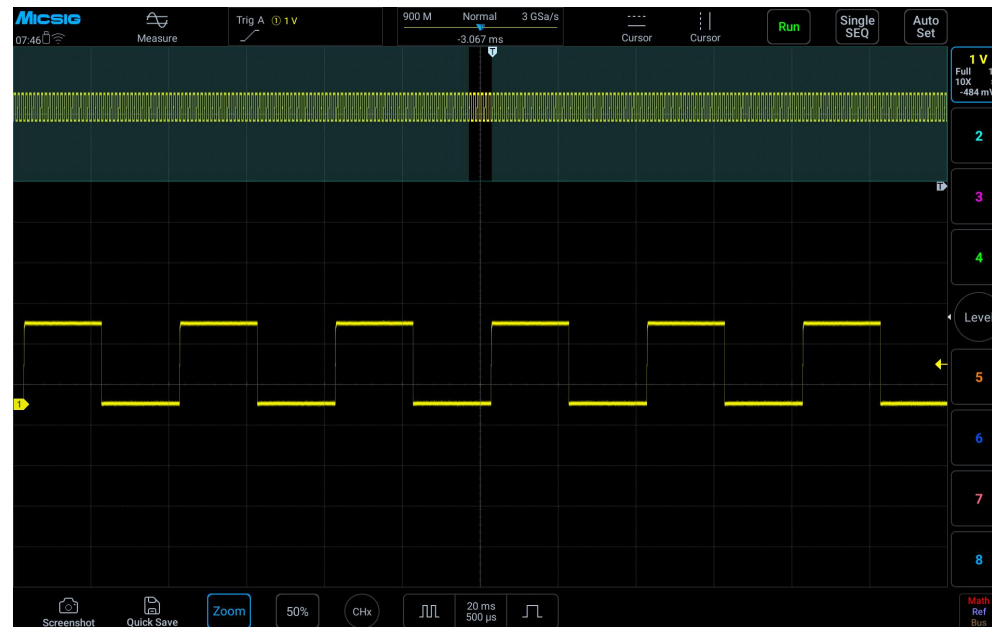


Figure 4-10 Zoom Interface

Zoom window view is the enlarged portion of the normal display window. You can use “Zoom” to view a portion of the normal window that is horizontally expanded to learn more about signal analysis.

**Zoom on/off:**


Open the pull-up menu and tap  button to turn the zoom function on/off.

Zoom window is framed in a box on the normal window, and the other portion is covered by gray shade not displayed in the zoom window. This box shows the normal scan portion that was zoomed in the lower bottom.

Tap the time base button to adjust the time base of the zoom window. The size of the box in the normal window changes according to the time base of the zoom window.

Drag the waveform of the zoom window horizontally to adjust the waveform position. The box in the main window moves oppositely against the waveform; or directly drag the box in the normal window to quickly locate the waveform to be viewed.

**Note:**

- 1) The minimum time base is displayed in the normal window when the waveform in the screen is exactly within the memory depth. If the current time base is smaller than the minimum time base in the normal window at the current memory depth, when the zoom window is opened, the time base in the normal window is automatically set to the minimum time base in the normal window at the current memory depth.
- 2) The cursor, math waveform, and reference waveform are not displayed in the normal window, but can be displayed in the Zoom window.
- 3) If Roll mode is stopped, Zoom mode can be turned on, and tap “Run/Stop”  to automatically turn off Zoom mode.

## **Chapter 5 Vertical System**


This chapter contains the detailed information of the vertical system of the oscilloscope. You are recommended to read this chapter carefully to understand the set functions and operation of the vertical system of the MHO series oscilloscope.

- Open/close channel, set the current channel
- Adjust vertical sensitivity
- Adjust vertical position
- Open channel menu










The figure below shows the “CH1 Channel Menu” displayed after opening the CH1 channel menu.






Figure 5-1 Channel Menu Display Interface




The ground level of each displayed analog channel signal is indicated by the channel indicator icon  on the far left of the display screen.

## 5.1 Open/Close Waveform (Channel, Math, Reference Waveforms)

The channel icons , , , , , , , ,  on the right side of the oscilloscope waveform display area (swipe up or down to switch to math channel and reference channel) correspond to the six channels of CH1, CH2, CH3, CH4, CH5, CH6, CH7, CH8, math function, bus and reference

channel. The channel icons in open state will show like , , , , , ,

, . Swipe right to close the desired channel. Tap  to expand the menu and add Math, Ref, and Bus channels. The newly added math functions, reference channels, and serial bus channels are displayed in

the right-hand area of the bottom menu , , . Swipe down on the channel soft key to disable the corresponding channel.

Current channel: The oscilloscope can display multiple waveforms at the same time, but only one waveform is preferentially displayed on the uppermost layer, and the channel that is preferentially displayed on the uppermost layer is called the current channel. The channel indicator for the current channel is solid, and the channel indicator for the non-current channel is hollow, as shown in Figure 5-2.



Figure 5-2 Current Channel and Non-Current Channel

The display content of the oscilloscope channel display interface includes the vertical scale, vertical scale sensitivity button, coupling mode, invert, bandwidth limitation of the channel, as shown in Figure 5-3.

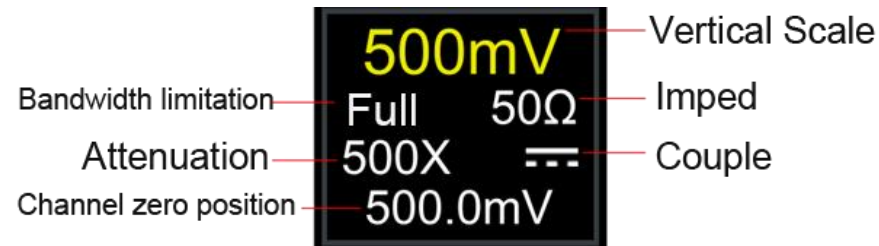


Figure 5-3 Channel Display Interface


When CH1 is on, but the state is not the current channel, tap CH1 waveform or vertical sensitivity or channel indicator  or vertical sensitivity button or current channel selection button to set CH1 as the current channel, as shown in Figure 5-4.



Figure 5-4 Channel Open, Close and Switching





1. Tap to select current channel
2. Tap current channel set button


Figure 5-5 Using the Current Channel Selection Button

Tap the current channel icon at the bottom of the screen to pop up the current channel switching menu and press the button to light it up, as shown in Figure 5-5. Tap the button in the menu to switch the current channel. When this function is opened:

- a. the current channel may be switched in the channel switching menu;
- b. the current channel menu can be moved anywhere on the screen;
- c. only the open channel is displayed in the channel switching menu;
- d. when the math or reference waveform is opened, the current channel switching menu is automatically opened.

## 5.2 Adjust Vertical Sensitivity

Tap the current channel . The Vertical Sensitivity buttons  is located on the left side. Tap the vertical sensitivity buttons on the right side of the channel icon to adjust the vertical display of the waveform corresponding to the channel, so that the waveform is displayed on the screen at an appropriate size.

The vertical sensitivity scale (V/div) after each adjustment is displayed on the channel icon. For example,  means that the current vertical sensitivity of CH1 is 3.096 V/div.

The vertical sensitivity coefficient adjusts the vertical sensitivity of the analog channel in steps of 1-2-5 (the probe attenuation coefficient is 1X), and the vertical sensitivity range of 1:1 probe is 1mV/div-10V/div (optionally minimum at 500uV/div).

### 5.3 Adjust Vertical Position

**The method of adjusting vertical position is as follows:**

- 1) Coarse adjustment: In the waveform display area, hold the waveform and put one finger to slide up and down for changing the vertical position of the waveform.
- 2) Fine adjustment: Click the fine adjustment button in the lower left corner of the screen to fine adjust the vertical position of the waveform for the current channel.

### 5.4 Open Channel Menu

Right swipe the channel icon to open the desired channel menu.

The channel menu is shown in Figure 5-6. Channel waveform inversion, channel bandwidth limit, probe type, probe attenuation factor, channel coupling mode, vertical expansion reference, channel label and channel on/off can be set in the vertical menu.



Figure 5-6 Channel menu

### 5.4.1 Set Channel Coupling

Tap the icon under “Coupling Mode” and select “DC”, “AC” and “GND” channel coupling modes in the pop-up box.

**DC:** DC coupling. Both the DC component and the AC component of the measured signal can pass, and can be used to view waveforms as low as 0 Hz without large DC offset.

**AC:** AC coupling. Measured DC signal is blocked, and only the AC component can be allowed to pass, and used to view waveforms with large DC offsets.

**GND:** Internal input ground, disconnecting from external input.

The oscilloscope is connected to the square wave signal with a frequency of 1KHz, an amplitude of 2V and an offset of 1V. The waveforms of the channel couplings of DC, AC, and GND are shown in Figures 5-7, 5-8, and 5-9.

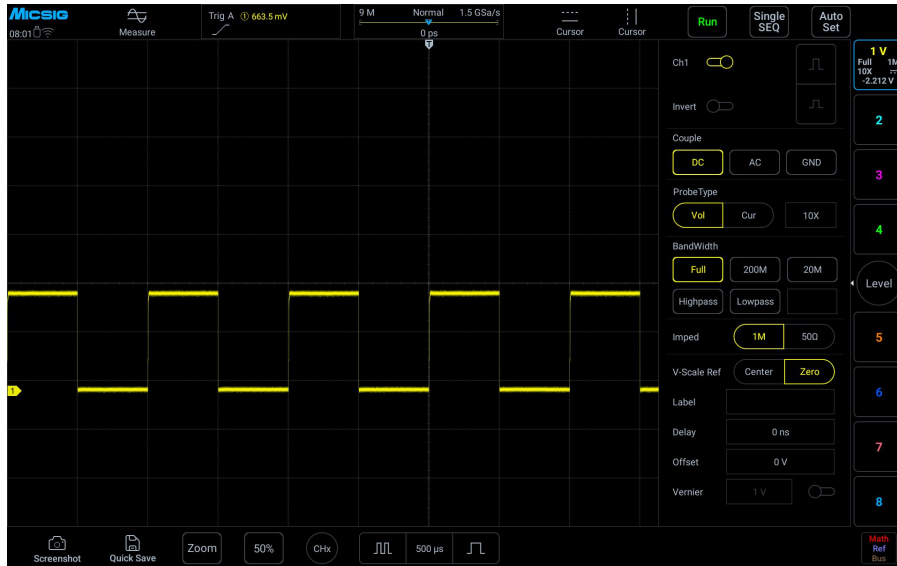


Figure 5-7 DC Coupling

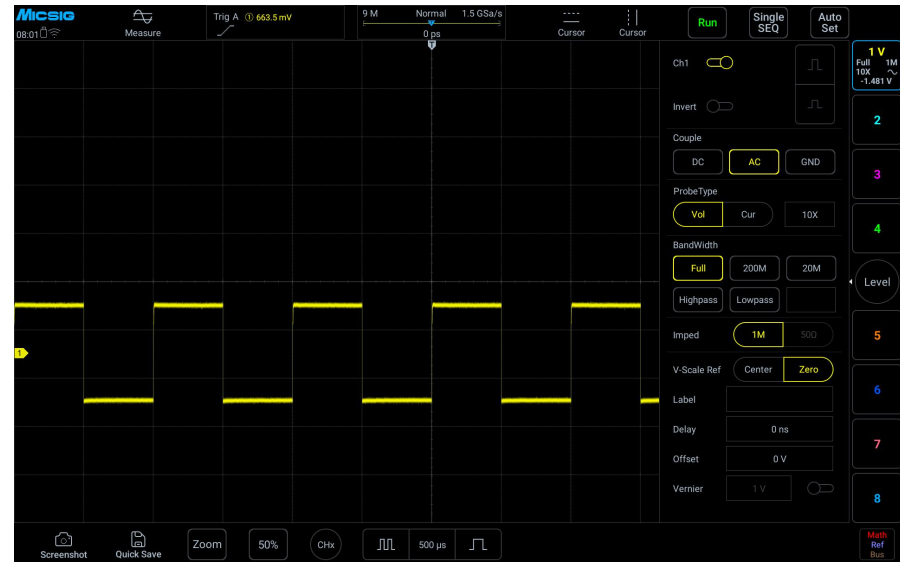


Figure 5-8 AC Coupling



Figure 5-9 GND Coupling

**Note:** This setting is only valid for the current channel. To switch from the current channel, just tap the channel icon, channel indicator icon or horizontal position pointed by the channel indicator icon for direct switching. You do not need to exit the menu.

## 5.4.2 Set Bandwidth Limit


Open the channel menu, find the “Bandwidth” selection box in the channel menu, set bandwidth limit, high-pass filtering and low-pass filtering as needed.

**Full Bandwidth:** Allows signals of all frequencies to pass.

**200 MHz Bandwidth:** Only signals below 200 MHz can pass through; frequencies above 200 MHz are effectively rejected.

**20M Bandwidth:** Only signals with frequencies below 20MHz are allowed to pass, and signals above 20MHz are effectively attenuated.

**High Pass:** Only signals above the lower limit of the currently set frequency are allowed to pass.

Select high pass, tap the frequency box , open the frequency setting interface, tap “MHz” and “KHz” to select the frequency scale, drag or tap the slide bar for coarse adjustment of the maximum frequency allowed to pass, tap “+”, “-” buttons to precisely adjust the frequency.

**Low pass:** Only signals below the currently set frequency upper limit are allowed to pass. (with the settings same as High Pass)

The difference in bandwidth limitation can be visualized by the waveform. The full bandwidth is shown in Figure 5-10, the 200M bandwidth is shown in Figure 5-11, the 20M bandwidth is shown in Figure 5-12, the high pass is shown in Figure 5-13, and the low pass is shown in Figure 5-14.

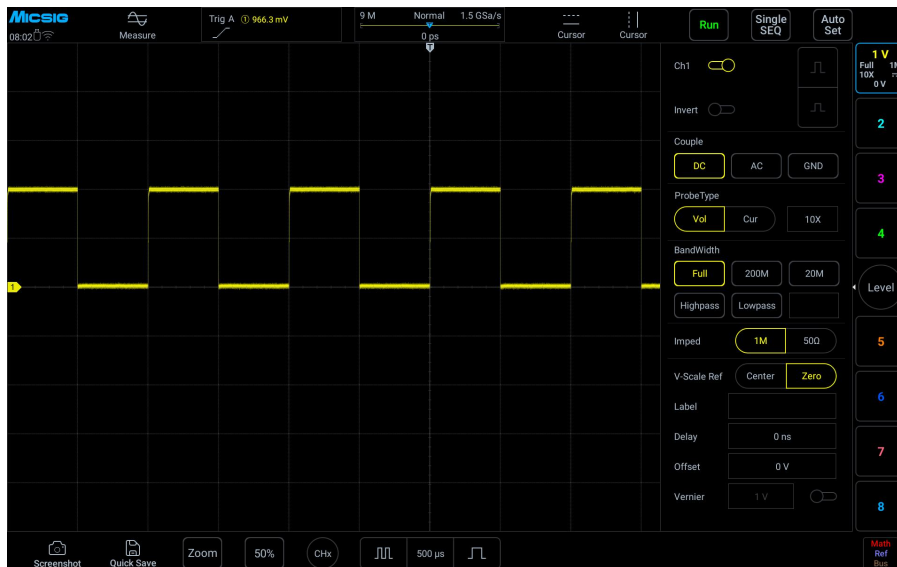


Figure 5-10 Full Bandwidth

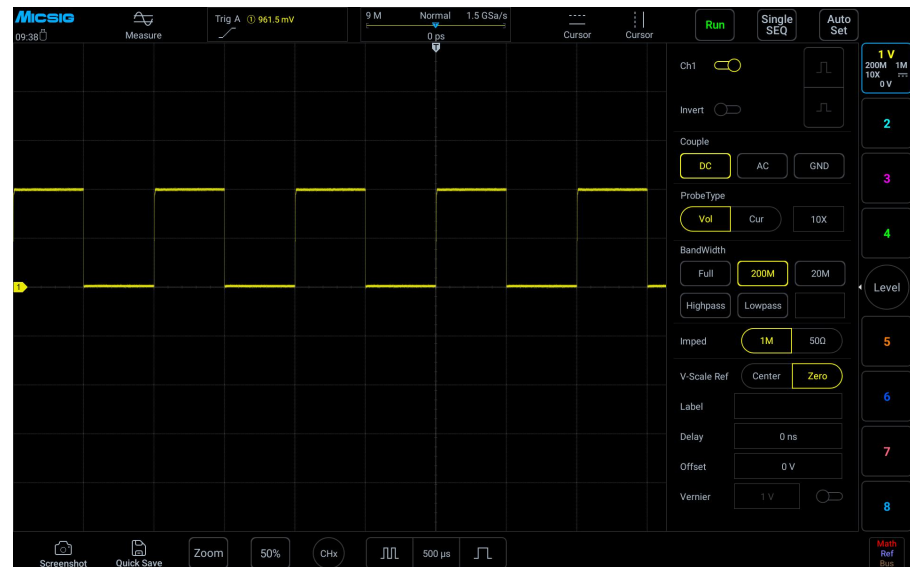


Figure 5-11 200M Bandwidth

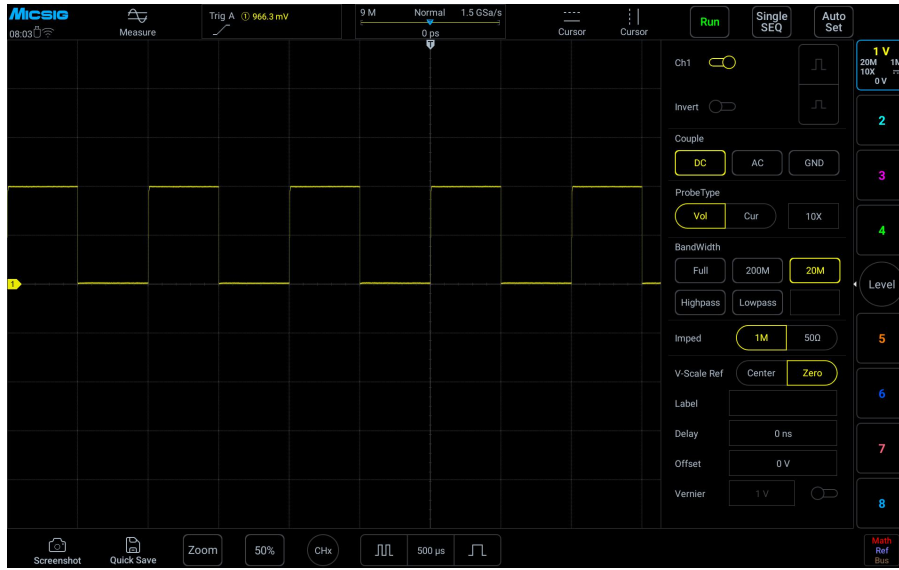


Figure 5-12 20M Bandwidth

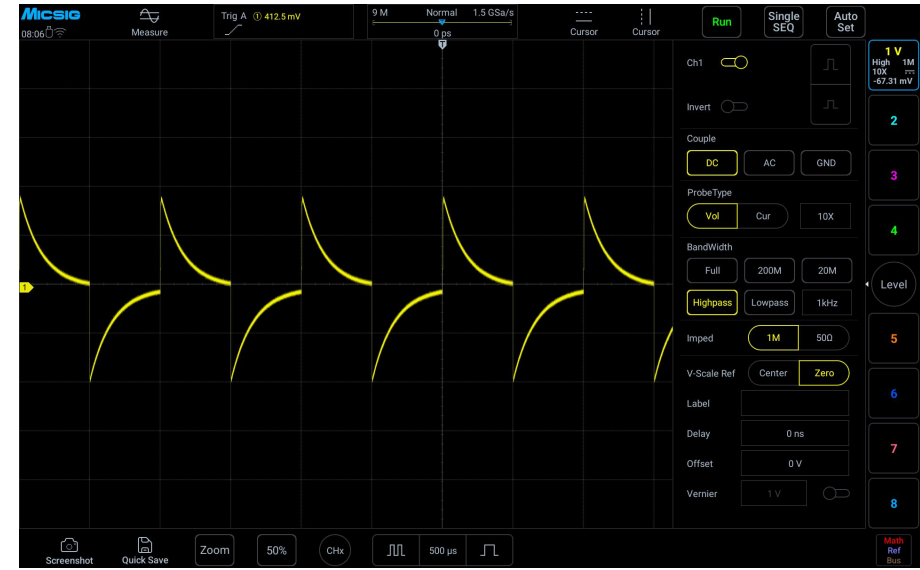


Figure 5-13 High Pass

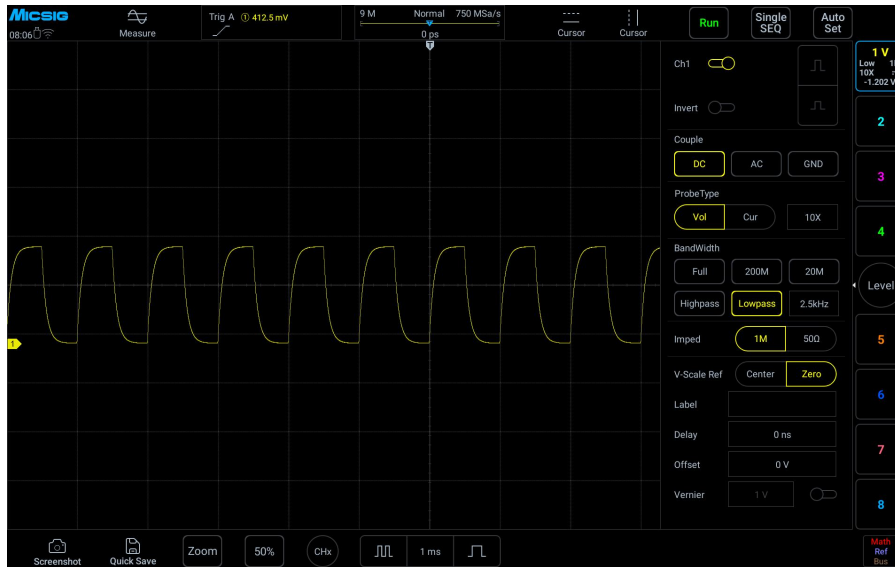


Figure 5-14 Low Pass

### 5.4.3 Waveform Inversion

After selecting “Invert”, the voltage value of the displayed waveform is inverted. Inversion affects the way the channel is displayed. When using a basic trigger, you need to adjust the trigger level to keep the waveform stable.

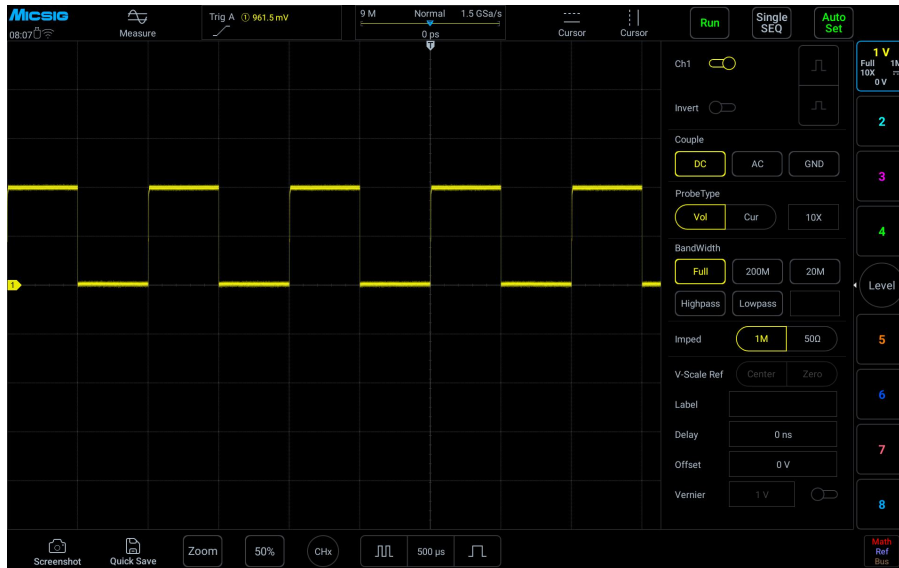


Figure 5-15 Before Inversion

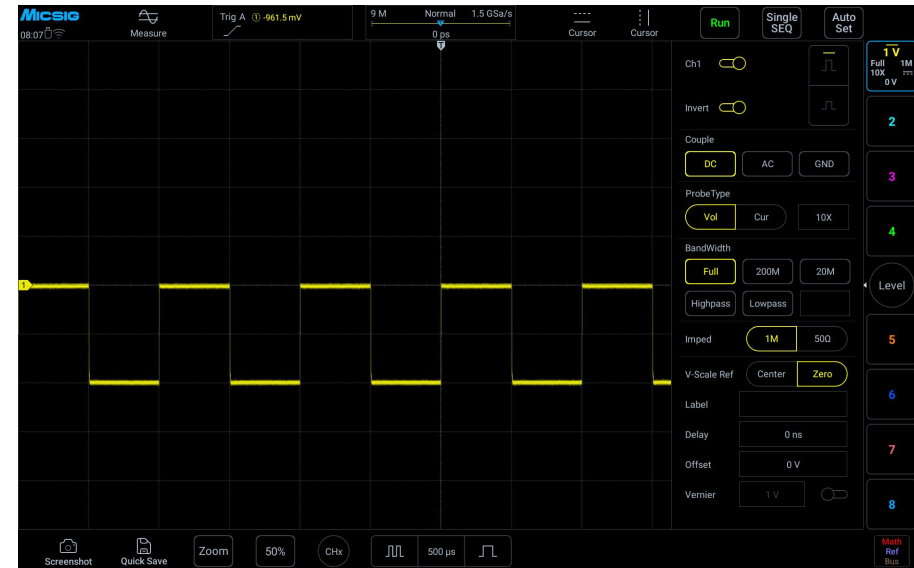


Figure 5-16 After Inversion

### 5.4.4 Set Probe Type

Probe types are divided into voltage probe and current probe.

#### Probe type adjustment steps:

Open the channel menu, find the “Probe Type” checkbox  in the channel menu, then select:

- Vol - corresponding the voltage probe.

- Cur - corresponding the current probe.

### 5.4.5 Set Probe Attenuation Ratio

When measuring with a probe, correct measurement results can only be obtained by setting the correct probe attenuation ratio. In order to match the attenuation ratio of the actual probe, the channel attenuation ratio needs to be adjusted accordingly under the channel menu. Whenever the attenuation ratio of the probe is changed, the corresponding attenuation ratio needs to be set in the channel menu to ensure the accuracy of the waveform amplitude and measurement results displayed by the oscilloscope. In addition to some common channel attenuation ratios, the MHO series also supports custom channel attenuation settings, which can be set from 1mX to 999kX.

Probe attenuation ratio and menu attenuation ratio are shown in the table below:

Probe attenuation ratio		Probe attenuation ratio		Probe attenuation ratio		Probe attenuation ratio	
Menu attenuation ratio		Menu attenuation ratio		Menu attenuation ratio		Menu attenuation ratio	
0.001:1	1mx	0.1:1	100mx	10:1	10x	1000:1	1kx
0.002:1	2mx	0.2:1	200mx	20:1	20x	2000:1	2kx
0.005:1	5mx	0.5:1	500mx	50:1	50x	5000:1	5kx
0.01:1	10mx	1:1	1x	100:1	100x	10000:1	10kx
0.02:1	20mx	2:1	2x	200:1	200x		
0.05:1	50mx	5:1	5x	500:1	500x		

Table 5-1 Probe Attenuation Ratio Correspondence Table

## 5.4.6 Vertical Expansion Reference

When using vertical expansion, click the center or zero point.

Center: Click the center, adjust the vertical scale, and the oscilloscope waveform is expanded with the screen center as reference

Zero point: Click the zero point, adjust the vertical scale, and the oscilloscope waveform is expanded with the waveform zero point as reference

## 5.4.7 Channel Label

Label can be added to each analog channel as needed, and the added label is displayed behind the channel indicator.

Channel labels can be selected: none, custom, preset (including ACK, ADDR, CAN\_H, CAN\_L, CLK, CS, DATA, H\_L, IN, L\_H, MISO, MOSI, RX, SCL, SDA, SS, TX, OUT) .

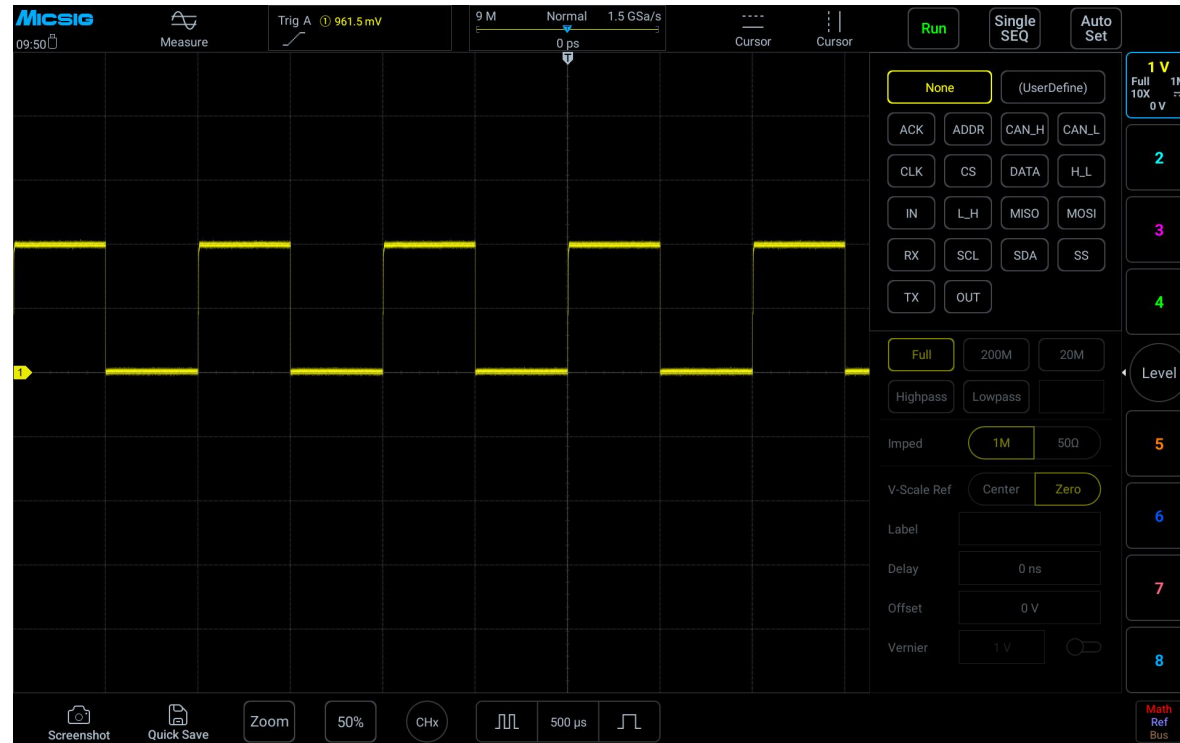


Figure 5-17 Label

Note: Customization supports up to 32 characters input.

### 5.4.8 Channel input impedance

Select the appropriate impedance according to the actual test matching cable or probe. You can choose "1M $\Omega$ " or "50 $\Omega$ ". The default input impedance is 1M $\Omega$ .

1M $\Omega$  - also known as high impedance, matches most passive probes and can minimize the loading effect of the oscilloscope on the device under test.

50 $\Omega$ ——When measuring high frequencies, 50 $\Omega$  cables or active probes are commonly used, and 50 $\Omega$  impedance matching is required.

Choosing an appropriate impedance match can minimize reflections along the signal path, making measurements more accurate. Please see Figure 5-17 for input impedance setting.

Note: When switching the channel input impedance, you need to pay attention to the input voltage not exceeding the allowable voltage; under 50 $\Omega$  impedance, the maximum input voltage of the analog input is 5V<sub>rms</sub>; in order to obtain channel input protection, in the shutdown state, the oscilloscope input impedance defaults to 1M $\Omega$ .



Figure 5-18 Channel input impedance

### 5.4.9 Delay and offset

**Delay:** By adjusting the channel delay, you can perform phase difference correction on each channel to compensate for the signal phase difference between different probes. The setting range is 1ps–100ns.

**Offset:** Adjusting the offset can change the channel offset, that is, the offset of the waveform relative to the zero point. The setting of the offset range is related to the current channel attenuation ratio. The settable range under 1X is 1pV – 150V.

### 5.4.10 Fine scaling

MHO series oscilloscopes provide a fine vertical scale setting function, which allows the vertical scale to be customized without being limited by 1, 2, 5, and 10 steps. After the fine scale is turned on, adjusting the vertical scaling becomes fine adjustment.



Figure 5-19 Fine scale setting

## Chapter 6 Trigger System

This chapter contains the detailed information of the trigger system of the oscilloscope. You are recommended to read this chapter carefully to understand the set functions and operation of the trigger system of the MHO series oscilloscope.

- Trigger and trigger adjustment
- Edge trigger
- Pulse width trigger
- Logic trigger
- Nth edge trigger
- Runt trigger
- Slope trigger
- Time out trigger
- Video trigger
- Serial bus trigger

## 6.1 Trigger and Trigger Adjustment

### What is Trigger?

The oscilloscope can capture a waveform only when it meets a preset condition first. This action of capturing the waveform according to the condition is **Trigger**. The so-called capture waveform is that the oscilloscope grabs a signal and displays it. **If it is not triggered, there is no waveform display.**

### What can Trigger be used for?

- (1) The oscilloscope can stably display a periodic signal.

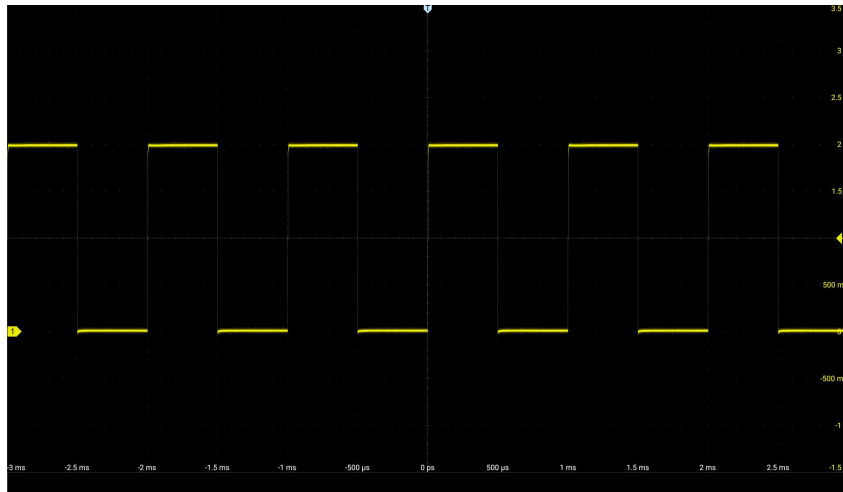


Figure 6-1 Stably Displayed Periodic Signal

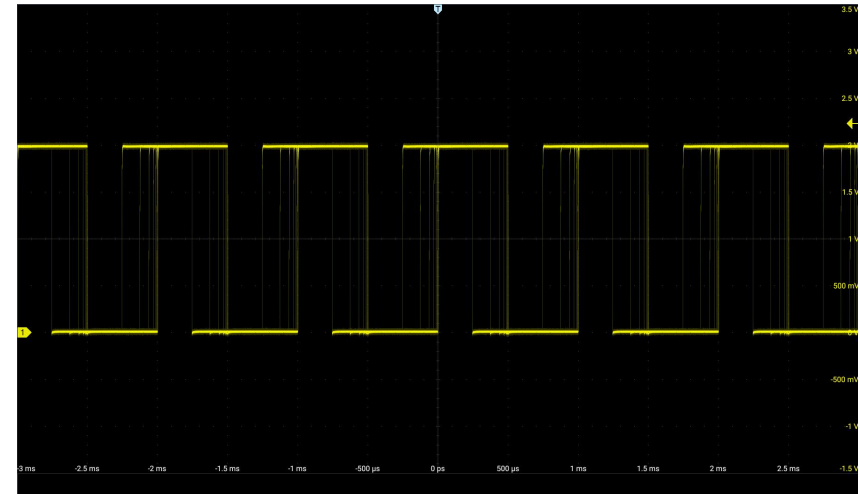


Figure 6-2 Non-Stably Displayed Periodic Signal

- (2) Grab the segment you want to observe from a fast and complex signal

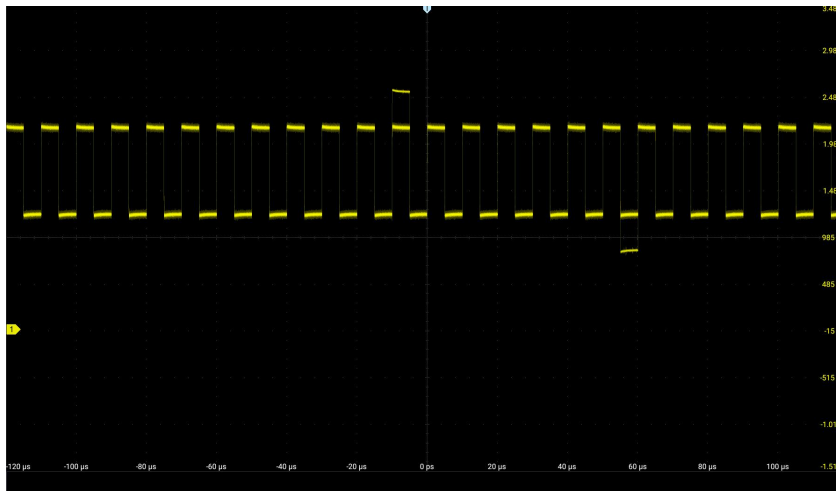


Figure 6-3 Abnormal Signal in Periodic Signals

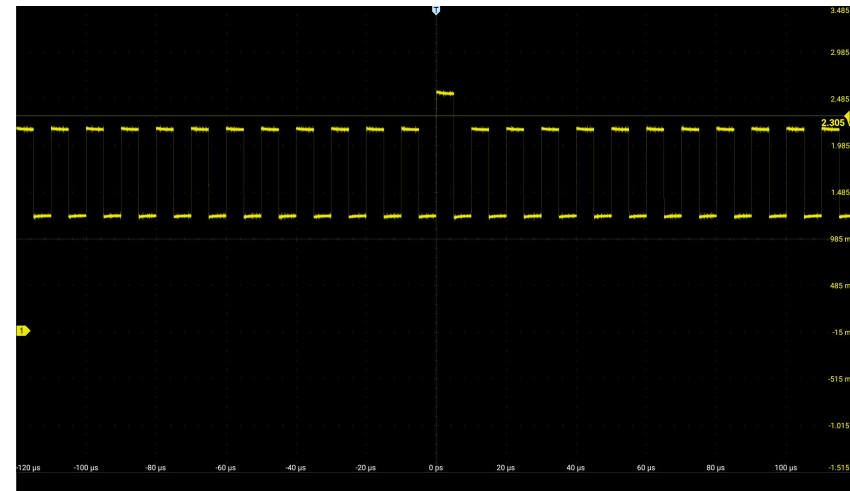


Figure 6-4 Abnormal Signal Captured by Setting Trigger Level

## What is Forced Trigger?

When the oscilloscope does not meet the trigger conditions, the trigger generated by the oscilloscope artificially or automatically is a forced trigger. Forced triggering means that regardless of whether the conditions are met, the oscilloscope only captures a segment of the signal and displays it. Automatic forced triggering is set in the menu. In the trigger settings, there is generally a trigger mode option, which can be set to "Normal" or "Auto" trigger.

Normal triggering is triggering according to set conditions. Automatic triggering is a type of forced triggering. When the oscilloscope does not trigger for a certain period of time, the oscilloscope will be forced to trigger.

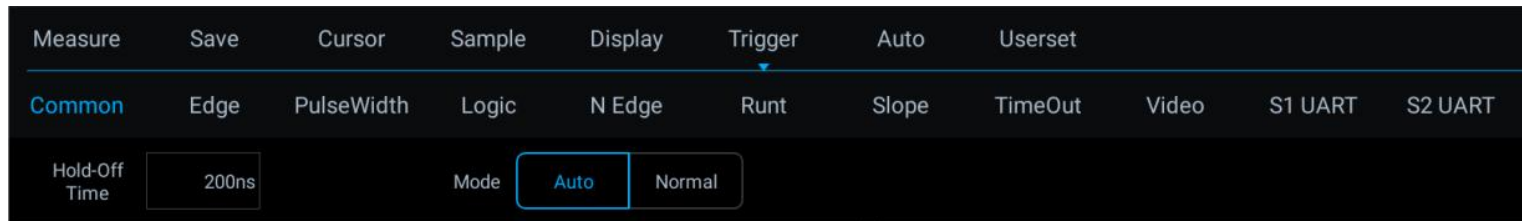


Figure 6-5 Oscilloscope Trigger Mode Setting

If a signal feature is not understood, the oscilloscope should be set as “**Auto**” mode, which can ensure that the oscilloscope can also display the waveform when other trigger settings are not correct. Although the waveform is not necessarily stable, it can provide the intuitive judgment for our further adjustment of the oscilloscope. The signal in Figure 6-5 is the result of forced trigger in “**Auto**” mode.

When we set a specific trigger condition for a specific signal, especially when the time interval for satisfying the trigger condition is long, we need to set the trigger mode to “**Normal**” so as to prevent the oscilloscope from automatic forced trigger.

Figure 6-6 shows a conceptual demonstration of the acquisition memory. In order to understand the trigger event, the acquisition memory can be divided into pre-trigger and post-trigger buffers. The position of the trigger event in the acquisition memory is defined by the time reference point and trigger position (horizontal delay) settings.

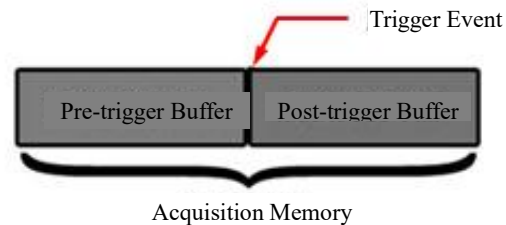


Figure 6-6 Conceptual Demonstration of Acquisition Memory

All events displayed to the left of the trigger point  $\nabla$  occur before trigger. These events are called pre-trigger messages that show events before the trigger point. All events to the right of the trigger point is called post-trigger messages. The number of delay ranges available (pre-trigger and post-trigger messages) depends on the selected time base and memory depth.

### **Adjust trigger position (horizontal delay)**

Fingers swipe left and right in the waveform display area, the trigger point  $\boxplus$  will move horizontally, the horizontal delay time changes, and the delay time is displayed at the top center of the screen, that is, the distance between the trigger point  $\boxplus$  and the center line  $\blacktriangledown$  of the waveform display area is displayed.

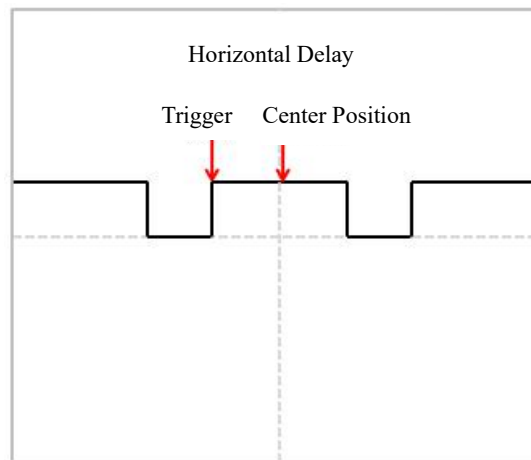



Figure 6-7 Horizontal Delay

When the trigger point  $\boxplus$  is located on the left side to the center line  $\blacktriangledown$  of the waveform display area, the delay time is displayed as a positive value; When the trigger point  $\boxplus$  is located on the right side to the time reference point  $\blacktriangledown$ , and the delay time is displayed as a negative value; the trigger point  $\boxplus$  overlaps with the center line  $\blacktriangledown$  of the waveform display area, and the delay time is zero.

## Trigger level

Trigger level is the signal voltage corresponding to the set trigger point. When the trigger level is changed, a horizontal line will appear temporarily on the screen to tell you the level position (the specific value of the trigger level is displayed in the upper right corner of the screen), then the horizontal line disappears, the trigger level is indicated by a small arrow  and the indication icon can be dragged to adjust the trigger level value. The trigger level is shown in Figure 6-8 (the arrow indicates the trigger level line).

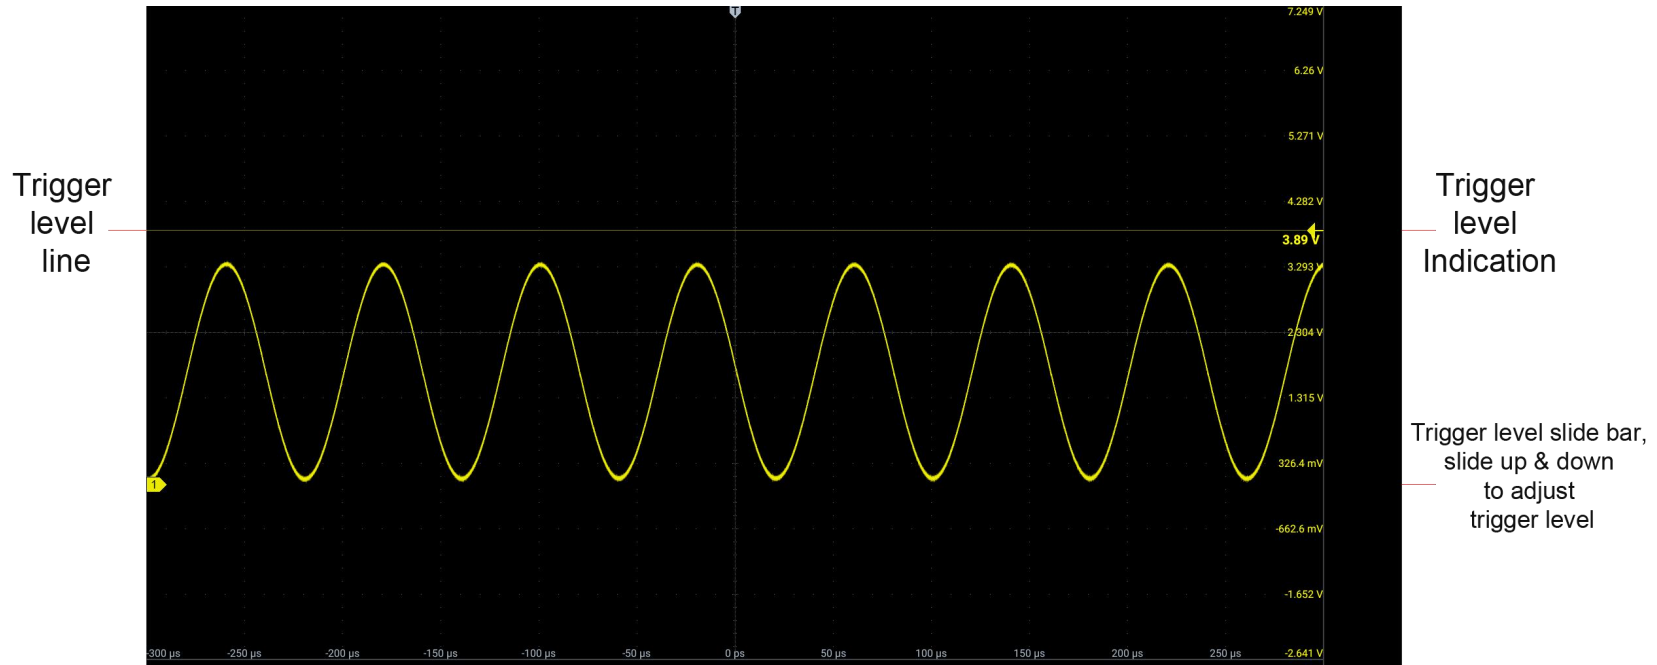


Figure 6-8 Trigger Level

### Adjust trigger level

The trigger level can be coarsely adjusted and finely adjusted.

Coarse adjustment: Slide up and down in the trigger level adjustment area.

Fine adjustment: Tap the fine adjustment button in the lower left corner of the screen for fine adjustment of the trigger level.

### Trigger setting shortcut

Left swipe from trigger level slide bar to open trigger setting shortcut, which includes trigger source, trigger mode etc.

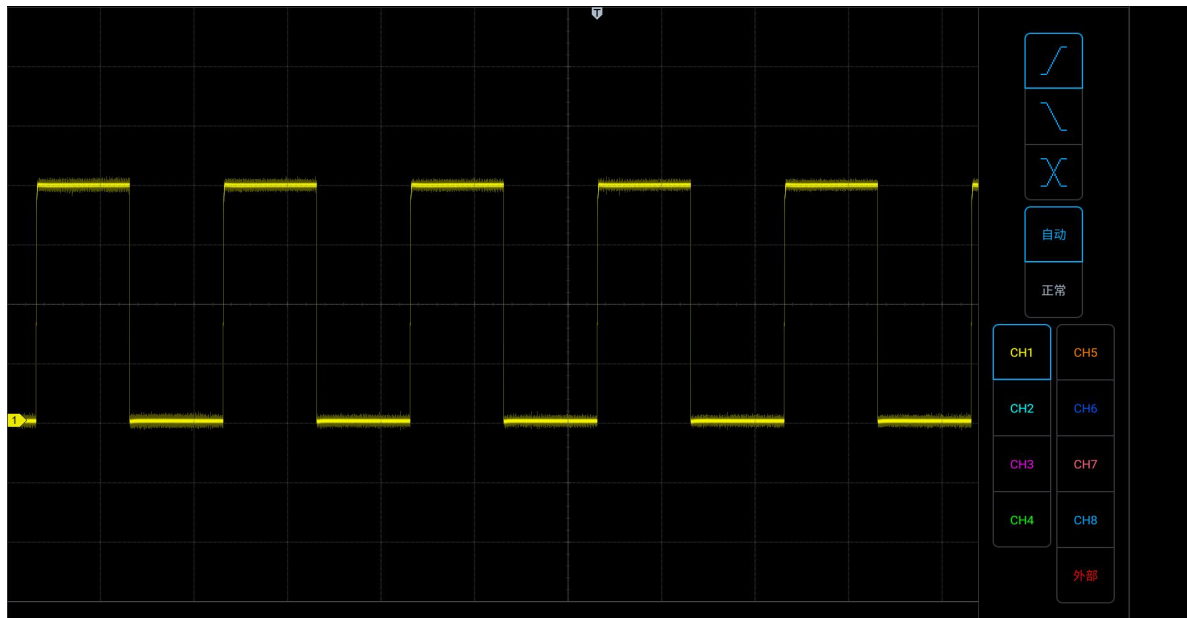


Figure 6-9 Trigger setting shortcut

## Set trigger hold-off time

The trigger hold-off time can set up the waiting time of the oscilloscope after the trigger and before the trigger circuit is reconnected. During hold-off time, the oscilloscope does not re-trigger until the end of the hold-off time, and the hold-off time can be used to stably trigger complex waveforms. The trigger hold-off time ranges from 200ns~10s.

The hold-off may be used to trigger on repetitive waveforms with multiple edges (or other events) between waveform repetitions. If the shortest time between triggers is known, the hold-off may also be used to trigger on the first edge.

For example, to obtain stable trigger on the repetitive pulse trigger shown below, set the hold-off time to a value  $>200\text{ns}$  but  $<600\text{ns}$ .

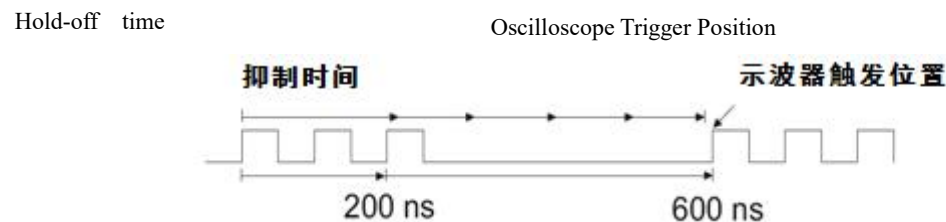


Figure 6-10 Trigger Hold-Off Time

**Set trigger hold-off time:**

- 1) Tap “Trigger” on the main menu to open the trigger menu. Under “Common”, tap the box after “Rejection Time” to open the hold-off time adjustment interface. The trigger time is displayed on the upper left, the fine adjustment time scale is displayed on the upper right, and the coarse time scale is displayed below, as shown in Figure 6-11.

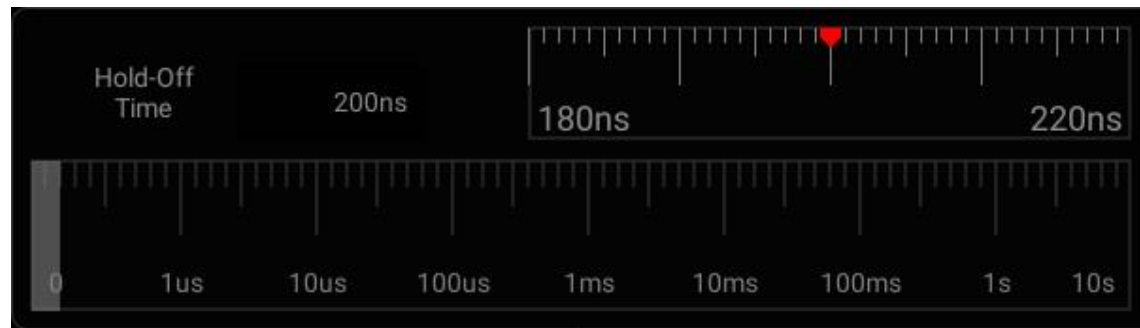




Figure 6-11 Trigger Hold-Off Time Set Interface

- 2) When adjusting the time, drag or tap the coarse adjustment scale for coarse adjustment, and then drag the fine adjustment scale for fine adjustment of the hold-off time.


**Trigger hold-off operation prompt**

It is typically used for complex waveforms. The correct rejection setting is usually slightly smaller than one repetition of the waveform. Setting the hold-off time to this time can become the only trigger point for the repetitive waveform.




Changing the time base setting will not affect the trigger hold-off time.

- Using Zoom function, you can tap “Run/Stop”  to stop, then horizontally move and zoom the data to find the position where the waveform is repeated. Use the cursor to measure this time and then set the hold-off time.
- Use “SingleSEQ”  button for single acquisition

Usually when performing a single acquisition, you must initiate some operations on the measured equipment, and the oscilloscope is not desired to trigger automatically before these operations. The trigger condition indicator

 is displayed in the upper left corner of the screen before starting operations in the circuit (this means the pre-trigger buffer is filled).

## 6.2 Edge Trigger

When the edge of trigger signal reaches a certain trigger level, the set signal is triggered and generated. Trigger occurs on either edge of the rising edge (indicating icon  at the top of the screen), falling edge () or dual edge (), and the trigger level can be set to change the vertical position of the trigger point on the trigger edge, namely the intersection point of the trigger level line and the signal edge. The stable waveform can be obtained by correctly setting the edge trigger coupling mode. Edge trigger menu is shown in the table below:

Trigger Option	Setting	Description
Trigger Source	CH1	Set CH1 as trigger signal source
	CH2	Set CH2 as trigger signal source
	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
	CH5	Set CH5 as trigger signal source

	CH6	Set CH6 as trigger signal source
	CH7	Set CH7 as trigger signal source
	CH8	Set CH8 as trigger signal source
	External trigger	Set the external signal as the trigger signal source. The trigger signal will be connected to the oscilloscope through the external trigger input terminal [TRIG IN].
<b>Slope</b>	Rising edge	Set signal trigger on the rising edge
	Falling edge	Set signal trigger on the falling edge
	Dual edge	Set signal trigger on either rising edge or falling edge
<b>Coupling</b>	DC	AC and DC components getting through trigger signals
	AC	Filter out the DC component of trigger signals
	HF rejection	Suppress signals above 50kHz in trigger signals
	LF rejection	Suppresses signals below 50kHz in trigger signals

	Noise rejection	Low-sensitivity DC coupling to suppress high-frequency noise in trigger signals
--	-----------------	---

**Set CH1 rising edge trigger and coupling as DC with operation steps as follows:**

- 1) Tap “Trigger” on the main menu to open the trigger menu, select edge trigger in the trigger type, and set edge trigger as follows, as shown in Figure 6-12:
  - Trigger source: CH1;
  - Trigger coupling mode: DC;
  - Trigger edge: rise.

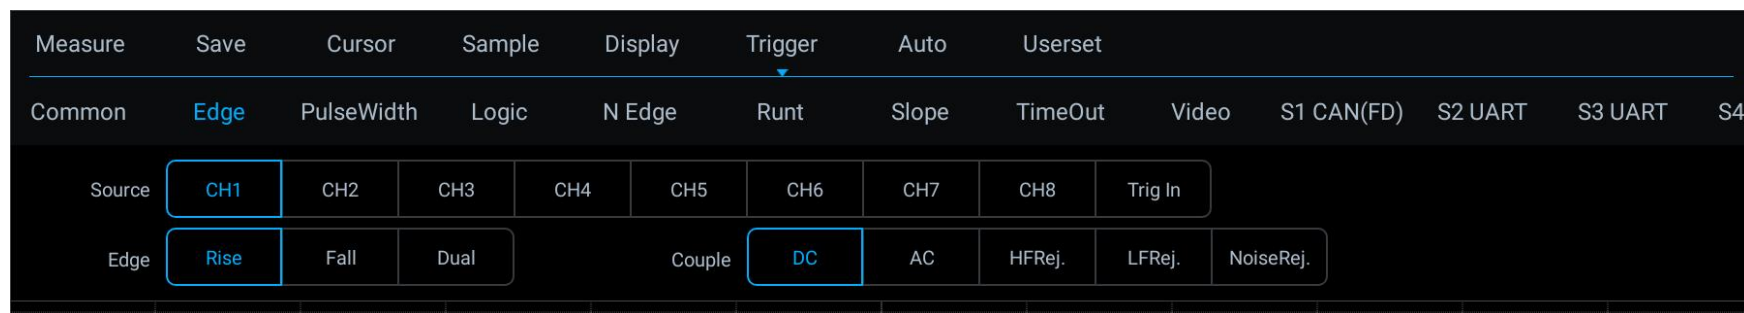


Figure 6-12 Edge Trigger Setting Menu

- 2) Adjust the trigger level to ensure that the waveform can be triggered stably, for example, the trigger level is set to 1V.

### Trigger coupling description

When the edge trigger setup menu is opened, the trigger coupling option is displayed below the menu. Trigger coupling includes DC, AC, HFRej., LFRej., NoiseRej, see Figure 6-13:




Figure 6-13 Trigger Coupling Menu

- 1) DC coupling - allows DC and AC signals to enter the trigger path.
- 2) AC coupling - removes any DC offset voltage from the trigger waveform.

When the waveform has a large DC offset, stable edge triggering can be achieved using AC coupling.


- 3) HFRej. (High Frequency Rejection Coupling) - removes high frequency components from the trigger waveform, using high frequency rejection to remove high frequency noises or noises from fast system clocks, from trigger paths such as AM or FM radio stations.
  
- 4) LFRej. (Low Frequency Rejection Coupling) - removes any unnecessary low frequency components from the trigger waveform, for example, power line frequencies that can interfere with correct trigger.

When there is low frequency noise in the waveform, stable edge triggering can be obtained using LF rejection coupling.

- 5) NoiseRej. (Noise Rejection Coupling) - Noise rejection can add extra hysteresis to the trigger circuit. By increasing the trigger hysteresis band, the possibility of noise triggering can be reduced. But it also reduces the trigger sensitivity, so triggering the oscilloscope requires a slightly larger signal.

**Note:** Trigger coupling is different from channel coupling.

### 6.3 Pulse Width Trigger

The trigger happens when the trigger signal pulse width (8ns~10s, the trigger type indication icon at the top of the screen is ) reaches the set condition and the signal voltage reaches the set trigger level. Pulse width trigger menu is shown in the following table:

Trigger Option	Setting	Description
<b>Trigger Source</b>	CH1	Set CH1 as trigger signal source
	CH2	Set CH2 as trigger signal source
	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
	CH5	Set CH5 as trigger signal source
	CH6	Set CH6 as trigger signal source
	CH7	Set CH7 as trigger signal source

Trigger Option	Setting	Description
	CH8	Set CH8 as trigger signal source
<b>Polarity</b>	Positive	Trigger on setting the positive pulse width of signals
	Negative	Trigger on setting the negative pulse width of signals
<b>Trigger Condition</b>	<T	Trigger when the signal pulse width is smaller than pulse width T
	>T	Trigger when the signal pulse width is greater than pulse width T
	=T	Trigger when the signal pulse width is equal to pulse width T
	T1 <> T2	Trigger when the signal pulse width is within the pulse width range [T1,T2]
<b>Trigger Pulse Width</b>	8ns~10s	Set the trigger pulse width

**Notes:** Conditions of greater than, smaller than, equal to or not equal to indicating that the error is 6%.

Trigger steps of positive polarity pulse width: (taking CH1 as an example)

- 1) Tap “Trigger” on the main menu to open the trigger menu, select the pulse width trigger in the trigger type, and set the pulse width trigger as follows, as shown in Figure 6-14:
  - Trigger source: CH1;
  - Trigger pulse polarity: positive;
  - Trigger level: 1.98V
  - Trigger condition and pulse width time: “greater than”, the adjustment time is 1 $\mu$ s.



Figure 6-14 Pulse Width Trigger Setting Menu

## Pulse width trigger setting description:

### 1) Pulse polarity selection

The selected pulse polarity icon is displayed in the upper right corner of the display screen. The positive pulse is higher than current trigger level (CH1 positive pulse indication icon  $\square \text{ 1.00V}$ ), and the negative pulse is

lower than current trigger level (CH1 negative pulse indication icon  $\square \sqcup$  ① 1.00V). When triggered on positive polarity pulse, if the restrictions are true, the trigger will happen on the high-to-low transition of the pulse; when triggered on negative polarity pulse, if the restrictions are true, the trigger will happen on the low-to-high transition. (Figure 6-15 Negative Pulse Level Flip)



Figure 6-15 Negative Polarity Pulse Level Flip

## 2) Trigger condition and pulse width time setting

Time restrictions that can set in the trigger condition:  $<$ ,  $>$ ,  $=$ ,  $<>$ .

- Smaller than the time value ( $<$ )

For example, for positive pulse, if it is set as  $T < 80\text{ns}$ , the trigger will happen stably only when the pulse width is smaller than 80ns (Figure 6-16 Trigger Time  $T < 80\text{ns}$ ).

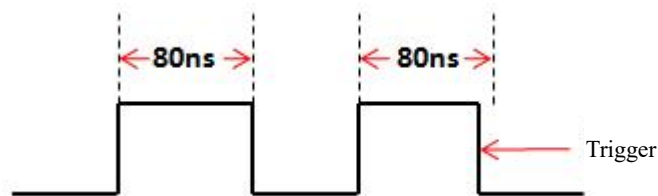
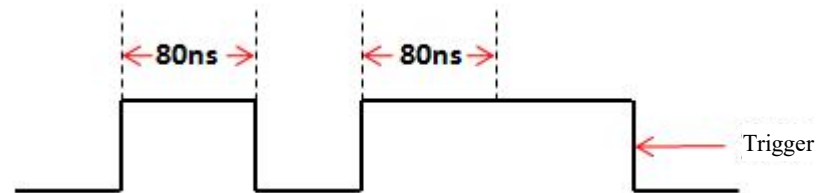


Figure 6-16 Trigger Time  $T < 80\text{ns}$

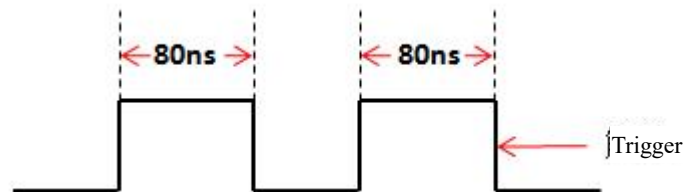
- Greater than the time value ( $>$ )

For example, for positive pulse, if it is set as  $T > 80\text{ns}$ , the trigger will happen stably only when the pulse width is greater than 80ns (Figure 6-17 Trigger Time  $T > 80\text{ns}$ ).

Figure 6-17 Trigger Time  $T > 80\text{ns}$ 

- Equal to the time value (=)

For example, for positive pulse, if it is set as  $T=80\text{ns}$ , the trigger will happen stably only when the pulse width is equal to  $80\text{ns}$  (Figure 6-18 Trigger Time  $T=80\text{ns}$ ).

Figure 6-18 Trigger Time  $T=80\text{ns}$ 

- Not equal to the time value ( $<>$ )

For example, for positive pulse, if it is set as  $T \neq 80\text{ns}$ , the trigger will happen stably only when the pulse width is not equal to 80ns (Figure 6-19 Trigger Time  $T \neq 80\text{ns}$ ).

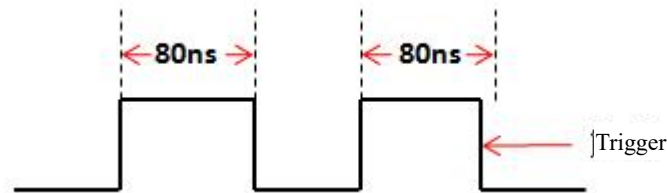


Figure 6-19 Trigger Time  $T \neq 80\text{ns}$

The trigger pulse width time can be set as 8ns~10s.

Tap the pulse width time setting box  to pop up the time adjustment interface (as shown in Figure 6-20), and adjust the pulse width time. Adjust the pulse width time by adjusting or dragging the time scale.

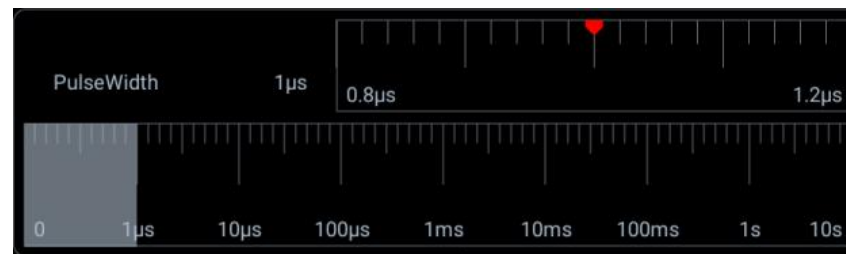


Figure 6-20 Pulse Width Time Adjustment Interface

## 6.4 Logic Trigger

Trigger happens when the level between analog channels satisfies a certain logical operation (AND, OR, NAND, NOR) and the signal voltage reaches the set trigger level and the trigger logic width (8ns~10s). Logic trigger menu descriptions are shown in the table below:

Trigger Option	Setting		Description
Trigger Source	CH1	High	Set CH1 as high
		Low	Set CH1 as low
		None	Set CH1 as none
	CH2	High	Set CH2 as high
		Low	Set CH2 as low
		None	Set CH2 as none
	CH3	High	Set CH3 as high

		Low	Set CH3 as low
		None	Set CH3 as none
	CH4	High	Set CH4 as high
		Low	Set CH4 as low
		None	Set CH4 as none
	CH5	High	Set CH5 as high
		Low	Set CH5 as low
		None	Set CH5 as none
	CH6	High	Set CH6 as high
		Low	Set CH6 as low
		None	Set CH6 as none
	CH7	High	Set CH7 as high
		Low	Set CH7 as low

		None	Set CH7 as none
	CH8	High	Set CH8 as high
		Low	Set CH8 as low
		None	Set CH8 as none
<b>Trigger Logic</b>	AND		Select the logic of trigger source as “OR”
	OR		Select the logic of trigger source as “NAND”
	NAND		Select the logic of trigger source as “NOR”
	NOR		Trigger when the logic changes to true value
<b>Trigger Condition</b>	Change to true value		Trigger when the logic changes to false value
	Change to false value		If logic status for hold time as <, >, =, ≠T, then trigger
	<, >, =, T1<>T2		Set trigger logic time
<b>Logic Time</b>	8ns~10ns		Set the trigger logic time

**Notes:** Conditions of greater than, smaller than, equal to or not equal to indicating that the error is 6%.

Logic trigger operation steps between channels:

- 1) Tap “Trigger” on the main menu to open the trigger menu, select logic trigger in the trigger type, and set the logic trigger as follows, as shown in Figure 6-21:
  - Logic levels: CH1, CH3: High; CH2, CH4, CH5, CH6, CH7, CH8: High; (without reference to the channel of logic operation, the level selection is None to avoid interference to the logic operation);
  - Logic gate: AND;
  - Condition: <;
  - Logic time: 1us.

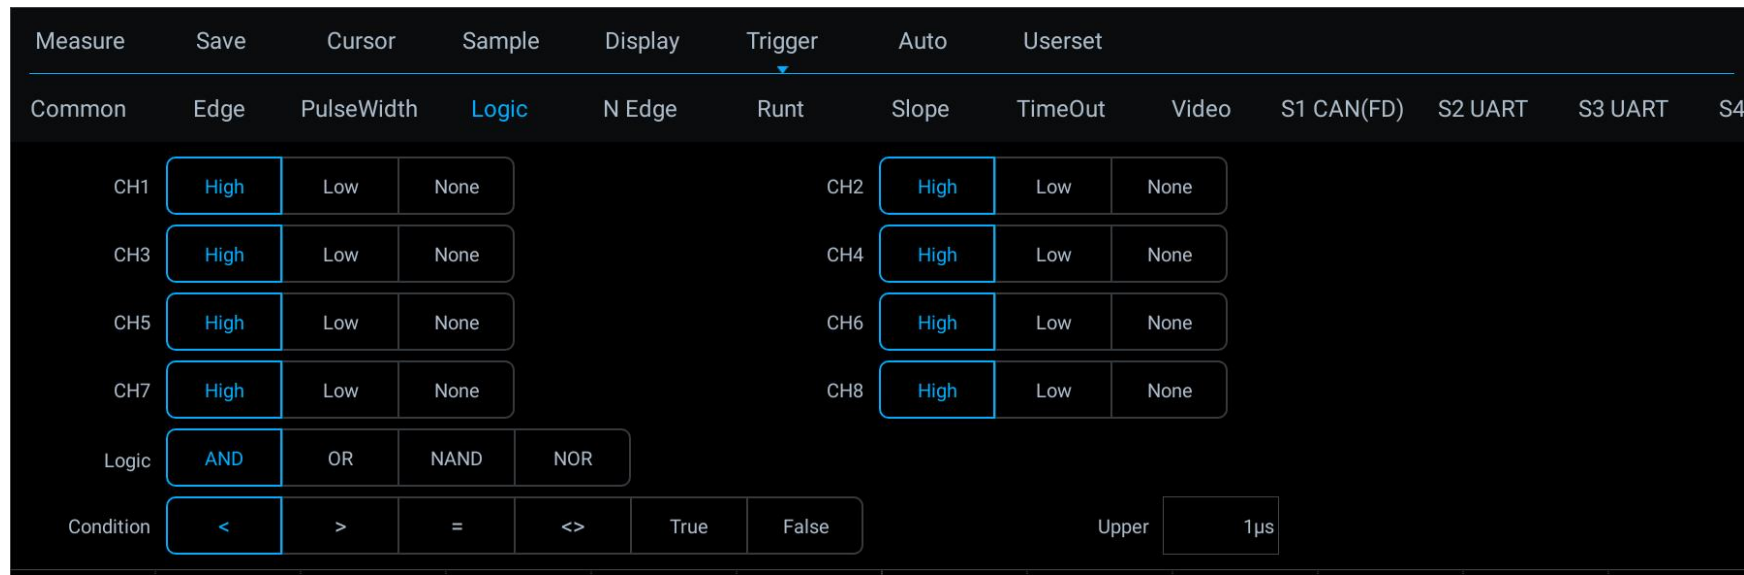


Figure 6-21 Logic Trigger Setting Menu

**Logic trigger setting description:****Logic level setting**

After trigger source, select High, Low and None for the channel. The corresponding trigger level value is displayed in the upper right corner of the display screen.

High: means a value higher than the current trigger level, and the icon indication is “0.0V”.

Low: means a value lower than the current trigger level, and the icon indication is “0.0V”.

None: This channel is invalid.

Switch the trigger level channel: Tap the trigger level slide bar arrow or use trigger setting shortcut

### **Logic conditions**

- 1) True: Trigger when the logic changes to true value
- 2) False: Trigger when the logic changes to false value



Figure 6-22 Trigger Level Adjustment

Trigger pulse width time can be set as 8ns~10s.

Tap the time setting box () to pop up the time adjustment interface and adjust the logic time. Please refer to the Pulse Width Adjustment section for details.

## 6.5 Nth Edge Trigger

When the trigger signal is triggered on the Nth edge after the specified idle time, it is Nth edge trigger. Menu descriptions of the Nth edge trigger are shown in the table below:

Trigger Option	Setting	Description
<b>Trigger Source</b>	CH1	Set CH1 as trigger signal source
	CH2	Set CH2 as trigger signal source
	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
	CH5	Set CH5 as trigger signal source
	CH6	Set CH6 as trigger signal source
	CH7	Set CH7 as trigger signal source
	CH8	Set CH8 as trigger signal source
<b>Time</b>	8ns~10s	Idle time

Trigger Option	Setting	Description
Edge	Rising edge	Set signal trigger on the rising edge
	Falling edge	Set signal trigger on the falling edge
Nth Edge	1~65535	Set trigger on Nth edge after idle time

**Set CH1 to trigger on the 5th rising edge after 500us. The steps are as follows:**

- 1) Tap “Trigger” on the main menu to open the trigger menu, select Nth edge trigger in the trigger type, and set the Nth edge trigger as follows, as shown in Figure 6-23:
  - Trigger source: CH1;
  - Time: 80us
  - Edge signal: rise;
  - Nth edge: 101



Figure 6-23 Nth Edge Trigger Menu

- 2) Adjust the trigger level to ensure that the waveform can be triggered stably, for example the trigger level is set to 1.64V.

## 6.6 Runt Trigger

By setting the high and low thresholds, trigger on a pulse that cross one threshold but fail to cross a second threshold. There are two types available: positive short pulse and negative short pulse.

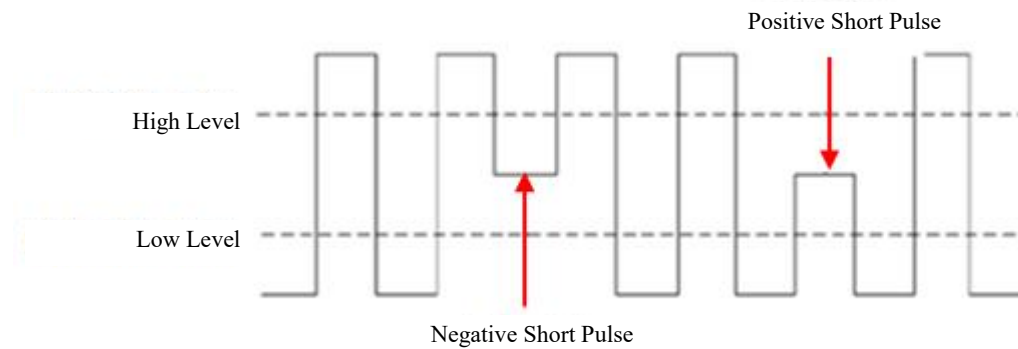


Figure 6-24 Runt Trigger

Runt trigger menu descriptions are shown in the table below:

Trigger Option	Setting	Description
Trigger Source	CH1	Set CH1 as trigger signal source

Trigger Option	Setting	Description
	CH2	Set CH2 as trigger signal source
	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
	CH5	Set CH5 as trigger signal source
	CH6	Set CH6 as trigger signal source
	CH7	Set CH7 as trigger signal source
	CH8	Set CH8 as trigger signal source
<b>Polarity</b>	Positive	Set signal to trigger on positive runt pulse
	Negative	Set signal to trigger on negative runt pulse
	Any	Set signal to trigger on either positive or negative runt pulse
<b>Trigger Condition</b>	<T	Trigger when the signal pulse width is smaller than pulse width T
	>T	Trigger when the signal pulse width is greater than pulse width T

<b>Trigger Option</b>	<b>Setting</b>	<b>Description</b>
	T1<>T2	Trigger when the signal pulse width is greater than lower limit T1 and smaller than upper limit T2
	None	No trigger restrictions for runt pulse trigger
<b>Trigger Pulse Width</b>	8ns~10s	Set the trigger pulse width



Figure 6-25 Runt Trigger Setting Menu

## 6.7 Slope Trigger

**Slope Trigger** means trigger when the waveform reaches a set time condition from one level to another.

Positive slope time: Time takes for the waveform to go from low to high.

Negative slope time: Time takes for the waveform to go from high to low.

As shown in Figure 6-26

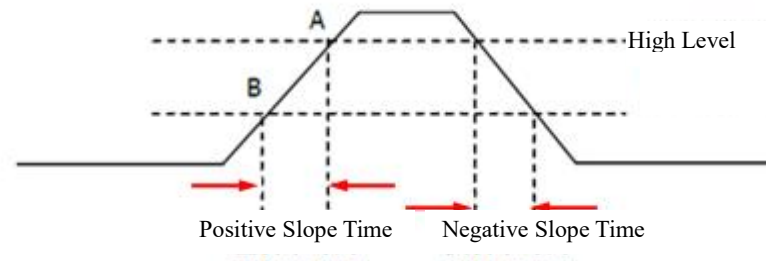



Figure 6-26 Positive/Negative Slope Time

When the trigger signal slope has the hold time (8ns~10s), the trigger type on the top of the screen is only the icon , and trigger happens when the set condition is reached. Slope trigger is suitable for observing sawtooth or triangular waves. The slope trigger menu descriptions are shown in the table below:

Trigger Option	Setting	Description
Trigger Source	CH1	Set CH1 as trigger signal source
	CH2	Set CH2 as trigger signal source
	CH3	Set CH3 as trigger signal source

Trigger Option	Setting	Description
	CH4	Set CH4 as trigger signal source
	CH5	Set CH5 as trigger signal source
	CH6	Set CH6 as trigger signal source
	CH7	Set CH7 as trigger signal source
	CH8	Set CH8 as trigger signal source
<b>Edge</b>	Rising	Set trigger on positive signal slope
	Falling	Set trigger on negative signal slope
	Any	Set trigger on detecting a signal slope change
<b>Trigger Condition</b>	<T	Trigger when the signal slope hold time is smaller than T
	>T	Trigger when the signal slope hold time is greater than T
	<>T	Trigger when the signal slope hold time is smaller than upper limit T1 and greater than lower limit T2

Trigger Option	Setting	Description
Time	8ns~10s	Set the trigger signal slope hold time

**Set CH1 slope status as rise and hold time less than 30us. The steps are as follows:**

- 1) Tap “Trigger” on the main menu to open the trigger menu, select the slope trigger in the trigger type, and set the slope trigger as follows, as shown in Figure 6-27:
  - Trigger source: CH1;
  - Edge: Rise;
  - Condition: Greater than
  - Slope hold time: 30us
- 2) Adjust trigger level, adjust High or Low trigger level, click arrow at both ends of the chute Switch the trigger level between High and Low.



Figure 6-27 Slope Trigger Setting Menu

The slope hold time can be set as 8ns~10s.

**Note:** A stable trigger waveform can only be obtained by selecting the channel to which signals are connected as trigger source.

## 6.8 Timeout Trigger

Timeout trigger happens when the time from the intersection of signal and trigger level and above (or below) the trigger level reaches the set time, as shown in Figure 6-28:

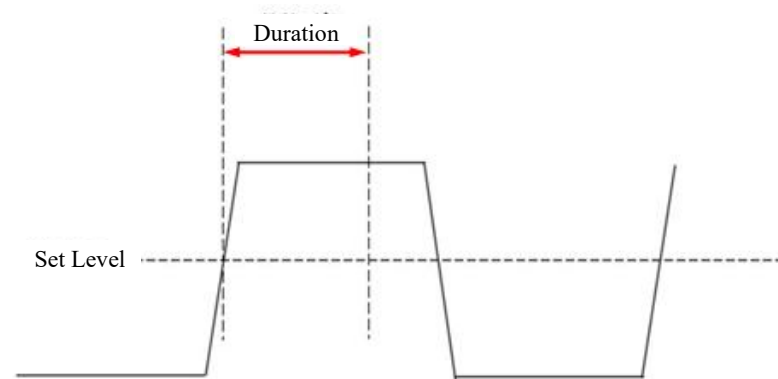


Figure 6-28 Timeout Trigger Schematics

Timeout trigger menu descriptions are shown in the table below:

Trigger Option	Setting	Description

<b>Trigger Source</b>	CH1	Set CH1 as trigger signal source
	CH2	Set CH2 as trigger signal source
	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
	CH5	Set CH5 as trigger signal source
	CH6	Set CH6 as trigger signal source
	CH7	Set CH7 as trigger signal source
	CH8	Set CH8 as trigger signal source
<b>Polarity</b>	Positive	Select to count time when the rising edge of input signal gets through the trigger level
	Negative	Select to count time when the falling edge of input signal gets through the trigger level
	Any	Select to count time when the rising edge or falling edge of input signal gets

		through the trigger level
<b>Time</b>	8ns~10s	Timeout time

**Set the polarity of CH1 trigger signal to be positive and the timeout time as 100us. The steps are as follows:**

- 1) Tap “Trigger” on the main menu to open the trigger menu, select timeout trigger in the trigger type, and set the timeout trigger as follows, as shown in Figure 6-29:
  - Trigger source: CH1;
  - Edge: positive;
  - Timeout time: 100us;
- 2) Adjust the trigger level to ensure that the waveform can be triggered stably.

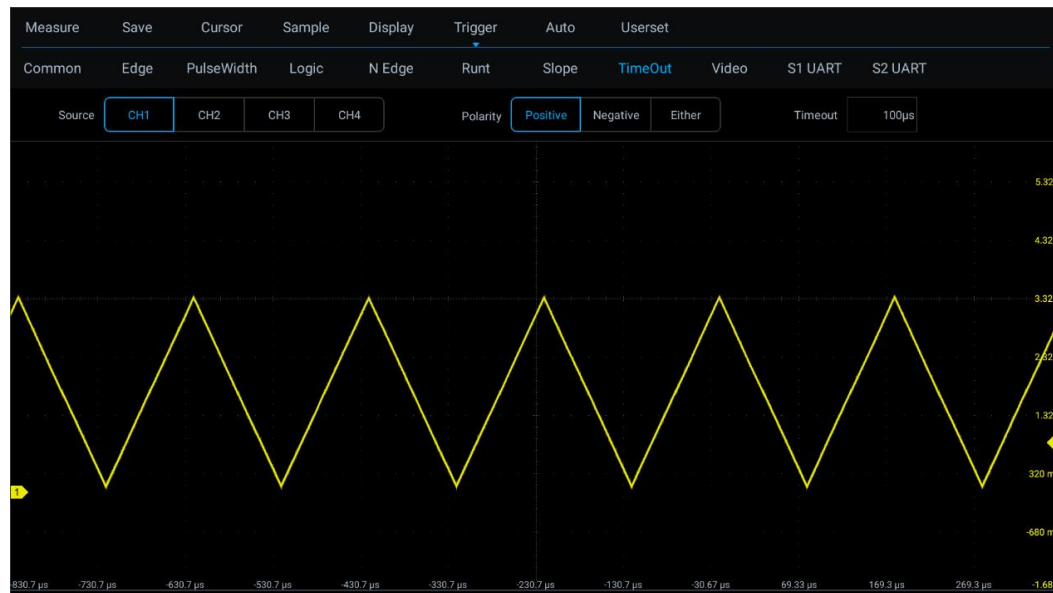


Figure 6-29 Time-out Trigger

## 6.9 Video Trigger

The triggering method for video signals depends on video formats. Generally, there are PAL/625, SECAM, NTSC/525, 720P, 1080I and 1080P formats. The video trigger can be triggered at different voltage scales, and the appropriate voltage scale can be adjusted as needed to observe the waveform. The video trigger menu descriptions are shown in the table below:

<b>Trigger Option</b>	<b>Setting</b>	<b>Description</b>
<b>Trigger Source</b>	CH1	Set CH1 as trigger signal source
	CH2	Set CH2 as trigger signal source
	CH3	Set CH3 as trigger signal source
	CH4	Set CH4 as trigger signal source
	CH5	Set CH5 as trigger signal source
	CH6	Set CH6 as trigger signal source
	CH7	Set CH7 as trigger signal source
	CH8	Set CH8 as trigger signal source
<b>Polarity</b>	Positive	Set signal positive polarity trigger
	Negative	Set signal negative polarity trigger
<b>Video</b>	625/PAL	Based on PAL signal trigger

<b>Trigger Option</b>	<b>Setting</b>	<b>Description</b>
<b>Standard</b>	SECAM	Based on SECAM signal trigger
	525/NTSC	Based on NTSC signal trigger
	720P	Base on 720P(50Hz, 60Hz) signal trigger
	1080I	Base on 1080I(50Hz, 60Hz) signal trigger
	1080P	Base on 1080P (24Hz, 25Hz, 30Hz, 50Hz, 60Hz) signal trigger
<b>Line</b>		Trigger lines
<b>Trigger</b>	Odd fields	Trigger on the rising edge of the first tooth pulse in odd fields
	Even fields	Trigger on the rising edge of the first tooth pulse in even fields

Trigger Option	Setting		Description
<b>Trigger</b>	All fields		Trigger on the rising edge of the first tooth pulse found
	All lines		Trigger on all horizontal sync pulses
	Line	625 line (PAL, SECAM)	Trigger on a specified line in odd or even fields
		263 odd line, 262 even line (NTSC)	
		750 line (720P)	
1125 line (1080I,1080P)			

**Set CH1 as trigger channel, positive polarity, NTSC standard video, all fields trigger, and the steps are as follows:**

- 1) Tap “Trigger” on the main menu to open the trigger menu, select the video trigger in the trigger type, and set the video trigger as follows, as shown in Figure 6-30:
  - Trigger source: CH1;
  - Polarity: positive;
  - Standard: 525/NTSC;
  - Trigger: Odd fields



Figure 6-30 Video Trigger

Prompts:

- In order to better observe the waveform details in the video signal, first set the memory depth to be larger.

- During the trigger debugging of the video signal, since the digital oscilloscope has multi-level gray scale display function, different brightness can reflect the frequency of different parts of the signal. Experienced users can quickly judge the quality of the signal during the debugging process and find abnormal conditions.

## 6.10 Serial Bus Trigger

Please refer to [Chapter 11 Serial Bus Trigger and Decode \(Optional\)](#)

## Chapter 7 Analysis System

This chapter contains the detailed information of the analysis system of the oscilloscope. You are recommended to read this chapter carefully to understand the set functions and operation of the analysis system of the MHO series oscilloscope.

- Automatic measurement
- Frequency meter measurement
- Cursor

## 7.1 Automatic Measurement


### Measurement setting

Slide down from top, open the main menu, tap “Measure” to enter the measurement menu. There are 23 measurement items on the measurement menu. Measurement menu, selected measurement item display and measurement item display are shown in Figure 7-1:



Figure 7-1 Automatic Measurement Menu

### Automatic measurement


- 1) Select channel: Select the channel to be measured above the measurement menu.
- 2) Select measurement: Select the desired measurement item on the measurement menu. The selected measurement item is displayed in the “Selected Parameters” display area below.
- 3) Cancel measurement item: In the “Selected Parameters” display area below measurement menu, tap the measurement item to be cleared; or tap  button to clear all measurement items.

### Note:

Measurements and math functions will be recalculated when moving/zooming and opening/closing channels.

Oscilloscope has an automatic measurement memory function. Shutdown and restart will not automatically clear added automatic measurement options.

### All measurements

Slide from bottom, open the **pull-up menu**, see Figure 7-2, click  to open all measurement items, display the current channel measurement value. Switch the current channel to open all the measurement items of other channels, as shown in Figure 7-3; click again to turn off all measurements.

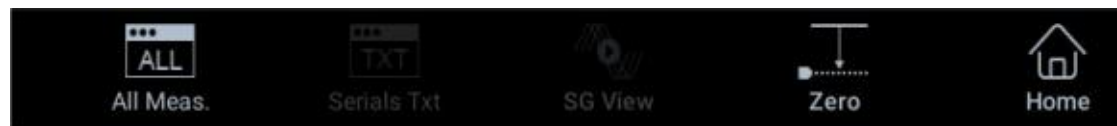


Figure 7-2 Pull-up Menu

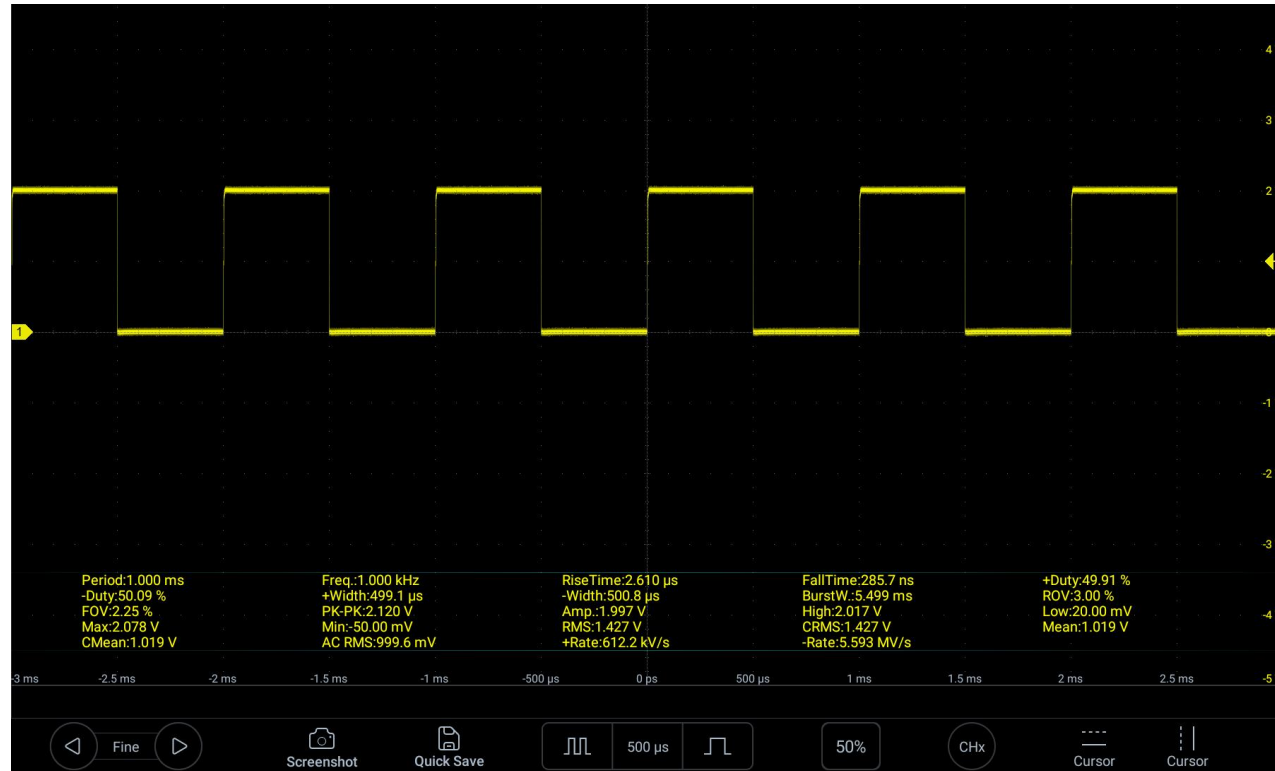


Figure 7-3 All Measurements

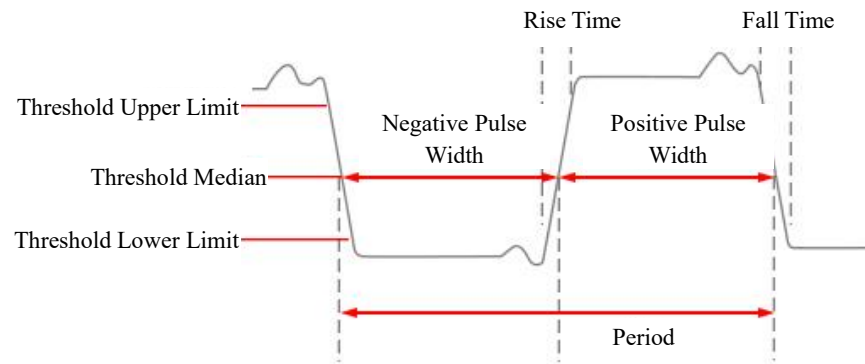


Figure 7-4 Time Parameter

## Period

Time of the first complete signal cycle in the waveform

## Frequency

Reciprocal to the Period time

## Rise time

The time required for the rising edge of the first pulse of the waveform to rise from 10% to 90% of the amplitude, supporting custom thresholds

## Fall time

The time required for the falling edge of the first pulse of the waveform to fall from 90% to 10% of the amplitude, supporting custom thresholds

## Delay

Can measure the time delay between rising or falling edges between channels, with sixteen valid measurement combinations.

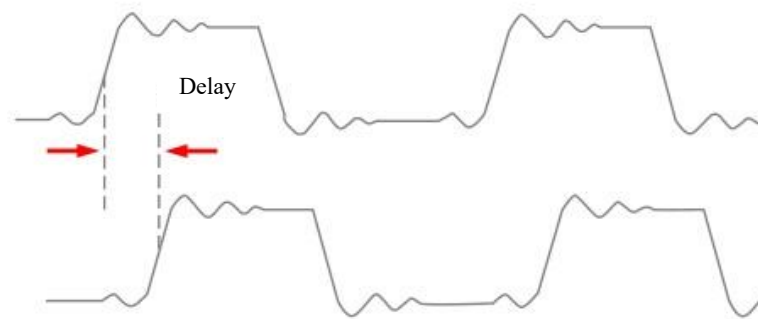



Figure 7-5 Delay Measurement Schematics

- 1) Open the automatic measurement menu and tap  to pop up the phase selection menu.

- 2) The left channel is defaulted as the current channel, and other channels can be selected by the channel area that has been opened (except the reference channel); there are four edge selections: first rising edge, first falling edge, last rising edge, last falling edge.
- 3) The right channel is a contrast delay channel, which can be selected between each channel and math channel. There are four edge selections: first rising edge, first falling edge, last rising edge, and last falling edge.
- 4) Tap  button to confirm.

### Positive duty cycle

Measured value of the first cycle in the waveform

Positive duty cycle = (waveform positive pulse width / period) \* 100%

### Negative duty cycle

Measured value of the first cycle in the waveform

Negative duty cycle = (waveform negative pulse width / period) \* 100%

### **Positive pulse width**

Measured value of the first positive pulse in the waveform, taking the time between two 50% amplitude points

### **Negative pulse width**

Measured value of the first negative pulse in the waveform, taking the time between two 50% amplitude points

### **Burst width**

Duration of a burst measured over the entire waveform

### **Overshoot**

#### **Positive overshoot**

Positive overshoot =  $[(\text{max} - \text{high}) / \text{amplitude}] * 100\%$

#### **Negative overshoot**

Negative overshoot =  $[(\text{low} - \text{min}) / \text{amplitude}] * 100\%$

### **Phase**

Timing measurement. The amount of time that one waveform leads or lags another waveform, expressed in degrees where  $360^\circ$  comprises one waveform cycle.

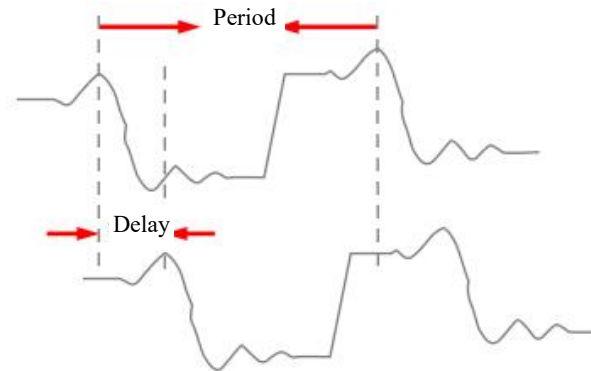


Figure 7-6 Phase Measurement Schematics

### Peak-peak

In the entire waveform measurement, peak-peak = max - min

### Amplitude

In the entire waveform measurement, amplitude = high (100%) - low (0%)

The figure below shows voltage measurement points.

The channel probe type setting is used to set the measurement unit for each input channel to Volts or Amperes.

Refer to “[5.4.4 Set Probe Type](#)”.

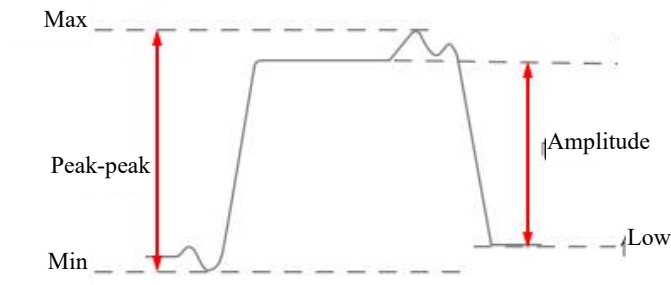


Figure 7-7 Voltage Measurement

### High

Take 100% in the entire waveform, and calculated using either the min/max or histogram method.

### Low

Take 0% in the entire waveform, and calculated using either the min/max or histogram method.

**Max**

Highest positive peak measured over the entire waveform

**Min**

Highest negative peak measured over the entire waveform

**RMS**

True root mean square value over the entire waveform

**C RMS**

True root mean square value of the first cycle in the waveform

**Mean**

Arithmetic mean over the entire waveform

**C mean**

Arithmetic mean over the first cycle in the waveform

## **AC Mean**

The actual effective value of the AC component of the entire waveform

## **Positive slope**

The ratio of the difference between the high and low values of the first rising edge of the waveform to the rise time

## **Negative slope**

The ratio of the difference between the low and high values of the first falling edge of the waveform to the falling time

## **Note:**

If the waveform required for measurement is not fully displayed on the screen, “Forward Clipping” or “Negative Clipping” is displayed at the position of the measured value.

When the math function is operated, if source channel waveform is fully displayed, and the math waveform appears to be off the screen, the measured value of math waveform will not be influenced.

If source channel is clipped, the measured value of math waveform is the source channel value during screen wave clipping.

## **Statistics**

Swipe down from the top to open the main menu, tap "Measure", then select "Statistics" to enter the statistics menu.

The oscilloscope supports statistics and displays the current value of multiple measurement results, including Mean,

Max, Min, Deviation, and Count. The number of counts can be up to 10,000 times. Click the "Reset" button to clear

the historical data of all measurement items and perform statistics again, as shown in Figure 7-8:



Figure 7-8 Statistics

## Measuring range

The automatic measurement item defaults to calculating the waveform of the entire screen, and can also be set to calculate only the waveform within the cursor. Open the top menu, select "Measurement", and click Settings to set the measurement range. Set to "Cursor" to allow the automatic measurement item to only calculate the waveform within the cursor. As shown in Figure 7-9, the maximum value on the screen is about 5V. After setting the measurement range to the cursor, the maximum value is 110mV.

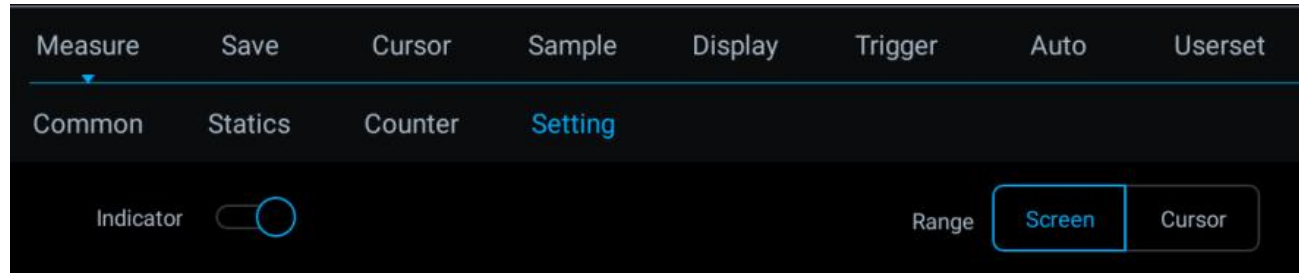
Note: After the measurement range is set to cursor, the cursor will automatically turn on. After closing the cursor, the measurement range is automatically selected as the screen.



7-9 Automatic measurement range selection as cursor

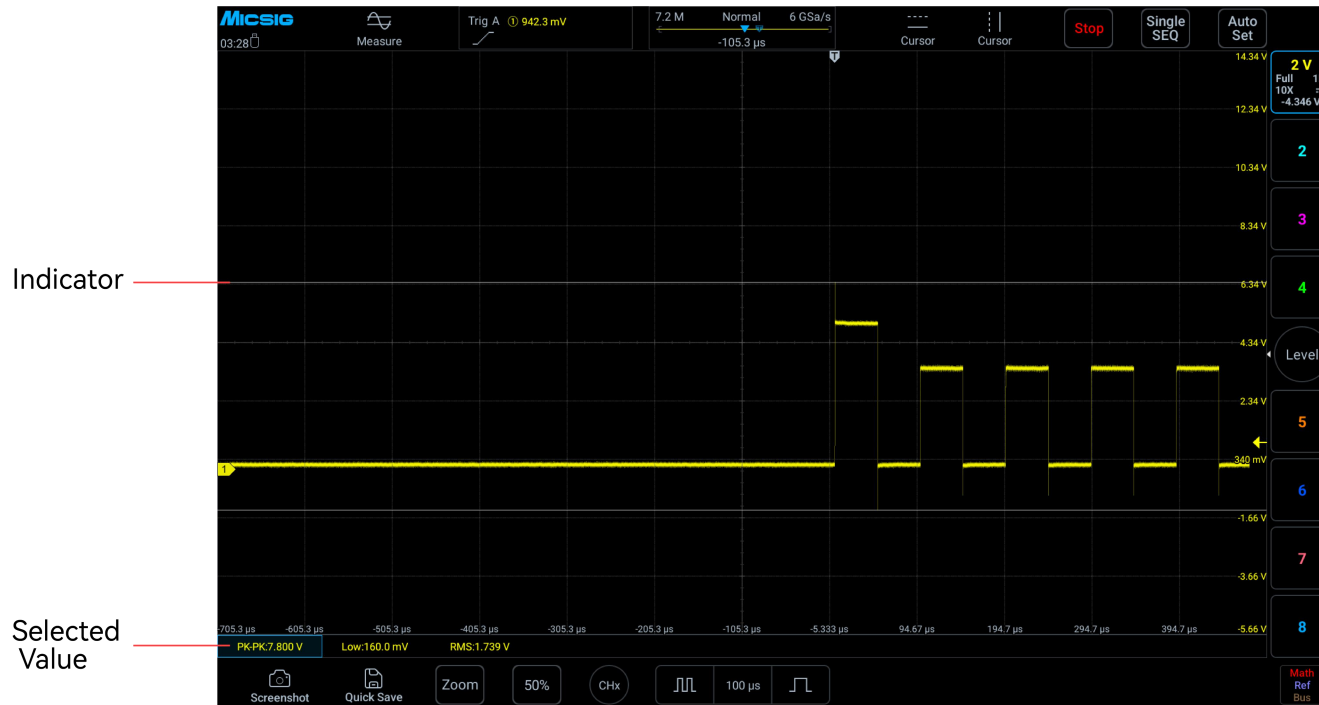
## Indicator

Open the top menu, select "Measurement", and click the submenu "Settings" to open the measurement item indicator, as shown in Figure 7-10.



### 7-10 Indicator turns on

After opening the indicator, you can click on the displayed measurement items. The selected measurement items are highlighted with a blue frame, and their calculation objects are indicated with white lines in the waveform. As shown in Figure 7-11, "High" is selected in the lower measurement item display area, and a white line appears at the high value position of the waveform as an indicator.



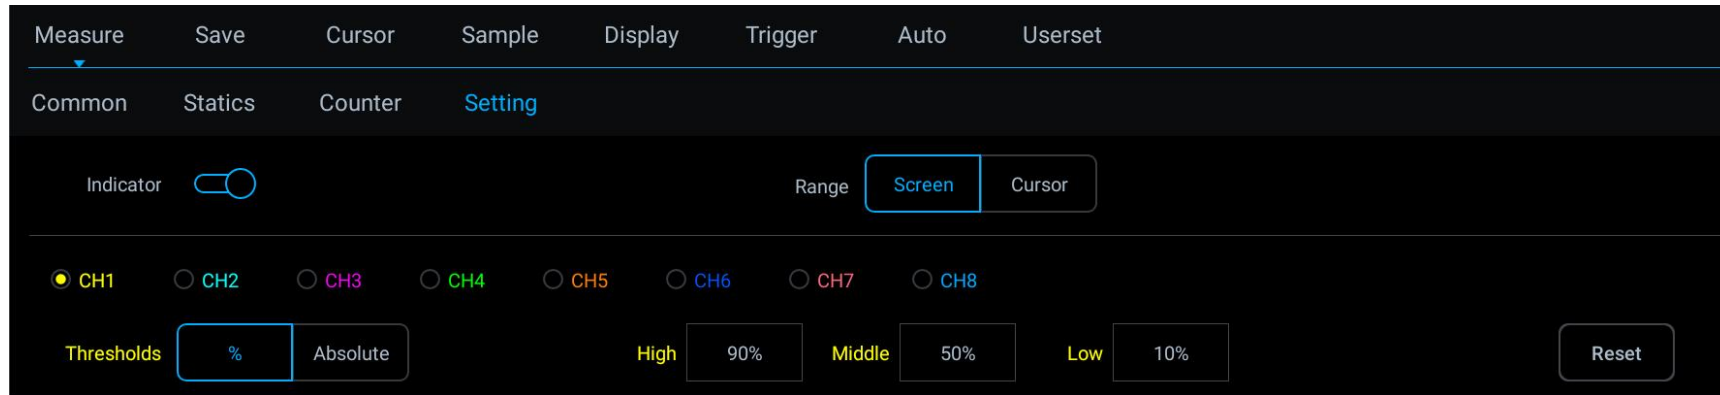
Indicator

Selected Value

7-11 indicator

## Measurement threshold

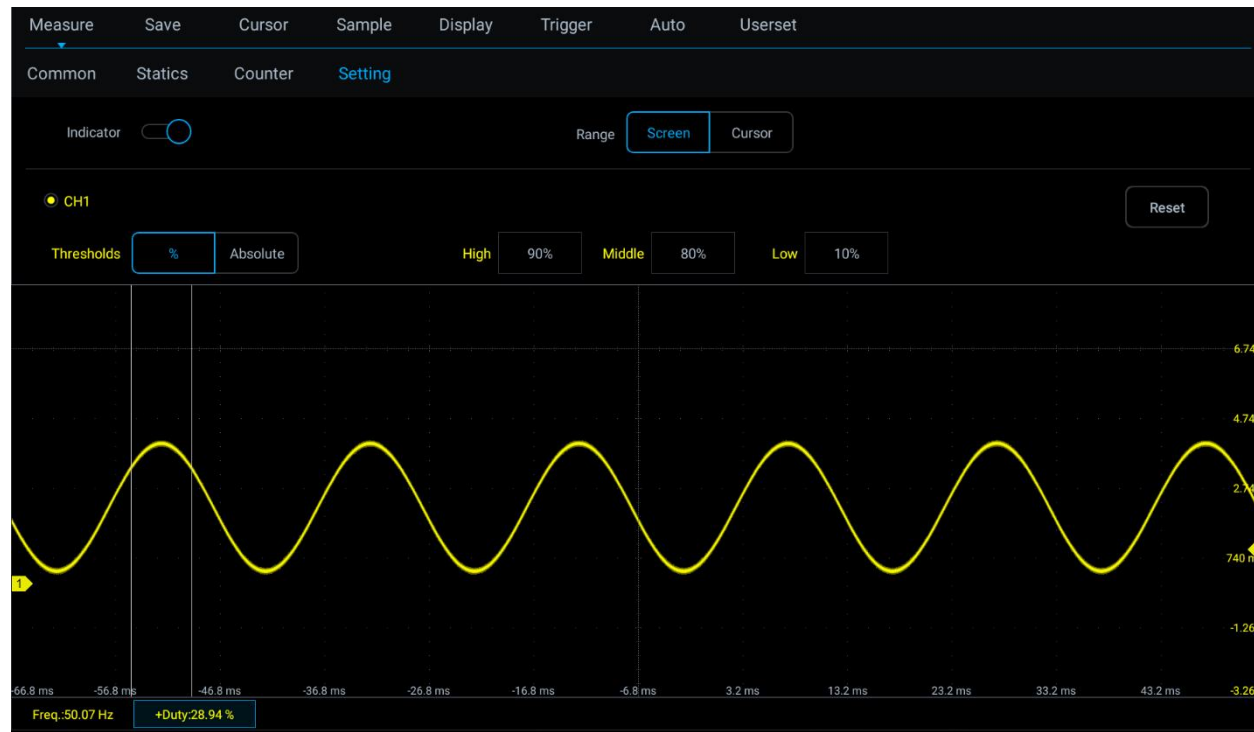
Each channel (CH1, CH2, CH3, CH4, Math) can have independent threshold settings, and the threshold type can be selected as "%" or "absolute value", as shown in Figure 7-12.



### 7-12 Threshold setting

The setting of the threshold will affect the results of the measurement items. The high and low value settings will affect the rise time and fall time measurement results. The setting of the median value will affect time parameters such as pulse width, frequency, delay, duty cycle, phase, etc. As shown in Figure 7-13, after the median is set to 80%, the positive pulse width of the signal is smaller than when the median is 50%.

When the set high value is lower than the current middle value, the middle value will automatically be equal to the high value; the high value and the middle value cannot be less than the low value. When the set value is lower than the low value, it will automatically be set to value higher than the low value 1 or 10mV (absolute value).



7-13 Pulse width when the median threshold value is set to 80%

## 7.2 Frequency Meter Measurement

Open the main menu, tap Measure and Counter to enter the hardware frequency meter setting menu, and select the channel to be measured, as shown in Figure 7-14. The measured value is displayed in the upper left corner of the screen, as shown in Figure 7-15.

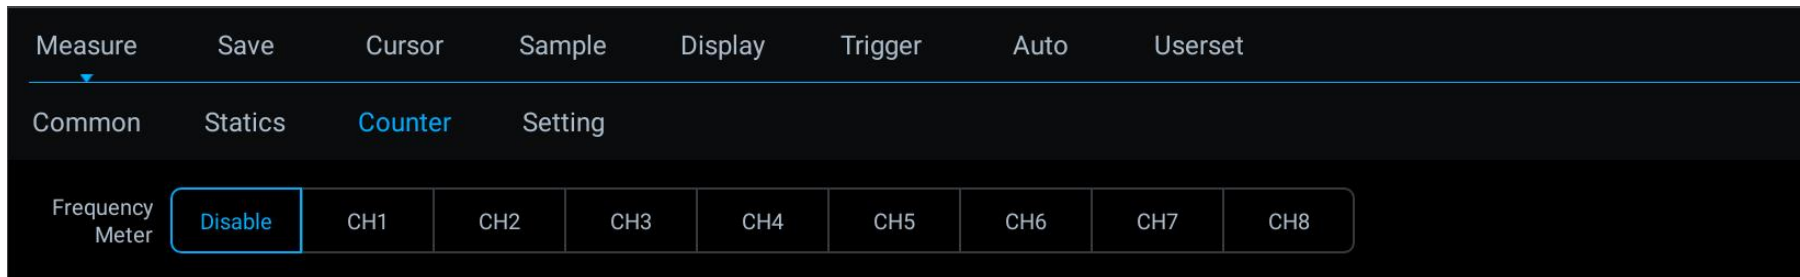


Figure 7-14 Frequency Meter Measurement Menu Open

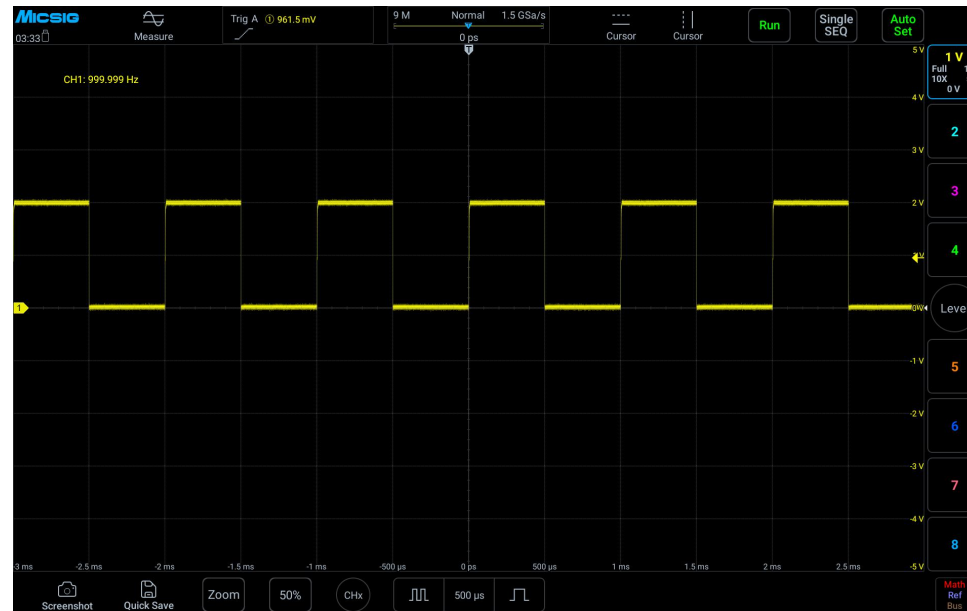


Figure 7-15 Frequency Meter Measurement

### 7.3 Cursor

Open cursor and place it on the measurement point to read the waveform measurement value. There are two types of cursors: horizontal cursor and vertical cursor. The horizontal cursor measures the vertical direction magnitude, and the vertical cursor measures the horizontal direction magnitude, as shown in Figure 7-16.

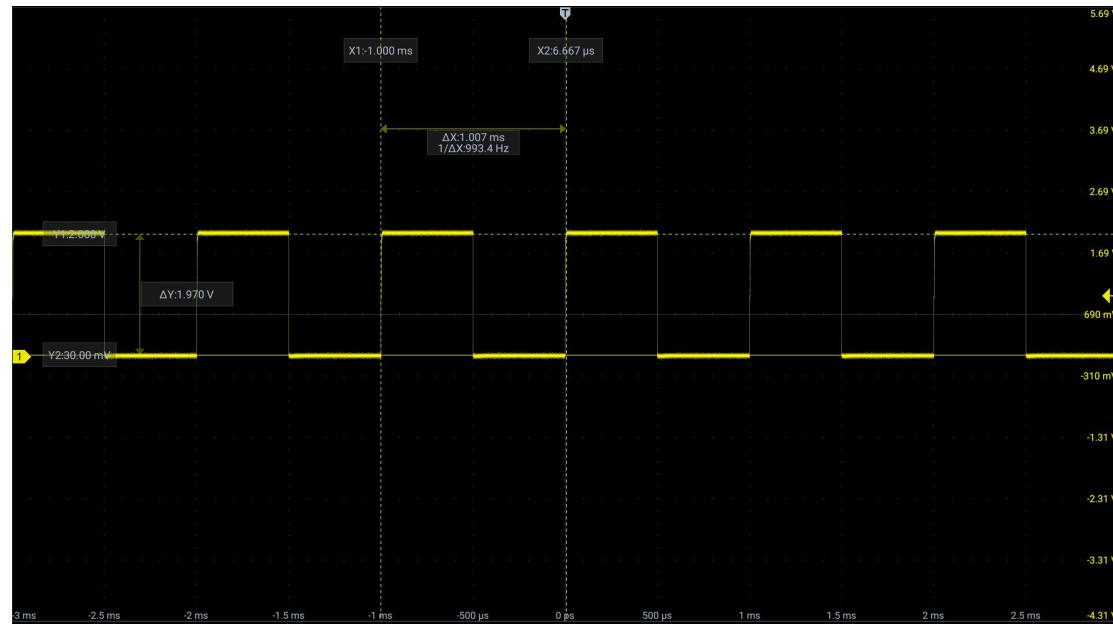


Figure 7-16 Cursor Measurement Description



**Note:**

**$\Delta$  reading:** indicates the difference between two cursor positions.

**Voltage readings behind Y1, Y2:** indicate the position of activated horizontal cursors relative to the zero potential.

**Time readings behind X1, X2: indicate the position of activated vertical cursors relative to the trigger point.**

**1/ΔX: frequency**

Vertical cursor on: Tap cursor icon  to open vertical cursors and the icon is on and activated .

Vertical cursor off: Tap cursor icon  to turn off vertical cursors.

Tap the vertical cursor indicator line to switch the cursors.

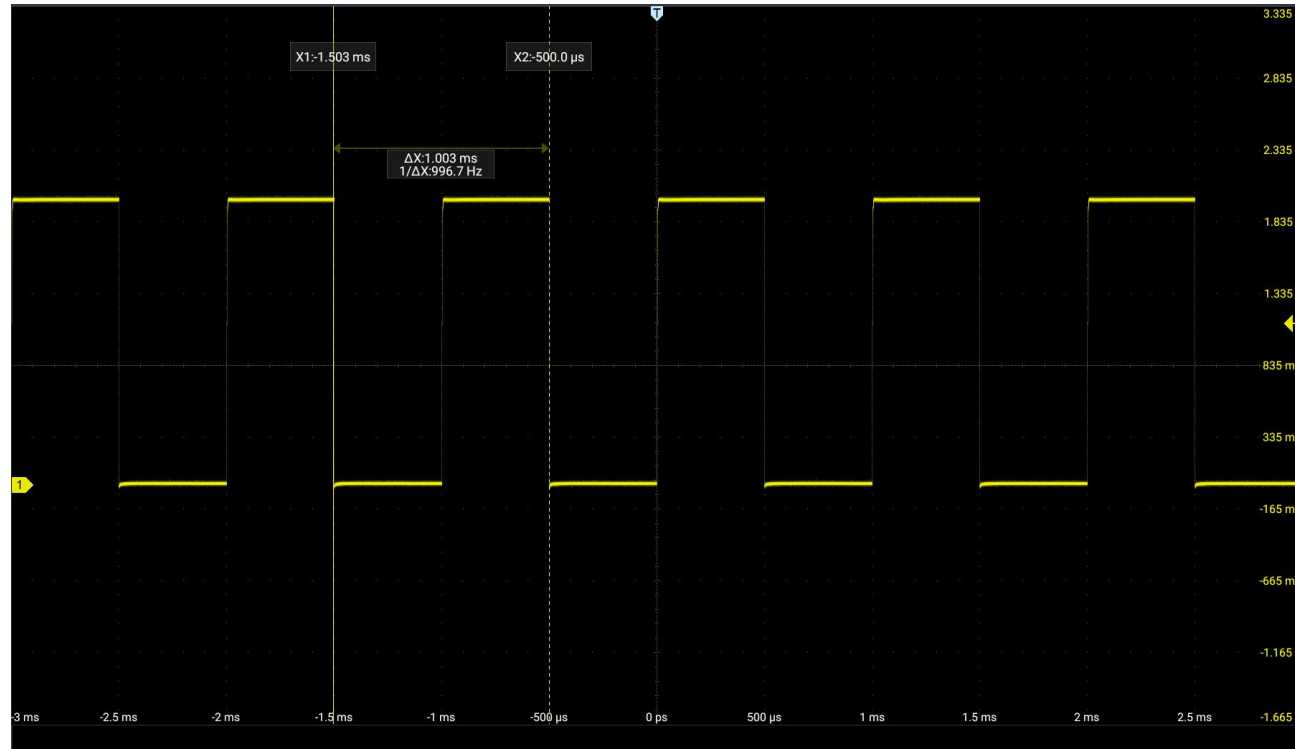


Figure 7-17 Open Cursor Selection Box and Close Cursor

**Vertical cursor movement descriptions:**

- 1) Use a single finger to press and hold the cursor indicator line on the screen to make coarse adjustment to the cursor; tap the fine adjustment button in the lower left corner of the screen to fine-adjust the cursor that has just been adjusted.
  
- 2) Cursor linkage: When the cursor is opened, two finger slide and enter the cursor linkage state.

Note: During the sliding process, the current operation is changed unless the initial two fingers leave the screen. If one finger leaves the screen and the other finger does not leave, the current linkage adjustment is continued.

### **Horizontal cursor on/off and activation**

Horizontal cursor on/off, switching, activation and movement operations, similar to those of vertical cursors, will not be described in detail here, and please refer to vertical cursors for details.

### **Cursor test example**

When vertical cursors are activated, the two cursors move together to check for pulse width changes in the pulse sequence.

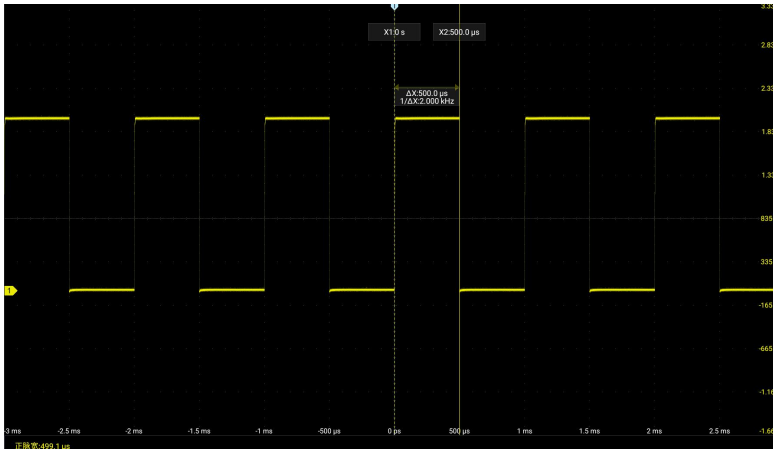


Figure 7-18 Cursor Measurement Pulse Width

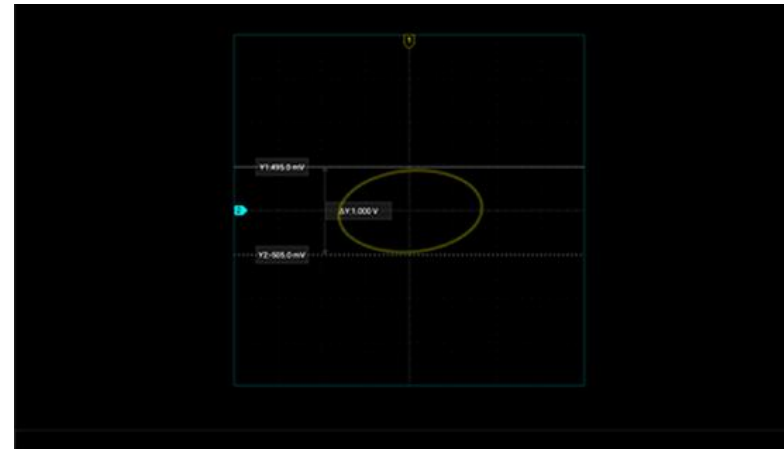


Figure 7-19 In XY Mode, Cursor Measurement

In the XY horizontal mode, X cursor displays CH1 value (V or A), and Y cursor displays CH2 value (V or A).

### Current channel cursor forced selection:

Open the top menu and select "Cursor" to force-select the current channel cursor. The default is "Auto". In Auto mode, the current channel cursor is the current channel. When CH1-4 is selected, the current channel cursor will be

forced to be the selected channel and will no longer change with the change of the current channel. As shown in Figure 7-20, the current channel is CH2, and the current channel cursor is CH4.



7-20 Current channel cursor forced selection menu

## Chapter 8 Storage


This chapter contains the detailed information of the screen capture function and memory depth of the oscilloscope.

You are recommended to read this chapter carefully to understand the storage system of the MHO series oscilloscope.

- Screen capture function
- Video recording
- Waveform storage
- Save settings
- Session Save
- Invoke Function

## 8.1 Screen Capture Function

The screen capture function can locally store the display information on the current display screen in picture format.

Screen capture: Tap the icon  to take a screenshot within the Oscilloscope app interface. Or double-click the power button to take a screenshot of any interface. Refer to [“13.6 Picture View”](#) for details on viewing pictures.

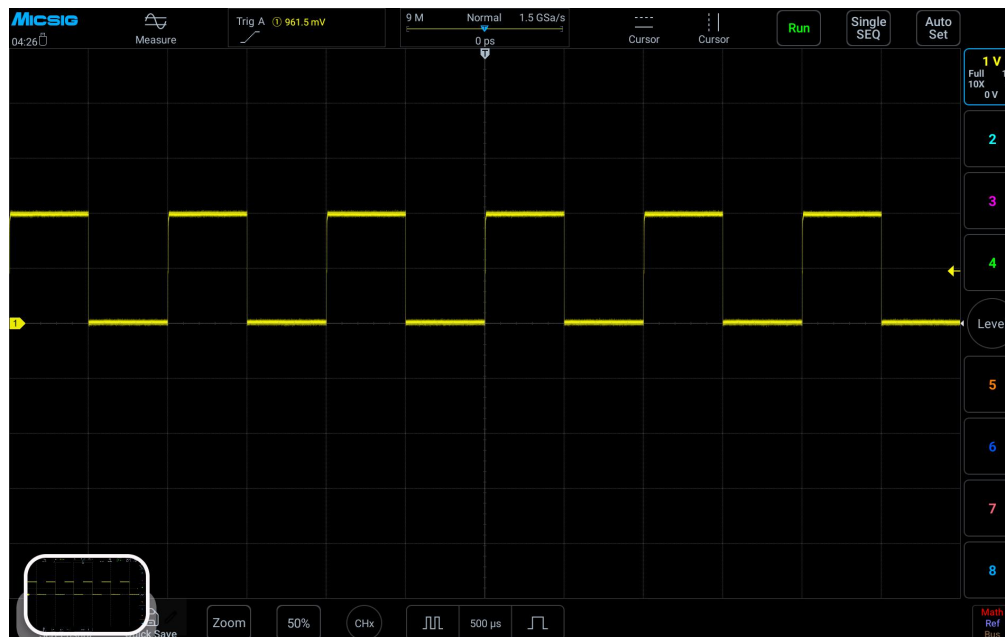


Figure 8-1 Screen Capture

## Timestamp and Inverse Color

The oscilloscope has the function of inverting colors and adding timestamps to screenshots. Open the main menu, tap Save and enter Picture menu, turn off/on Timestamp and Inverse Color button as desired.

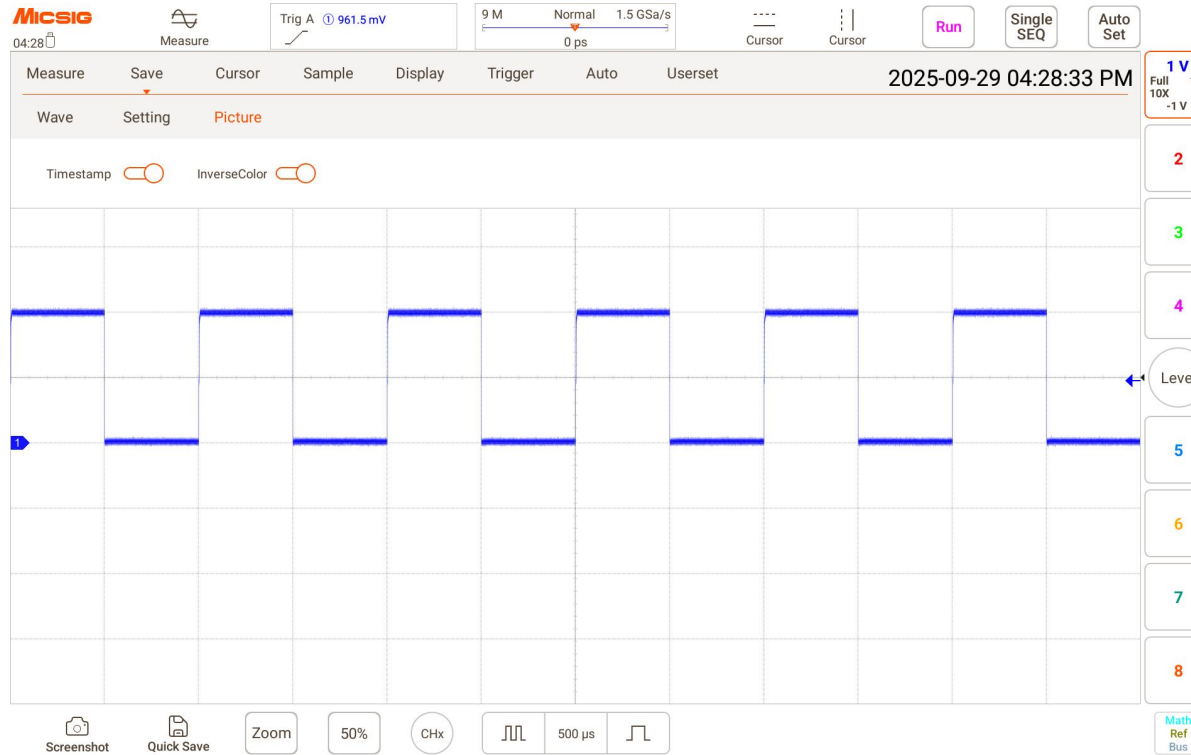


Figure 8-2 Timestamp &amp; inverse color

## 8.2 Video Recording

The video recording function is similar to the screen capture function, and the display information of the current display screen can be stored locally in video format.

Video recording method is sliding down from top in non-oscilloscope application, open pull-down menu, tap the screen to start recording, and count down to three seconds to complete the video recording, as shown in Figure 8-3.

You can cancel recording by pressing the triangular, circular or square button at the bottom of the screen before the countdown ends.

During video recording, you can end recording by tapping the video recording time at the top left of the screen. Or you can leave the oscilloscope application interface to open the pull-down menu, and click “Stop Recording” to end the video recording.

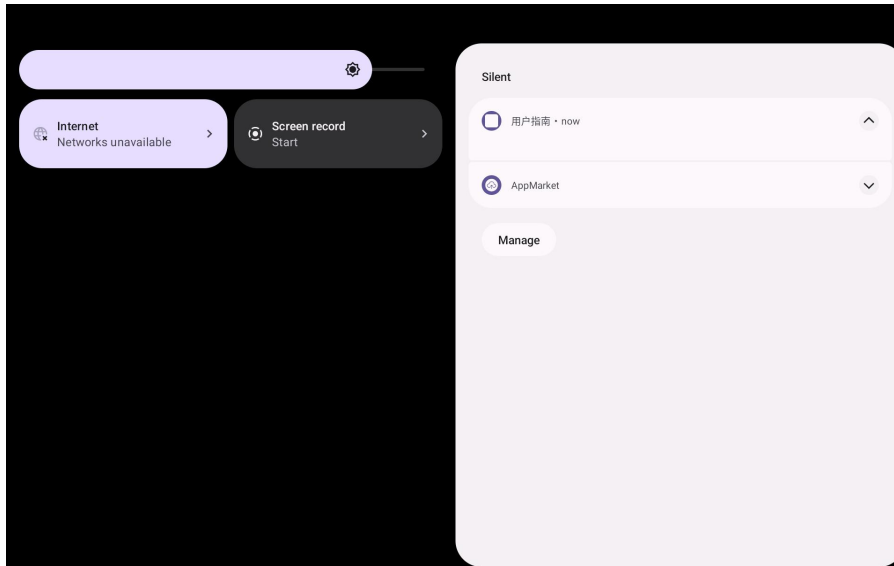


Figure 8-3 Video Recording Method

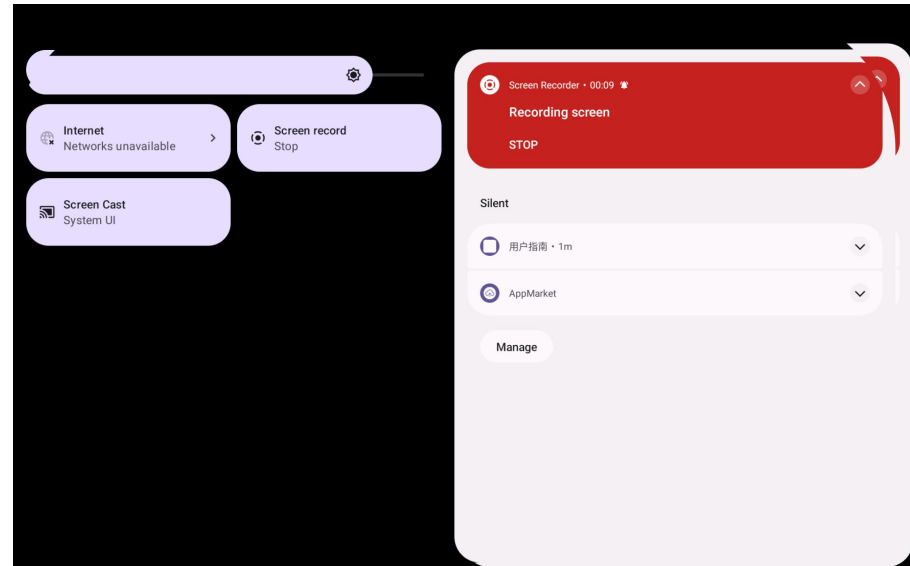


Figure 8-4 Video Recording

Please refer to “[13.7 Gallery](#)” for details of viewing videos.

### 8.3 Waveform Storage

Waveform storage supports three file formats: WAV, CSV, and BIN.

The storage path and file name can be customized, and sequential numbering is supported for files with the same name.

The oscilloscope provides eight reference channels, allowing users to load WAV or CSV files into these channels by invoking the function, enabling the display of reference waveforms.

## Save reference file

Slide down from top, open main menu and tap "Save/Invoke" to open the menu. Save the reference waveform interface of the specified channel as follows:

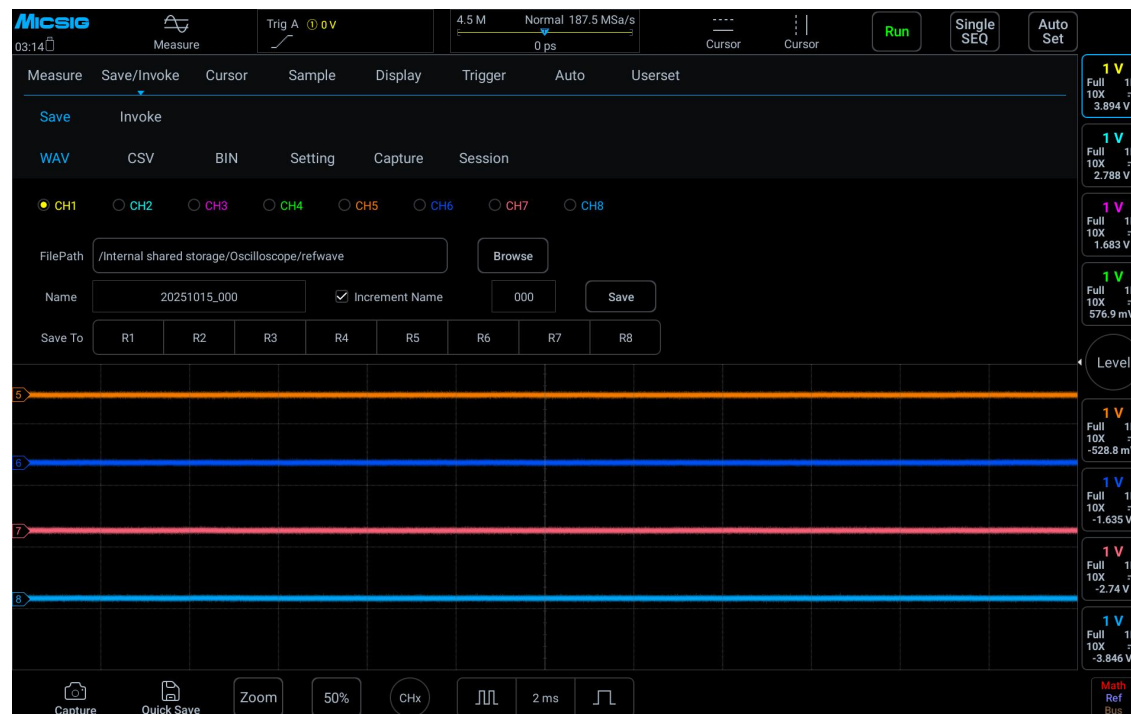



Figure 8-5 Save CH1 Reference Waveform Interface

Channel: Select the channel that needs to be saved.

Path: Click "Browse" and select the target save path.

File name: The initial file name is displayed as year + month + day + storage serial number. Press the file name box to pop up the virtual keyboard, tap  to delete the file name, and use the virtual keyboard to rename the file.

Save: Tap to save the reference file and pop up the save success prompt. The most recently saved file will be displayed at the top of the called menu.



Save to: Tap the R\* (R1, R2, R3, R4, R5, R6, R7, R8) button to save the current channel waveform directly to the corresponding reference channel, and the save success prompt will pop up.

Back: Tap to return to the previous level.

### **Method 1: Click the “Save” button**

In the Save Reference Waveform menu, select the channel waveform to be saved, select the file save location, file type and file name, and click the “save” button to save the reference waveform file.

**Save the reference waveform by steps as follows:**


- 1) The current channel is set to the channel to be saved, which can be analog channel, math channel or reference.
- 2) In the Save menu, tap  and select the channel you want to save.
- 3) Click on the current file name, tap  to delete the file name, and enter the file name using the virtual keyboard.
- 4) Tap "Save" to save the reference file. A successful save prompt box pops up.

If the reference waveform file is to be saved in USB device, the oscilloscope must be connected to an external USB device.

**Method 2: Click R\* button**

In the Save Reference Waveform menu, tap R\* (R1, R2, R3, R4, R5, R6, R7, R8) button to save the current channel waveform directly to the corresponding reference channel, and the save success prompt will pop up. The file name is displayed as Ref\* in the reference channel (\* is the corresponding reference channel name). Reference waveform files saved by this method will be overwritten after loading other reference waveforms and cannot be restored.

### Method 3: Click “Quick Save” button

Tap  at bottom of the screen to save all channel waveforms as reference waveforms and capture the current screen. The file names are the default initial file names.

### Management of reference files

In the file manager, open waveforms in the classification file to manage reference files by operations such as copy, cut, delete, rename, compress, etc., as shown in Figure 8-4. Select reference files and click trash button to delete them; click More at bottom of the screen, tap Rename to open soft keyboard and change the reference file name.

Tap Compress to pop up the soft keyboard and enter the compressed file name to compress the file; when inserting the USB device, files on the oscilloscope can be moved to the USB device.

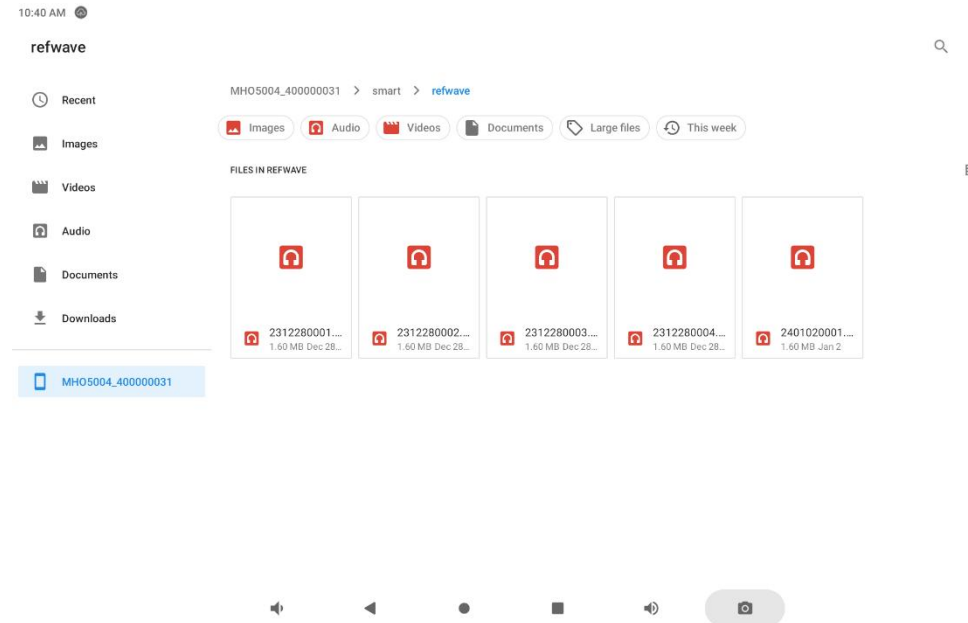


Figure 8-6 Delete Reference Files

## CSV files

## CSV file structure

CSV format contains the basic information of the saved data: save time, file name, data length, sampling interval, trigger time, source, vertical scale, vertical offset, vertical accuracy, horizontal time base, horizontal accuracy, probe multiples.

CSV file data and length can be saved up to 360 K. When the oscilloscope record length or displayed data length is less than 360K, the data length of the CSV file changes accordingly.

MHO68 supports saving waveform data from multiple channels in a single save operation. For the selected channels, the system packages the data from all channels into one CSV file.

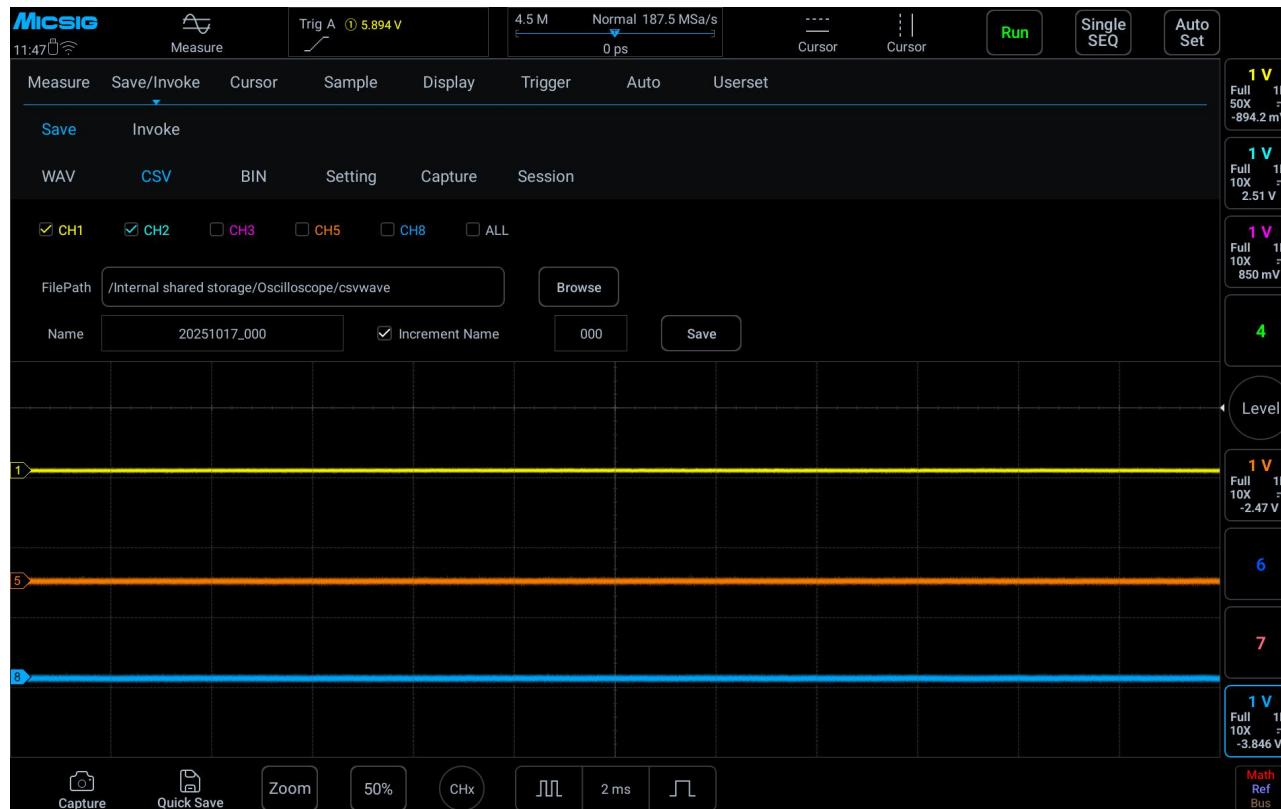


Figure 8-7 Save channel CSV file interface

## Max and Min in CSV files

If running Min or Max measurements, Min and Max values displayed on the measurement results screen may not appear in CSV files.

Explanation: If the sampling rate of the oscilloscope is 1GSa/s, sampling is performed every 1ns. If the horizontal scaling is set to 10us/div, 110us of data will be displayed (assuming there are 11 divisions on the screen). To find the total number of samples, the oscilloscope will take:  $110\text{us} \times 1\text{GSa/s} = 110\text{K}$  samples. The oscilloscope will need to use a 1280 pixel column to display 110K samples. The oscilloscope decimates 110K samples into 1280 pixel columns, and this decimation will track the minimum and maximum values of all points represented by any given column. These minimum and maximum values will be displayed in this screen column.

Use a similar process to reduce collected data to produce records that can be used for various analyses, such as measurements and CSV data. This analysis record (or measurement record) is much larger than 1280 and may actually contain up to 60000 points. However, once the collected points exceed 60,000, some kind of extraction method needs to be used. The decimation factors used to generate CSV records are configured to provide the best estimate of all samples represented by each point in the record. Therefore, the minimum and maximum values will not appear in the CSV file.

## 8.4 Oscilloscope setting save

Open the main menu, tap Save/Invoke and enter Setting menu, as shown in Figure 8-8.

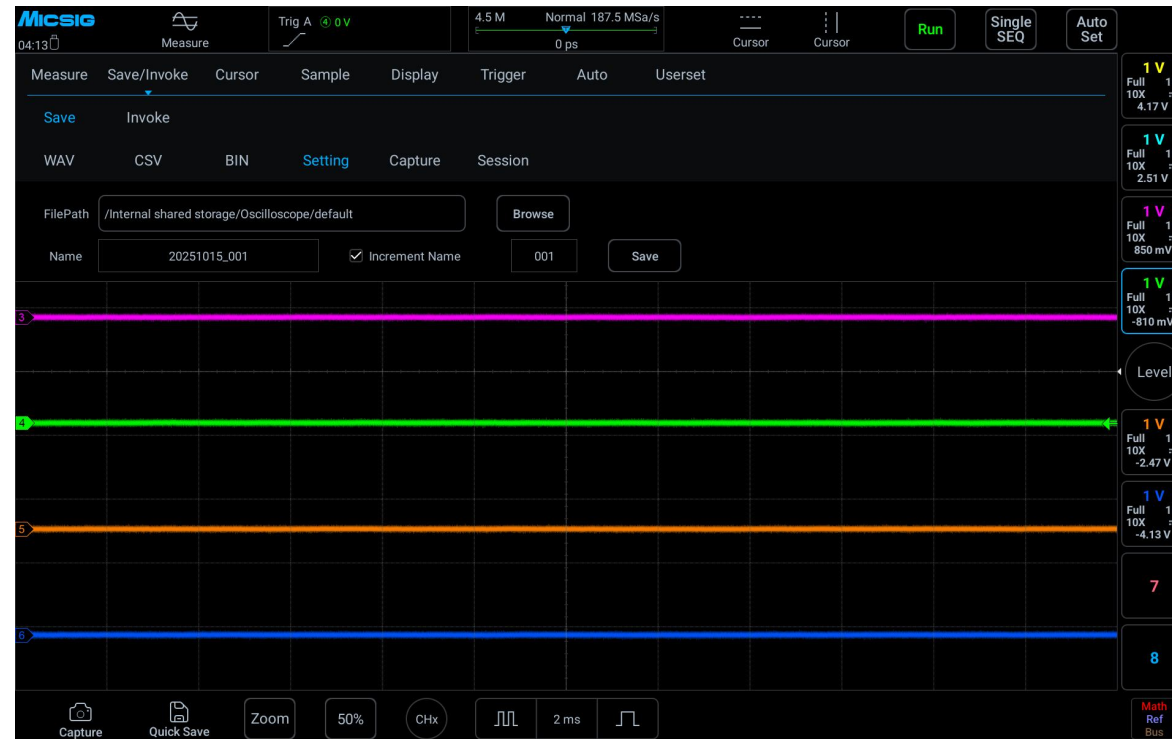


Figure 8-8 oscilloscope setting save

Tap the black box area to rename save settings, tap the Save button to store, the Recovery button to restore the settings.

## 8.5 Session Save

Open the main menu, tap Save/Invoke and enter session save menu, as shown in Figure 8-9.

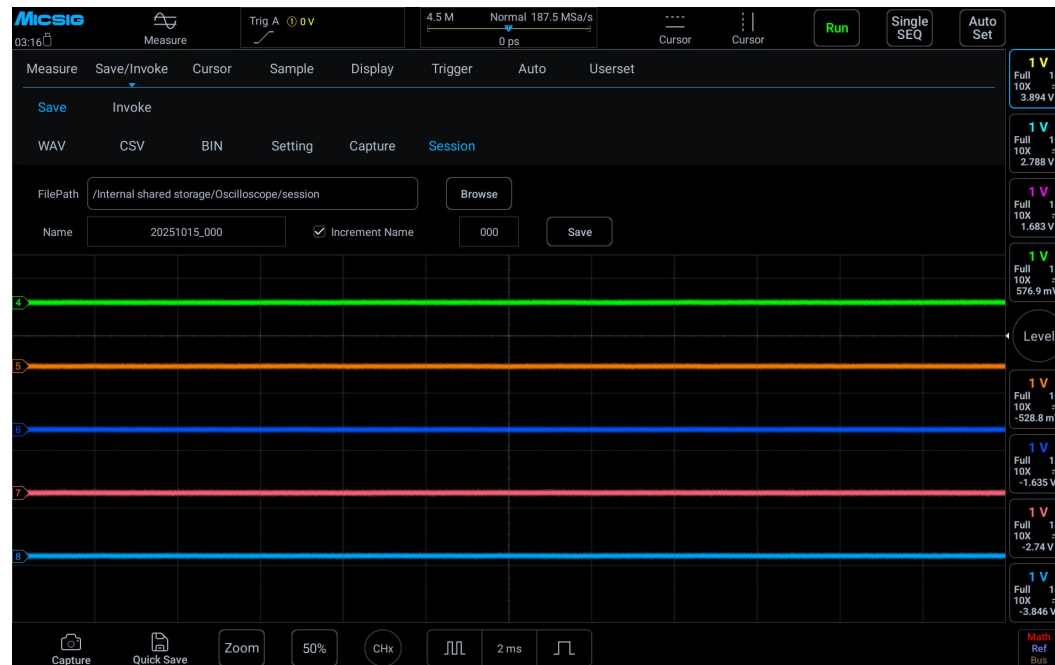


Figure 8-9 session save interface

The Save Session function allows users to save the current oscilloscope state, including waveform data and oscilloscope settings. Tap name to enter a name for the current session, then tap Save to confirm. To recall a saved

session, go to the Recall → Settings path and select the desired session file. Once the session is loaded, the oscilloscope will restore waveform data and settings to their saved state, allowing users to continue zooming, measuring, and analyzing the waveforms without reconfiguring parameters.

## 8.6 Invoke Function

Open the main menu, tap Save/Invoke and enter invoke function menu, as shown in Figure 8-10.

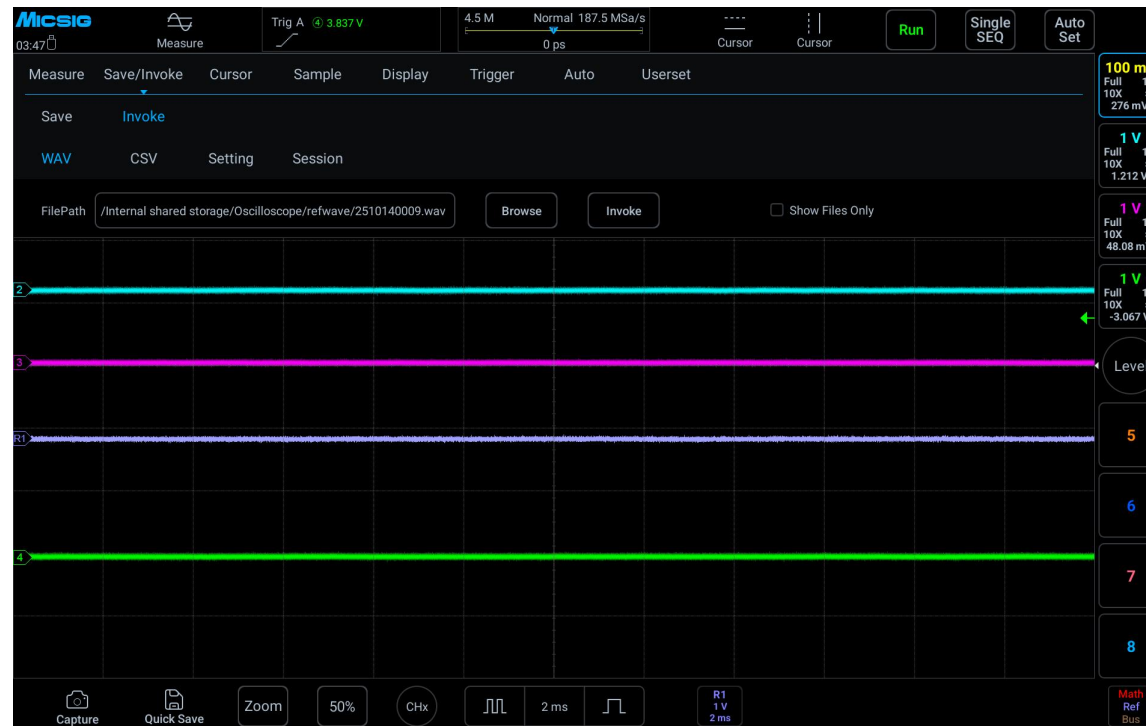


Figure 8-10 invoke function interface

MHO6 Series oscilloscopes support the recall of WAV waveforms, CSV waveforms, settings, and sessions, allowing users to restore historical data and configurations.

## Chapter 9 MATH and Reference

This chapter contains the detailed information of the MATH operation and reference channel of the oscilloscope.

You are recommended to read this chapter carefully to understand the setting functions and operations of the MATH and reference channels of the MHO series oscilloscope.

- Dual waveform calculation
- FFT measurement
- Advanced Mathematics
- Reference waveform call

## 9.1 Dual Waveform Calculation

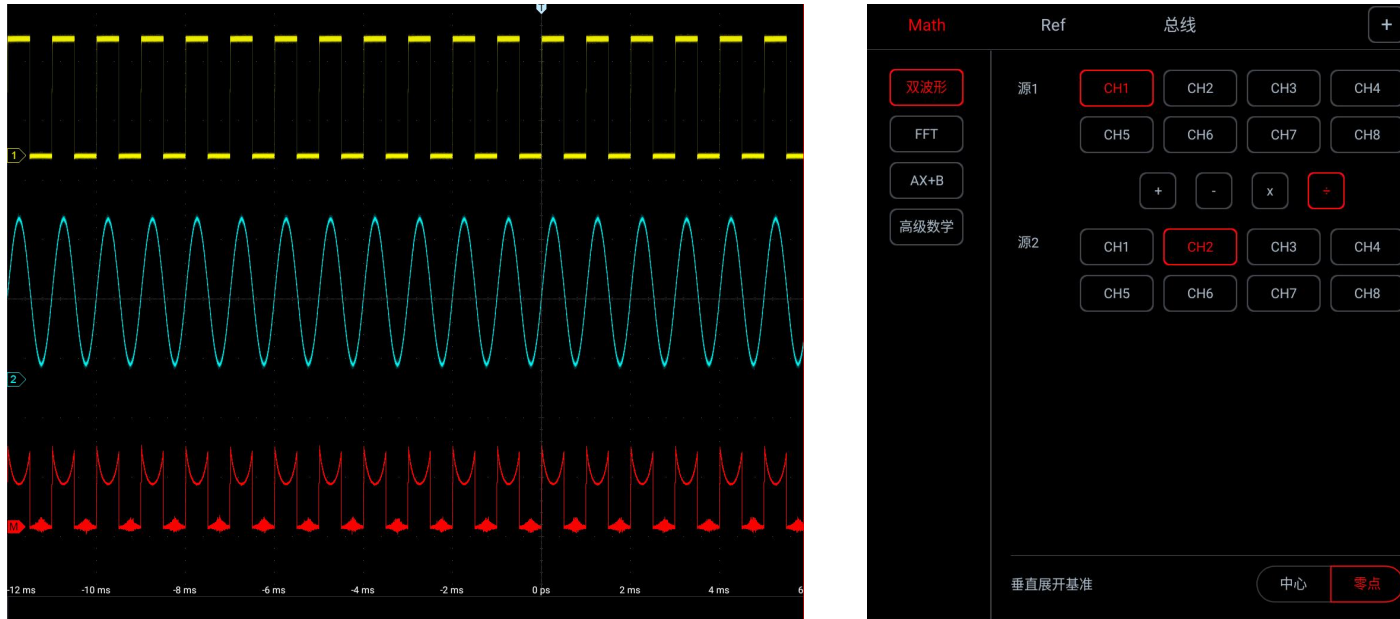



Figure 9-1 MATH Channel Waveform

### Display math waveform

Swipe up or down at the channel selection area to enter the second channel selection area. Tap the soft key **Math** to open the math channel. After the math waveform is opened, the current channel selector is automatically opened.

Left swipe math channel icon  to open the math channel menu. While opening math for the first time, the math operation is defaulted as the dual channel calculation.

### **Math operation prompt**


If the analog channel or math function is clipped (not fully displayed on the screen), the resulting math function will also be clipped.

Once the math waveform is displayed, tap the channel icon to close the source channel for a better view of the math waveform.

The vertical sensitivity and offset of each channel participating in the math function can be adjusted to facilitate viewing and measuring of the math waveform.

The math function waveform can be measured using “Cursor” and “Measure”.

### **Adjust the math waveform**

- 1) Press the math channel vertical sensitivity icon, directly tap the math waveform or math channel indication icon , and set the math channel as the current channel.

- 2) For details of movement, vertical sensitivity adjustment, time base adjustment and vertical expansion reference of the math channel, please refer to “[Chapter 4 Horizontal System](#)” and “[Chapter 5 Vertical System](#)”.
- 3) The vertical sensitivity, unit and time base corresponding to the math waveform are displayed in the channel area of the math channel. For details, see “[2.6 Understand the Oscilloscope Display Interface](#)”.

### Math waveform units

Use “Probe Type” on the channel menu to adjust the channel unit (refer to “[5.4.4 Set Probe Type](#)”) and set the unit of each input channel to Volt or Ampere. The units of math function waveform include:

Math Function	Unit
+/-	V, A,
×	VV, AA, W
÷	V/V, V/A, A/A, A/V

Table 9-1 List of Mathematical Units

**Note:** If the units of two operation source channels are different and the unit combination cannot be identified, the unit of math function will be displayed as “?” (undefined).

## **Math operators**

Math operators perform arithmetic operations on the analog input channels.

### **Addition or subtraction**

If addition or subtraction is selected, the values of function sources 1 and 2 will be added or subtracted point by point and the results will be displayed.

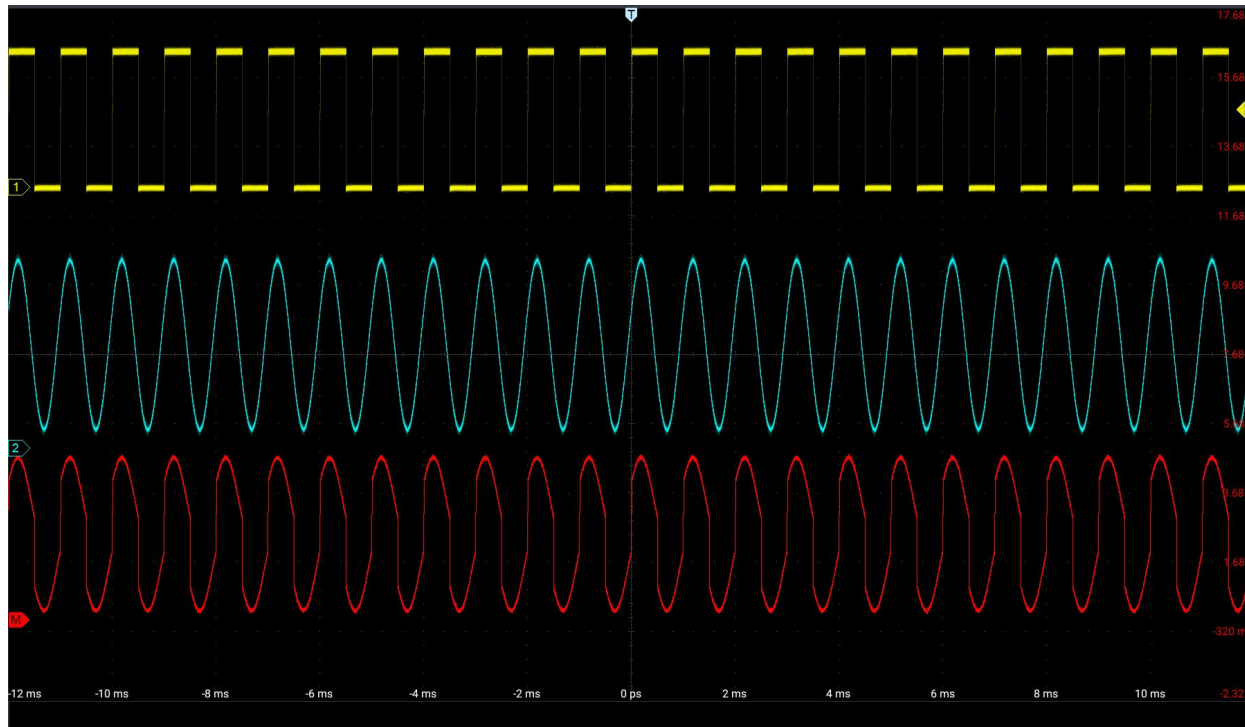


Figure 9-2 Mathematical Operation of CH1 adding CH2

### Multiplication or division

When multiplication or division is selected, the values of function sources 1 and 2 values will be multiplied or divided point by point and the results will be displayed.

Multiplication is useful when viewing the power relationship, if one of the channels is proportional to the current.

## 9.2 FFT Measurement

FFT is used to calculate the Fast Fourier Transform using the analog input channel. FFT record specifies the digitization time of the source and converts it to the frequency domain. After selecting the FFT function, FFT spectrum is plotted as amplitude in V-Hz or dB-Hz on the oscilloscope display screen. The reading of the horizontal axis changes from time to frequency (Hz), while the unit of the vertical axis changes from volt to V or dB.

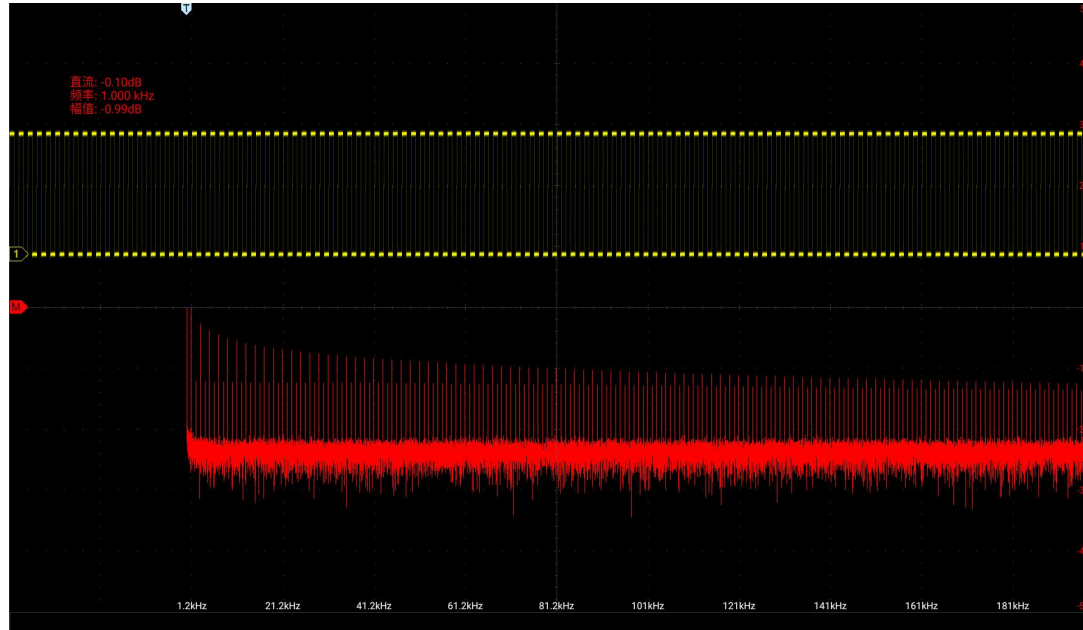




Figure 9-3 FFT Window

## Open FFT

- 1) Swipe up or down at the channel selection area to enter the second channel selection area. Tap the soft key  to open the math channel, left swipe to open math channel menu.
- 2) Tap  spectrum type “Line/Decibel” to open the FFT window (see Figure 9-3 FFT Window).
- 3) Tap the Operation Source box to select the channel for which FFT transform is required.
- 4) Tap the window box to select the window function applied to the FFT input signal.

## Selection of window function

In the FFT transform, four different FFT windows can be selected.

Each window is alternatively used between frequency resolution and amplitude accuracy, and the appropriate window may be selected according to the characteristics of the following windows.

- **Rectangular window**

This is the best window type for resolution frequencies that are very close to the same value, but this type is the least effective at accurately measuring the amplitude of these frequencies. It is the best type of measuring the spectrum of non-repetitive signals and measuring the frequency component close to DC.

Use the “Rectangular” window to measure transients or bursts of signal levels before or after almost the same event. Moreover, this window can be used to measure equal-amplitude sine waves with very close frequencies and wideband random noises with relatively slow spectral variations.

- **Hamming window**

This is the best window type for resolution frequencies that are very close to the same value, and the amplitude accuracy is slightly better than the “Rectangular” window. The Hamming type has a slightly higher frequency resolution than the Hanning type.

Use Hamming to measure sinusoidal, periodic, and narrowband random noises. This window is used for measuring transients or bursts of signal levels before or after events with significant differences.

- **Hanning window**

This is the best window type for measuring amplitude accuracy but less effective for resolving frequencies.

Use Hanning to measure sinusoidal, periodic, and narrowband random noises. This window is used for measuring transients or bursts of signal levels before or after events with significant differences.

- **Blackman-Harris window**

This is the best window type for measuring frequency amplitude, but worst for measuring the resolution frequency.

Use the Blackman-Harris measurement to find the main single-signal frequency waveform for higher harmonics.

Since the oscilloscope performs FFT transform on the finite-length time record, the FFT algorithm assumes that YT waveform is continuously repeated. Thus, when the period is integral, the amplitudes of YT waveform at the beginning and at the end are the same, and waveform will not interrupt. However, if the period of YT waveform is not integral, the waveform amplitudes at the beginning and at the end are different, resulting in high-frequency transient interruption at the junction. In the frequency domain, this effect is called leakage. Therefore, to avoid leakage, the original waveform is multiplied by a window function, forcing the values at the beginning and at the end to be zero.

**Note:** Signals with DC components or deviations will cause errors or deviations in the FFT waveform components.

To reduce DC components, AC coupling can be selected.

### **Persistence**

The oscilloscope supports FFT persistence settings, the default is "None", you can select " $\infty$ " to never erase the previously collected results; select "Normal" to specify the afterglow time, the optional time is 200ms, 500ms, 1s, 2s, 5s, 10s.

## Spectrum type

Select Line, the vertical axis reads V or A; select dB, the vertical axis reads dB. When the spectrum is linear, the waveform is shown in Figure 9-4.

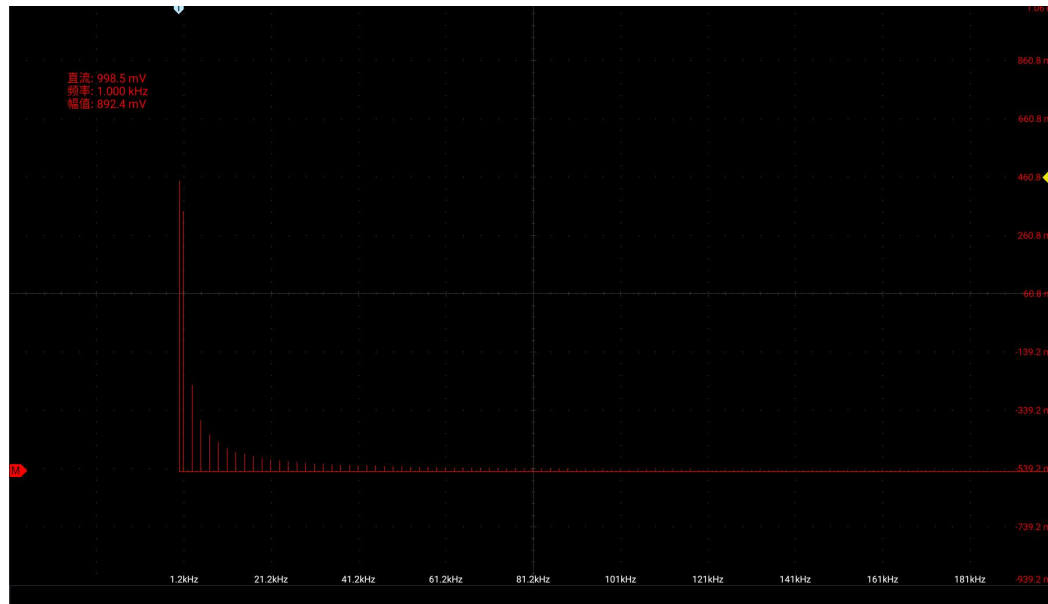


Figure 9-4 Spectrum Amplitude as V-Hz

## Adjust FFT waveforms

## Waveform position



- Select math channel as the current channel. After touching math waveform on the screen with one finger, adjust the waveform display position by dragging upward and downward, leftward and rightward, or tap the fine adjustment button in the lower left corner of the screen for fine adjustment.
- Select the math channel as the current channel, click the 50% button at the bottom of the screen, and click the "Time Base" button again to move the leftmost side (0Hz) of the waveform to the horizontal center of the screen.

### **Horizontal time base scale**

Select math channel as the current channel, tap the time base adjustment button, and adjust the horizontal time base scale. The horizontal time base is stepped in 1-2-5, and the waveform changes either.

For FFT measurement, the reading of the horizontal axis changes from time to frequency (Hz), and it no longer shares the same time base with other analog channels. Therefore, before adjusting the horizontal frequency scale, the math channel must be set as the current channel.

### **Vertical sensitivity**

Tap  or  on the right side of the screen to set the vertical sensitivity (V/div or dB/div) for the channel so that waveform is displayed on the screen at an appropriate size. The vertical sensitivity factor is stepped in 1-2-5 (use 1:1 probe).

**Note:** FFT waveform does not support automatic parameter measurement.

### 9.3 Advanced Math

MHO series oscilloscopes support user-defined editing formulas for waveform calculation. Support the input of functions, operators, channels, constants, variables, etc. The expression supports up to 36 characters.

Click the corresponding button to input and edit the waveform (please click in order, the ones that are grayed out cannot be clicked).

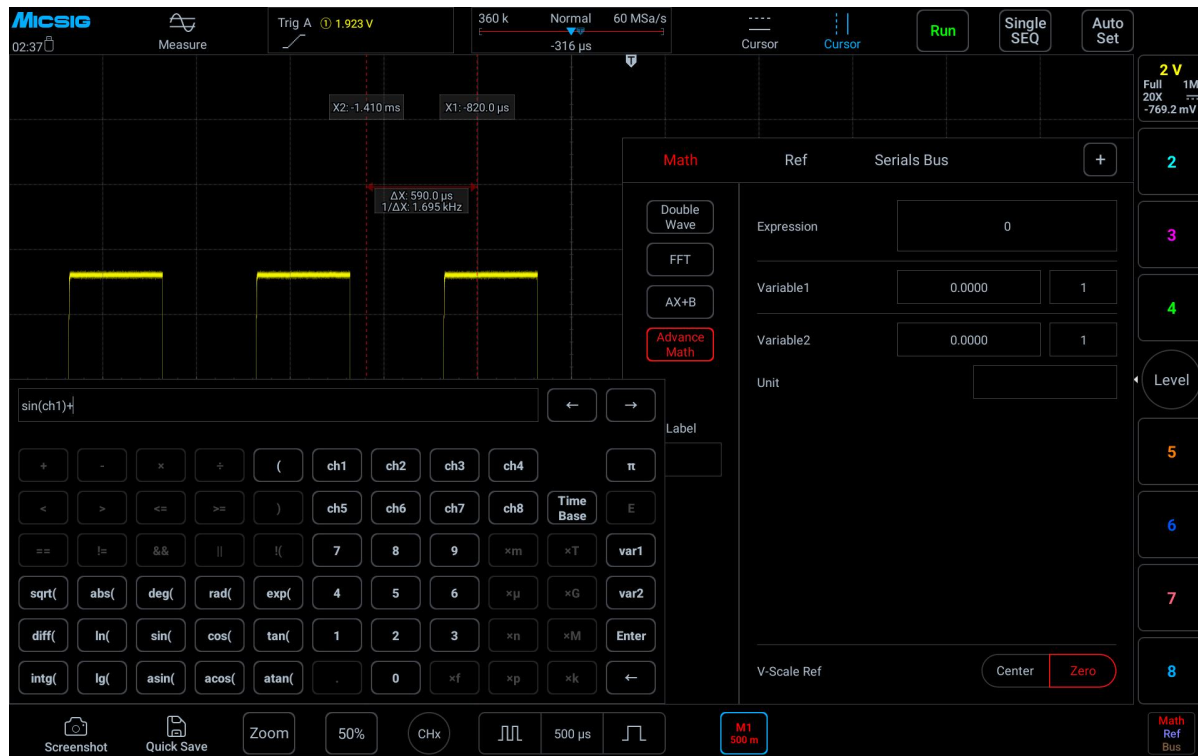


Figure 9-5 Advanced Math

Type	Description	Item	Remark
Function		Sqrt(), Abs(), Deg(), Rad(), Exp(),	Functions can be nested


		Diff(), ln(), Sine(), Cos(), Tan(), Intg(), Log(), arcsin(), arccos(), arctan()	
Channel	Source	Ch1、Ch2、Ch3、Ch4	
Variable	Source	variable1、variable2	When a variable is written in the expression, the input box of the variable appears in the math menu, indicating that it can be input; for example, input 4.1235 -3 for variable 1, which means $4.1235 \times 10^{-3}$ Variable value range -9.9999~9.9999, variable power range -9~9
Operator		+、-、*、/、==、!=、>、<、≥、 ≤、&&、  、!(	
symbol	brackets	(、)	

Value	Source	0, 1, 2, 3, 4, 5, 6, 7, 8, 9, .., $\pi$ , E	
	Source	$10^x$	
	Numerical unit	f, p, n, u, m, K, M, G, T	

Table 9-2 List of Advanced Math

## 9.4 Reference Waveform Call

### Reference waveform call and close

Swipe up or down at the channel selection area to enter the second channel selection area. Left swipe  button to open the reference menu, see Figure 9-5.

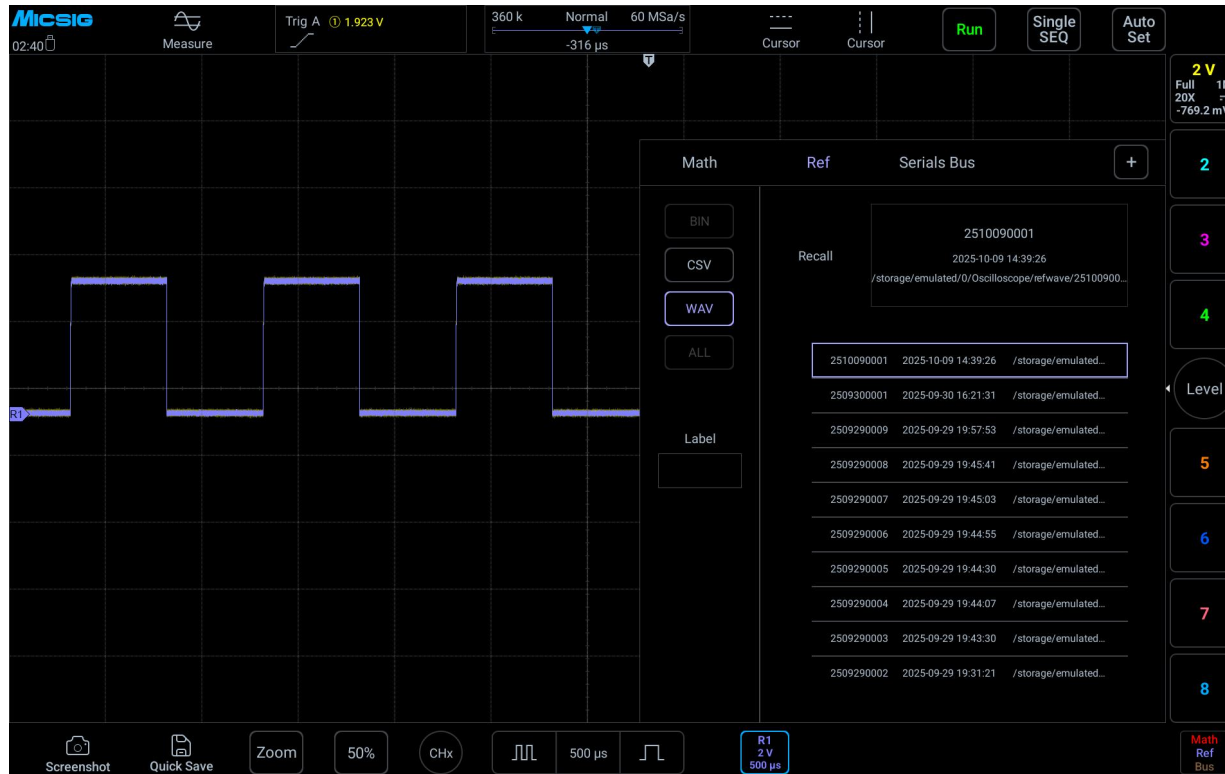




Figure 9-6 Reference Channel Menu

When there are already waveforms loaded into the reference channel, click “Open/Close” button to open or close the reference channel; the reference waveform is displayed in blue-violet, and the four stored waveforms can be displayed simultaneously, wherein the current reference waveform is brighter than non-current reference waveforms.

When there are no waveforms loaded into the reference channel, turn on the “Call” switch to call waveforms.

**Take R1 as an example, with operation steps as follows:**

- 1) Open REF reference menu.
- 2) Tap the “Call” file box under R1 to open the reference file column.
- 3) Click the name of the reference waveform file to be called. The file is loaded into R1 channel. Then, R1 channel is turned on as the current channel waveform, and the reference waveform channel icon  is highlighted. The displayed state changes from “Close” to “Open”. As in Figure 9-7, the brighter reference waveform is shown as the current reference channel.

If there are already files loaded into the reference channel, tap  open the reference channels of all loaded reference files; tap Ref to turn off all currently opened reference waveforms. You can also open a single reference channel through the Open and Close buttons.

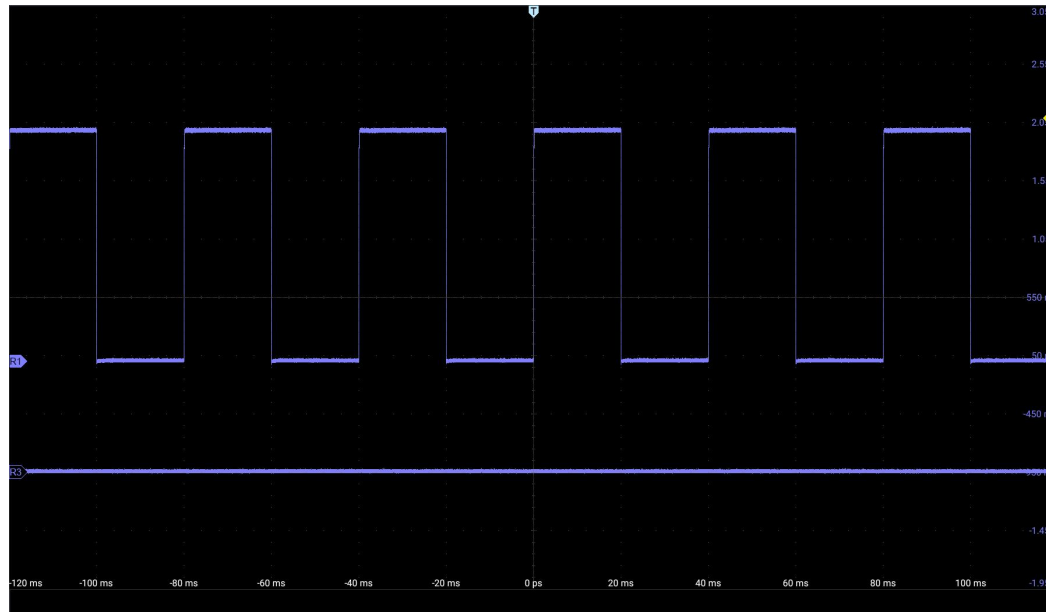



Figure 9-7 Current reference channel

### Close the reference waveform:

- 1) In the reference menu, tap “Open/Close” button in R1 to close the reference waveform.

- 2) Repeat step 1 to close other reference channels.
- 3) Right swipe  to turn off all reference waveforms.

### Reference waveform movement and time base adjustment

The horizontal or vertical movement and zoom of reference waveforms are independent of analog channels, and the adjustments among different reference waveform channels are also independent of each other.

To adjust the reference waveform of a channel, first set the channel as the current channel, and then adjust the reference waveform by move or zoom (in accordance with the analog channel method).

The scale and time base of the current channel reference waveform are displayed on the reference button. After switching the current reference channel, the scale and time base on the reference button change with the change of current reference channel.

## Chapter 10 Display Settings

This chapter contains the detailed information of the display settings and function buttons of the oscilloscope. You are recommended to read this chapter carefully to understand the display setting functions and operations of the MHO series oscilloscope.

- Waveform setting
- Graticule setting
- Color temperature setting
- Menu transparency setting
- Persistence setting
- Horizontal expansion center
- Time base mode selection

In the main menu, tap Display button to enter display settings menu, as shown in Figure 10-1.

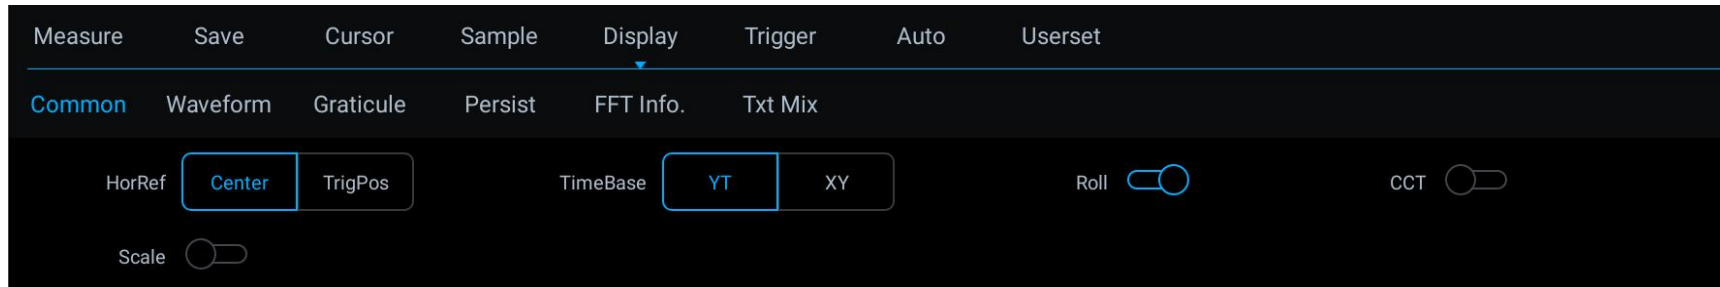


Figure 10-1 Display Settings and Function Buttons

## 10.1 Waveform Settings

Open the display menu, tap Waveform button to open the waveform display menu. This menu is used to set the display mode and brightness of waveform. The waveform display mode is divided into two types: dots and vectors. The waveform brightness percentage is adjustable, and the waveform display setting is shown in Figure 10-2.

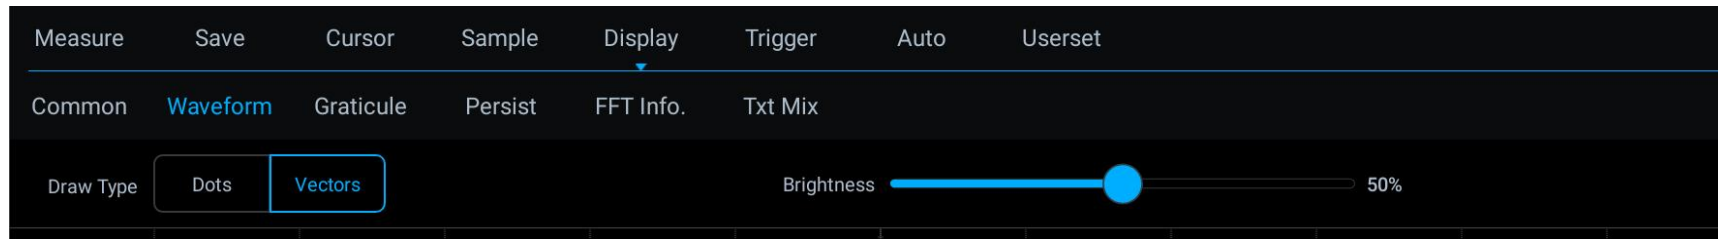


Figure 10-2 Waveform Display Menu

## 10.2 Graticule Setting

Open the display menu and tap Graticule button to open the graticule setting menu (Figure 10-3). Graticule display mode includes: “Full”, “Grid”, “Crosshair” and “Frame”, and the brightness percentage is adjustable.

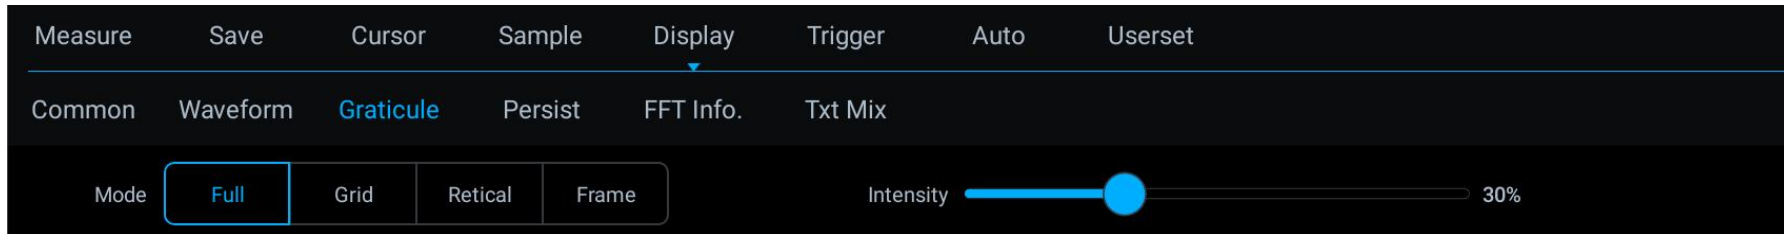


Figure 10-3 Graticule Menu Display

## 10.3 Persistence Setting

Open the display menu and tap Persist key to open the persistence settings menu.

### 1) Persistence setting

In the persistence setting menu, select:

- **None:** None - no persistence.
- **Auto:** Auto — automatic persistence.


- **Normal:** Normal - set the persistence time — After selecting the variable persistence, tap the box on the right of “Adjust” to pop up the persistence time selection box (Figure 10-4) and set the persistence time. It can be set between 10ms and 10s.
- ∞: Infinite persistence - never erase the results of previous acquisitions

Infinite persistence can be used to measure noise and jitter, display the worst-case extremes of varying waveforms, find time violations, capture events that occur infrequently.



Figure 10-4 Persist time adjust

## 2) Erase persistence

To erase the previously acquired results from the display, tap  key or adjust the horizontal time base and vertical sensitivity. The oscilloscope will erase the persistence display and start the cumulative acquisition again.

## 10.4 FFT Information

After FFT calculation, select the desired trace (e.g., M1) to view its DC component, frequency, and amplitude in the upper-left corner of the screen.

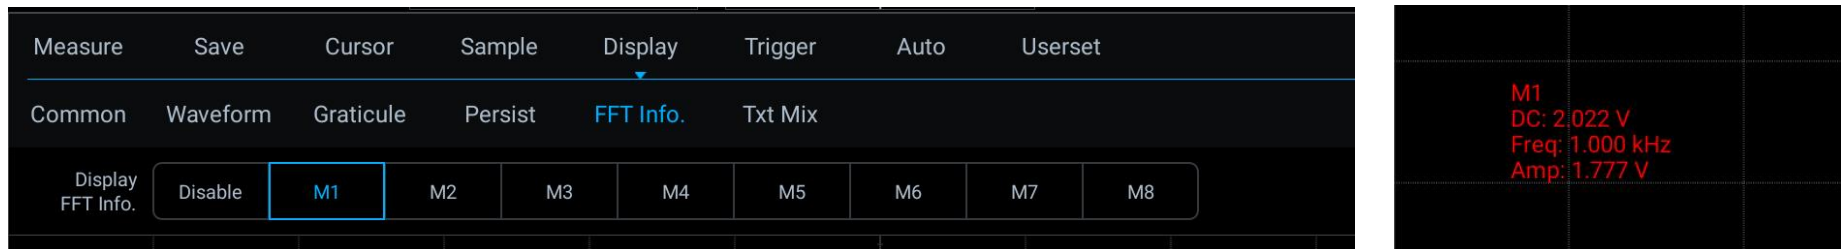


Figure 10-5 FFT Information Display

## **10.5 Txt Mix**

During bus decoding, Txt Mix function allows decoded information from different channels to be displayed simultaneously, making it easier for users to perform comparative analysis. Connect multiple signals under test to the oscilloscope, select the same bus decoding type, then click and navigate to Display - Txt Mix. By selecting S1, S2, etc., the decoded information from multiple channels can be displayed at the same time.



Figure 10-6 TXT Combine Display

## 10.6 Time Base Mode Selection

Time Base Reference can be set to two modes: Screen Center or Trigger Position.

### 1) Screen Center

In this mode, adjusting the time base expands or compresses the waveform with the center of the screen as the reference point, while the delay time remains unchanged.

### 2) Trigger Position

In this mode, adjusting the time base expands or compresses the waveform with the trigger position as the reference point, and the delay time changes accordingly with the horizontal time base.

## 10.7 Color temperature setting

Enable the Color Temperature mode, and the waveform display is shown in Figure 10-7.



Figure 10-7 Color Temperature Mode

## Chapter 11 Sampling System

This chapter contains the detailed information of the sampling system of the oscilloscope. You are recommended to read this chapter carefully to understand the setting and operation of the sampling system of the MHO series oscilloscope.

- Sampling overview
- Run, stop and single sequence acquisition (running control)
- Select sampling mode
- Record length and sampling rate
- Segmented storage

## 11.1 Sampling Overview

To understand the sampling and sampling modes of the oscilloscope, you need to understand the sampling principle, aliasing, oscilloscope bandwidth and sampling rate, oscilloscope rise time, required oscilloscope bandwidth, and the influence of memory depth on the sampling rate.

### Sampling principle

According to the Nyquist sampling principle, for a bandwidth-limited signal with the maximum frequency  $f_{\text{MAX}}$ , the equidistant sampling frequency  $f_s$  must be twice as large as the maximum frequency  $f_{\text{MAX}}$ , so that a unique signal can be reconstructed without aliasing.

$$f_{\text{MAX}} = \frac{f_s}{2} = \text{Nyquist frequency } (f_N) = \text{alias frequency}$$

### Aliasing

Aliasing occurs when the signal is under sampled ( $f_s < 2f_{\text{MAX}}$ ). Aliasing is signal distortion caused by incorrectly reconstructing low frequencies from a small number of sampling points.

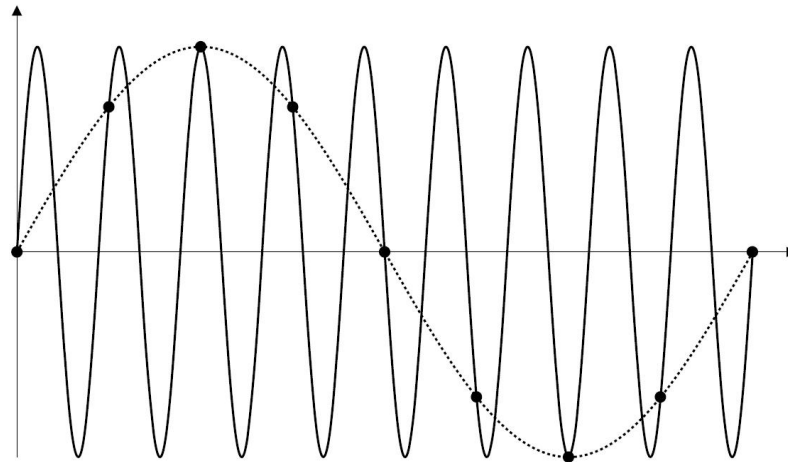


Figure 11-1 Aliasing

### Oscilloscope bandwidth and sampling rate

The oscilloscope bandwidth usually refers to the lowest frequency at which the input signal sine wave is attenuated by 3dB (-30% amplitude error).

For oscilloscope bandwidth, according to the sampling principle, the required sampling rate is  $f_s=2f_{BW}$ . However, this principle assumes that there is no frequency component exceeding  $f_{MAX}$  ( $f_{BW}$  in this case) and requires a system with ideal brick-wall frequency response.

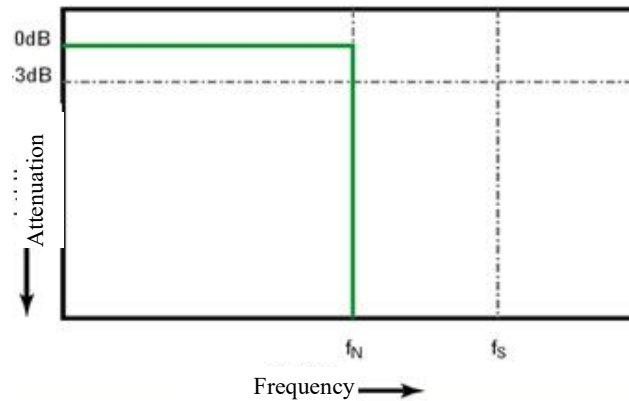


Figure 11-2 Theoretical Brick-Wall Frequency Response

However, digital signals have frequency components that exceed the fundamental frequency (the square wave consists of sine waves at fundamental frequency and an infinite number of odd harmonics), and for bandwidths of 500MHz and below, the oscilloscope typically has Gaussian frequency response.

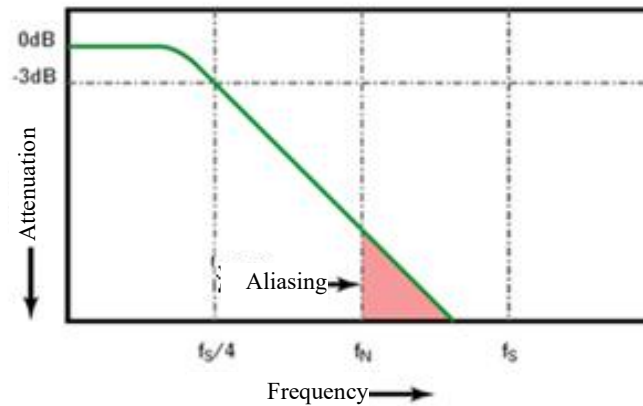


Figure 11-3 Sampling Rate and Oscilloscope Bandwidth

The oscilloscope bandwidth is limited to 1/4 sampling frequency and reduces the frequency response above the Nyquist frequency.

Therefore, in fact, the oscilloscope sampling rate should be 4 times or more of its bandwidth:  $f_s \geq 4f_{BW}$ . This can reduce aliasing and cause greater attenuation in the aliased frequency components.

## Oscilloscope rise time

The oscilloscope rise time is closely related to its bandwidth. The rise time of an oscilloscope with Gaussian type frequency response is approximately  $0.35/f_{BW}$  (based on the standard from 10% to 90%).

The oscilloscope rise time is not the fastest edge speed that an oscilloscope can accurately measure. It is the fastest edge speed that the oscilloscope can produce.

## Desired oscilloscope bandwidth

The oscilloscope bandwidth required to accurately measure signal is primarily determined by the rise time of the signal rather than the frequency of the signal.

The following steps can be used to calculate the required oscilloscope bandwidth:

- 1) Determine the fastest edge speed.

Rise time information is typically obtained from the published device specifications used in the design.

- 2) Calculate the maximum “actual” frequency component.

According to Dr. Howard W. Johnson's book "*High-Speed Digital Design—A Handbook of Black Magic*", all fast edges have wirelessly continuous frequency components. However, there is a turning point (or "inflection point") in the fast edge spectrum at which frequency components above  $f_{knee}$  are negligible in determining the signal shape.

$$f_{knee} = 0.5 / \text{signal rise time (based on 10\% - 90\% threshold)}$$

$$f_{knee} = 0.4 / \text{signal rise time (based on 20\% - 80\% threshold)}$$



- 3) The multiplication factor for the desired accuracy is used to determine the required oscilloscope bandwidth.



Desired Accuracy	Desired Oscilloscope Bandwidth
20%	$f_{BW} = 1.0 \times f_{knee}$
10%	$f_{BW} = 1.3 \times f_{knee}$

3%	$f_{BW}=1.9xf_{knee}$
----	-----------------------




Figure 11-4 Bandwidth Corresponding to Oscilloscope Measurement Accuracy

## 11.2 Run/Stop Key and Single SEQ Key

Use softkeys in the button area to start and stop the oscilloscope acquisition system: Run/Stop  button and Single Sequence Acquisition  button.

- When the oscilloscope is running,, it indicates that the oscilloscope is running, that is, it meets the trigger condition and data acquisition is being performed. The green “” or “” is displayed in the upper left corner of the screen.

To stop data collection, tap the Run/Stop button. After stopping, the screen displays the last acquired waveform.

- When the Run/Stop button  is displayed in red, it indicates that data acquisition has stopped. The red “” is displayed in the upper left corner of the screen. To resume data acquisition, press the Run/Stop button again.
- To capture and display single acquisition (whether the oscilloscope is running or stopped), tap the single sequence key  for a single acquisition.

### 11.3 Select Sampling Mode

Open the main menu, tap the sampling mode option under “Sampling”, and choose among the four sampling modes: normal, average, peak and envelope in the pop-up box.

The sampling modes of all channels are same. That is, if the sampling mode of any channel is changed, the sampling mode of all channels is changed at the same time.

#### Normal sampling mode

Oscilloscope samples signal through equivalent time intervals to build waveform. When the time base of 20 ns or faster is chosen, the oscilloscope automatically performs an interpolation algorithm that inserts difference point between sampling points.

This mode produces the best display effects for most waveforms.

### **Peak sampling mode**

In peak sampling mode, when the horizontal time base setting is low, the minimum and maximum sample values are retained to capture rare events and narrow events (with any noise expanded). This mode will display all pulses that are at least as wide as the sampling period.

When the time base is set to 200ms and above, the oscilloscope will automatically exit the peak sampling mode and switch to the normal sampling mode.

### **Burr or narrow pulse capture**

Burr is the rapid change in waveform that is usually narrower than waveform. Peak sampling mode can be used to view burr or narrow pulses more easily. In the peak sampling mode, narrow burr and transition edges are brighter than in those in the “normal” sampling mode, making them easier to see.

Applying the peak sampling mode can avoid signal aliasing but show more real noises.

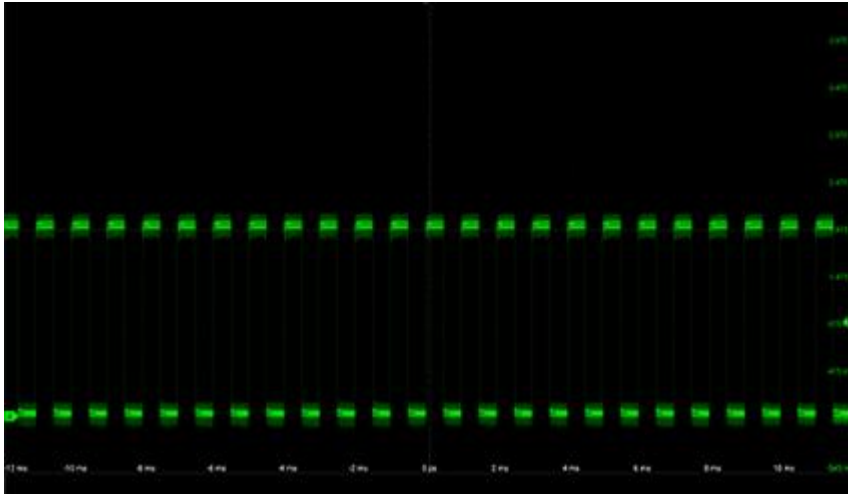


Figure 11-5 Sine Wave with Burr

Normal Sampling Mode

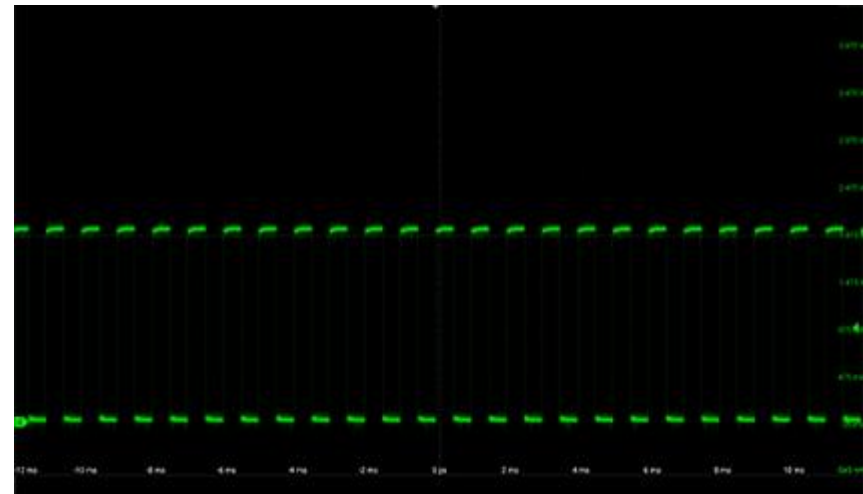


Figure 11-6 Sine Wave with Burr

Peak Sampling Mode

**Use peak detection mode to find burrs**

- 1) Connect signal to the oscilloscope to be stably displayed.
- 2) To find burr, select the peak sampling mode in Sampling Mode option in the Channel menu.
- 3) In the menu, tap “Display” → “Persistence”, then tap “∞” (infinite persistence). The oscilloscope will restart sampling data and display them on the screen.
- 4) Use the zoom mode to represent the characteristics of burr:
  - a. Tap the “Zoom” button in the main menu to open the zoom window.
  - b. To get a better resolution of burr, expand the time base to set the expanded portion of the normal window view around burr.

### **Average sampling mode**

The average sampling mode averages multiple acquisition results to reduce random or unrelated noises in the displayed signal. The average of multiple sampling results requires stable trigger.

The average number can be set in the selection box after the average sampling mode, and can be set to eight order of magnitudes: 2, 4, 8, 16, 32, 64, 128 and 256.

The higher the average number is, the slower the response of the displayed waveform-to-waveform changes. A compromise must be made between the response speed of waveform versus the changes and the degree of noise reduction shown on the signal.

### **Use average sampling mode**

- 1) Open the channel menu and select the average sampling mode in the sampling mode option.
- 2) Press the number box on the right of the average sampling mode box to pop up the average number and then tap it to set the average number that can best eliminate displayed waveform noises.

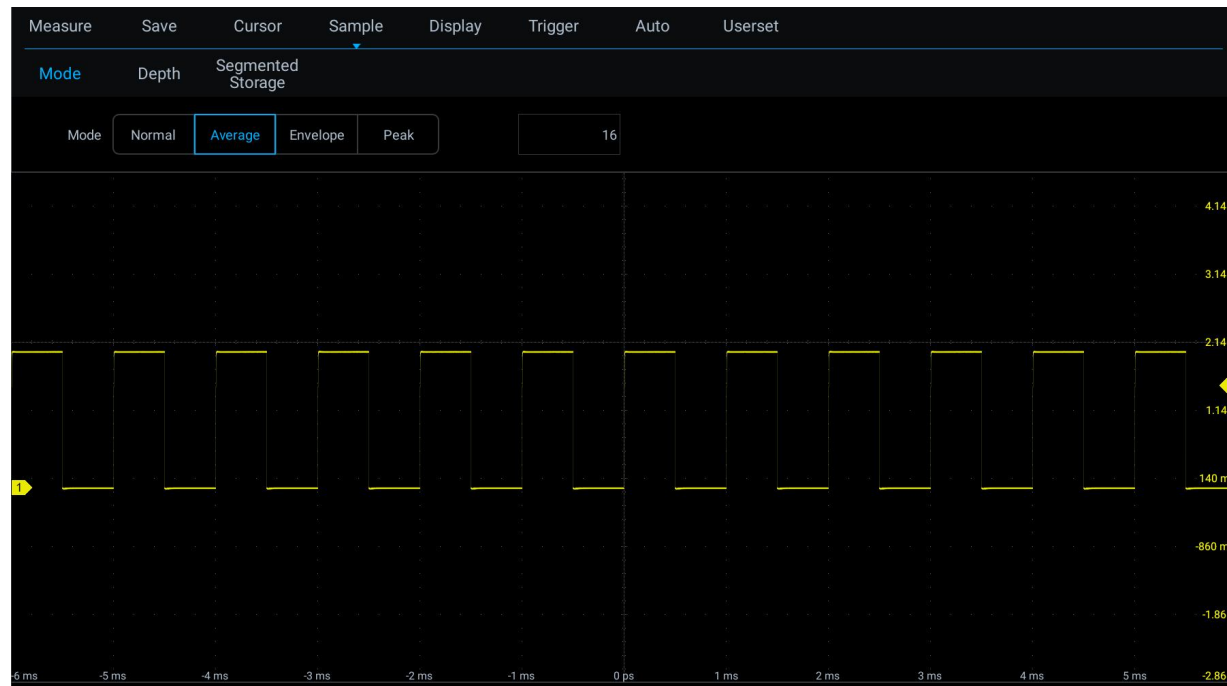


Figure 11-7 Waveform after choosing the average sampling mode, with average number 16

### Envelope sampling mode

In the envelope sampling mode, the superposition effect of several sampled waveforms can be observed. The maximum and minimum values of one signal can be captured in the specified N sample data, and the number of waveform superpositions can be set to 2, 4, 8, 16, 32, 64, 128, 256 or  $\infty$ .

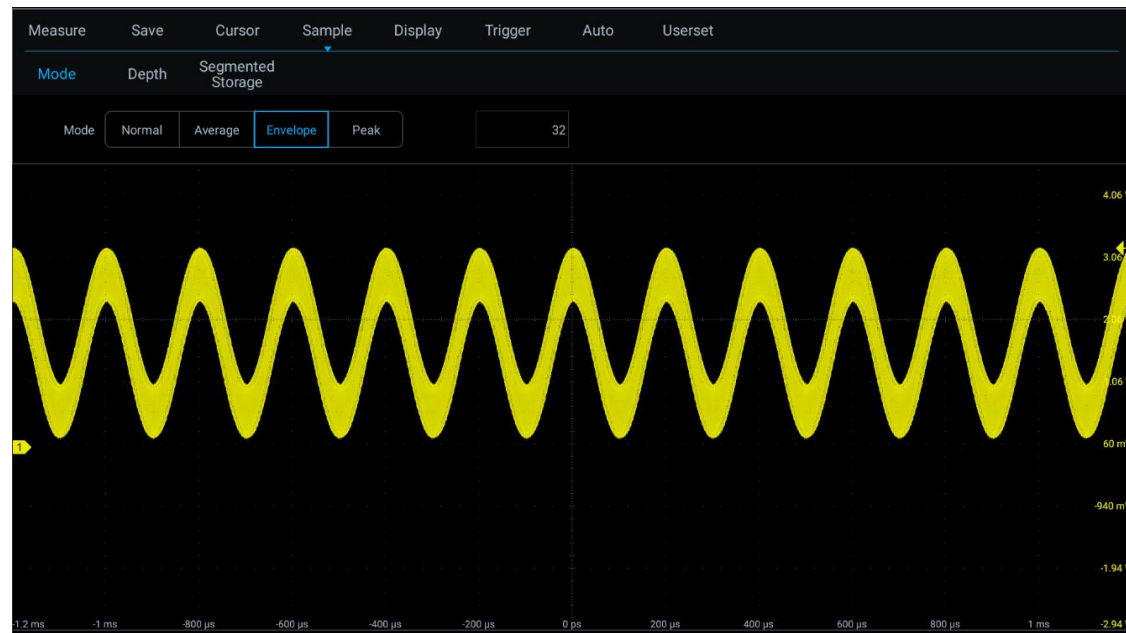


Figure 11-8 Signal in Envelope Sampling Mode (32)

## 11.4 Record Length and Sampling Rate

The record length is the data volume for each captured waveform. For example, if the record length is 700K, it means that 700K sample points are captured by one trigger.

In the main menu, tap "Sample" to enter the record length setting menu, which can be set by tapping the corresponding record length.

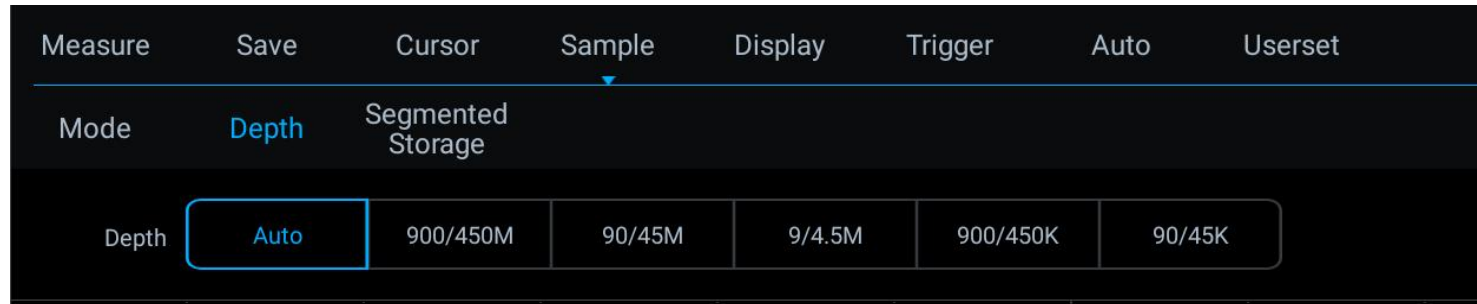


Figure 11-9 Record Length

In normal refresh mode, the record length can be set to 90k, 0.9M, 9M, 90M, 900M, Auto.

### Record length and sampling rate

The record length is data volume collected per waveform capture. For example, if the record length is 360K, it means that 360K sample points are captured by one trigger.

The oscilloscope record length and sampling rate have the following relationship:

**Sampling rate = record length / acquisition time**

Generally, the oscilloscope acquisition time is exactly the display time on the current entire screen (current horizontal time base $\times$ 12).

For example, the oscilloscope has a storage depth of 180K, a sampling rate of 3GSa/s, and a horizontal time base of 5us/div, then the acquisition time is 60us, that is, 5us/div  $\times$  12div.

However, when the fast time base (below 50 ns) or the record length is set to a fixed value, the oscilloscope acquisition time does not necessarily represent the display time on the current entire screen.

For example: if the oscilloscope has a memory depth of 9K, a sampling rate of 3GSa/s, and a horizontal time base of 20ns, the acquisition time is 3000ns, which is 12.5 times the current entire screen display time.

Or, set the storage depth to 18K (fixed value), the sampling rate to 6GSa/s, and the horizontal time base to 100ns.

The acquisition time is 3us, which is 2.5 times the current entire screen display time.

Channels 1 and 2, 3 and 4, 5 and 6, 7 and 8 of the MHO 6 series oscilloscopes are divided into four groups, and each group shares a maximum sampling rate of 6 GSa/s and a storage depth of 1.8GMpts.

When channel 1 and channel 2, or channel 3 and channel 4 are turned on, the sampling rate of both channels will be halved. For example, when channels 1 and 2 are turned on, the sampling rates of channels 1 and 2 are both 3GSa/s; but when channel 1 and channel 3, or channel 2 and channel 4 are turned on, the sampling rates of the two channels constant. For example, when channels 1 and 3 are on, the sampling rates of channels 1 and 3 are both 6GSa/s;

If any three channels are turned on or all four channels are turned on, the sampling rate of each channel will become 1/2 of the maximum sampling rate. For example, when channels 1, 2, and 3 are on, the sampling rates of channels 1, 2, and 3 are all 3GSa/s.

## 11.5 Segmented storage

MHO series support segmented storage function. Segmented storage divides a large memory into several small segments. Each triggered waveform uses one segment. Different storage depths will result in different number of segments. Each waveform stored in the trigger has a time stamp. The stored waveforms can be played and viewed in a single frame or as a whole by fitting.

It is mainly used for the collection, viewing and analysis of signals with longer intervals and higher frequencies.

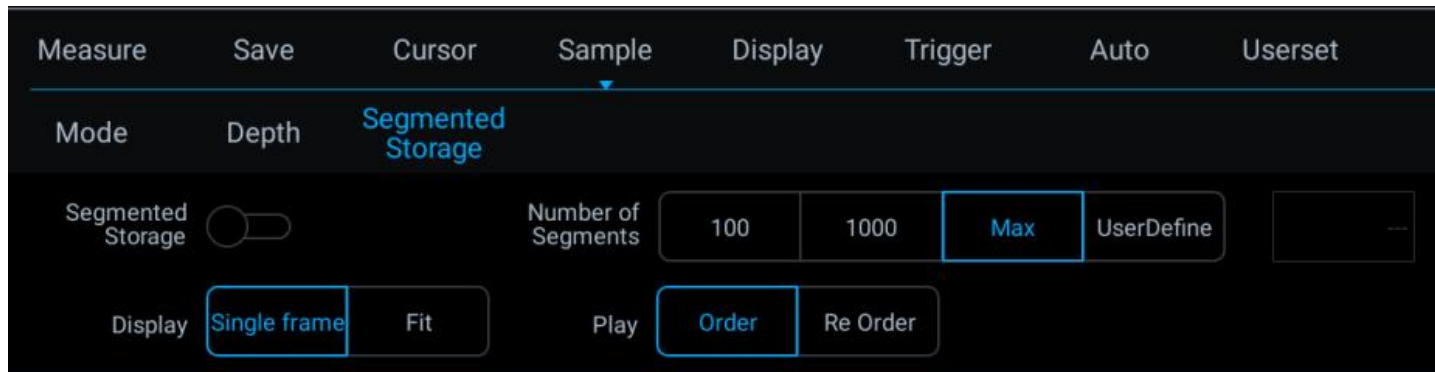


Figure 11-10 Segmented storage settings

### 11.5.1 Segment setting

Open the main menu, tap "Sample", and select the "Segmented Storage" option in the secondary menu to set segmented storage.

The number of segments can be set at different record lengths. The number of segments is based on the record length of the oscilloscope. When the record length is set to "Auto", the number of segments can be freely set between 1 and the maximum number of segments, where the maximum number of segments is 10,000.

When the record length is manually selected, the maximum number of segments allowed to be set is different for different record lengths. When switching the record length, if the number of segments set is greater than the maximum number of segments allowed under this record length, the number of segments will be automatically changed to the maximum number of segments allowed.

The "Maximum" option in segment number selection represents 10000 when the record length is set to automatic. When the record length is manually selected, the number of segments represented will change with the selected record length.

For example:

MHO6 series oscilloscope, when the record length is set to automatic, the number of segments can be set to 1-10000; when the record length is manually changed to 180/90K, the maximum number of segments allowed is 7999 when the record length is 360/180K. The required number of segments can also be modified between 1-7999.

Note: Segmented storage will be automatically turned off in scroll mode. To use segmented storage when the time base is greater than 100ms, please turn off scroll mode manually.

## 11.5.2 Waveforms acquisition

There are two collection methods, regular acquisition and single acquisition.

Conventional acquisition includes automatic and normal. The waveform collected each time is displayed on the screen in time, occupying one segment. After all segments are used up, cyclic storage is implemented.

Single acquisition will not be displayed during the acquisition process and will be displayed after stopping the acquisition; one acquisition will fill all segments and stop acquisition after the acquisition is completed (all segments are filled); during the acquisition process, you can press the "Stop" button, stop collecting.

**Note:** When storing in segments, it is recommended to set the trigger mode to normal in order to store more valid signals.



Figure 11-11 Segmented storage waveform acquisition

### 11.5.3 Display and View

It is divided into single frame display and fitting display.

Single frame display displays the waveforms of each segment individually on the screen in sequence. During regular acquisition, each frame of waveform will be displayed in the normal display manner. During single acquisition, only the last frame of waveform collected will be displayed. In the stopped state, you can view the

stored segments frame by frame, the previous frame/next frame, locate a certain frame, play in sequence, play in reverse order, and change the playback rate.

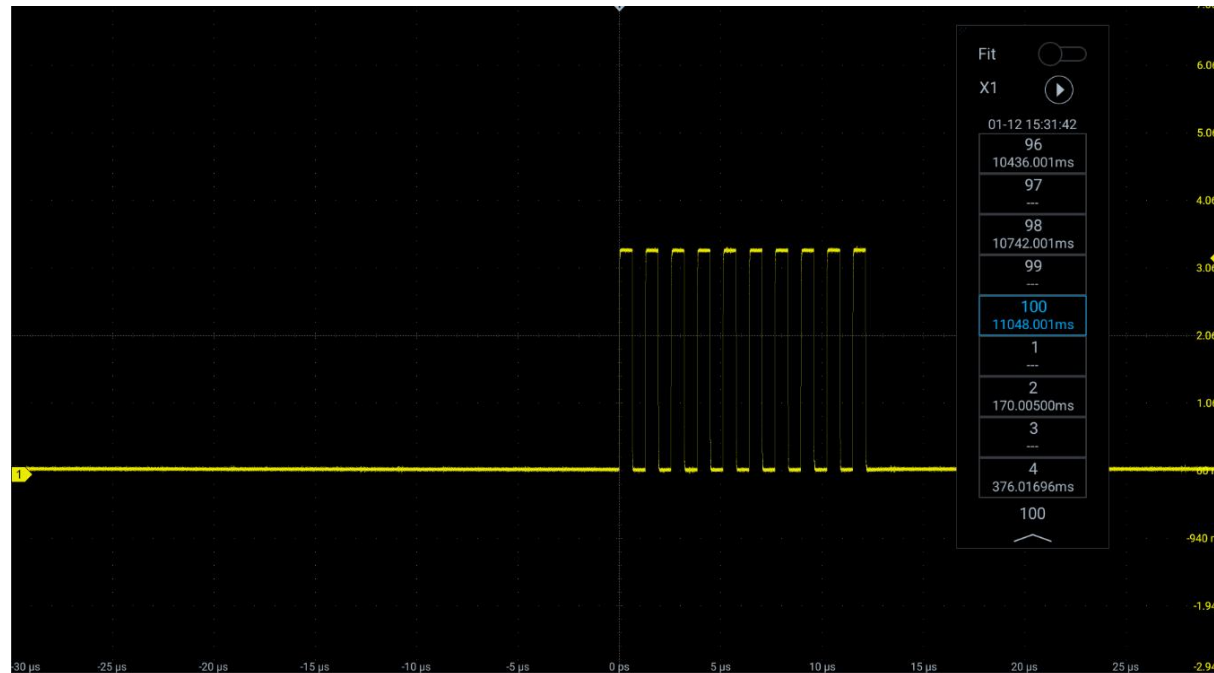


Figure 11-12 Segmented storage single frame viewing

Fitting display is to superimpose the waveforms of selected segments within a certain range and display them on the screen. You can set the starting and ending frames for fitting display. Usually, the waveform of the last frame

can be fitted and displayed on the screen to see if there is any abnormality. If any abnormality is found, the abnormality can be located by changing the start frame and the end frame.

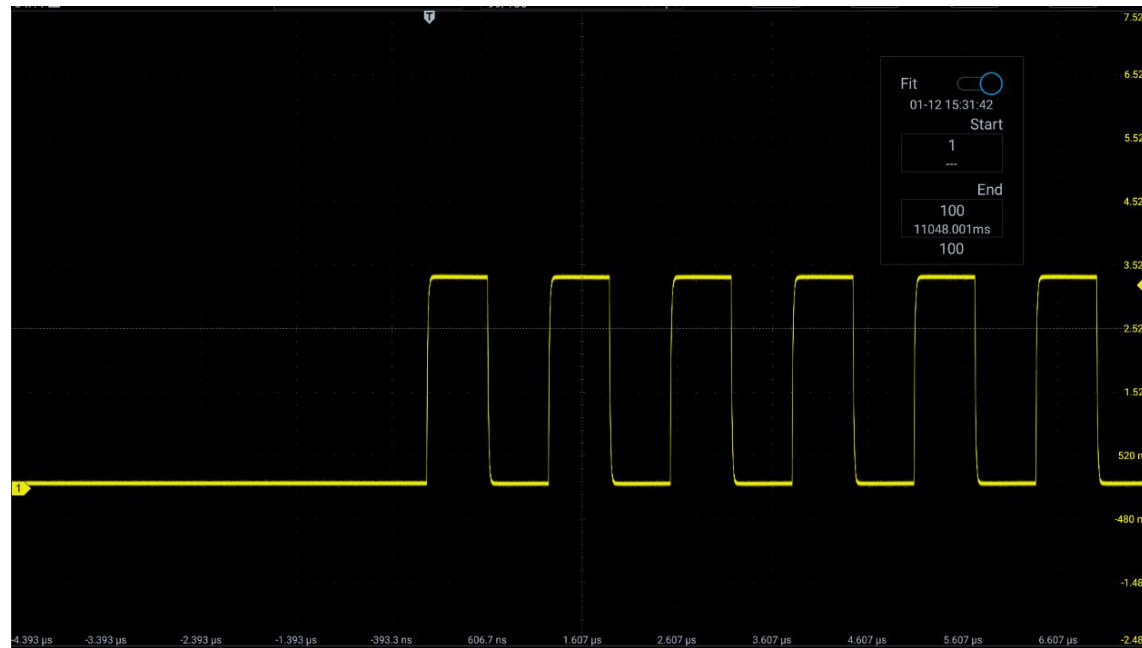


Figure 11-13 Segmented storage fitting view

In both single frame display and fitting display, you can change the gear and position of the waveform, use zoom, etc.

The navigation bar and the menu are mutually exclusive. When the menu is opened, the navigation bar disappears.

If necessary, it is opened in the bottom shortcut menu.

To save waveforms in segmented storage, please refer to Chapter 8 "[8.3 Waveform Storage](#)".

For segmented storage measurement, please refer to Chapter 7 "[7.1 Automatic Measurement](#)".

Segmented storage review does not currently support bus decoding.

### **11.5.4 Example of segmented storage**

The input signal is connected to channel 1, with a duration of 1ms and an interval of 1ms.

Set the vertical scale of the oscilloscope to 2V, the horizontal scale to 200us, N edge trigger, trigger level to 2.4V, trigger mode to normal, and then set segmented storage:

- 1) Open the main menu, sampling, segmented storage;
- 2) Set the number of segments to 1000;
- 3) Set the display mode to fitting;

- 4) Set the number of fitting segments to 1-1000;
- 5) Enable segmented storage;
- 6) Select single trigger.

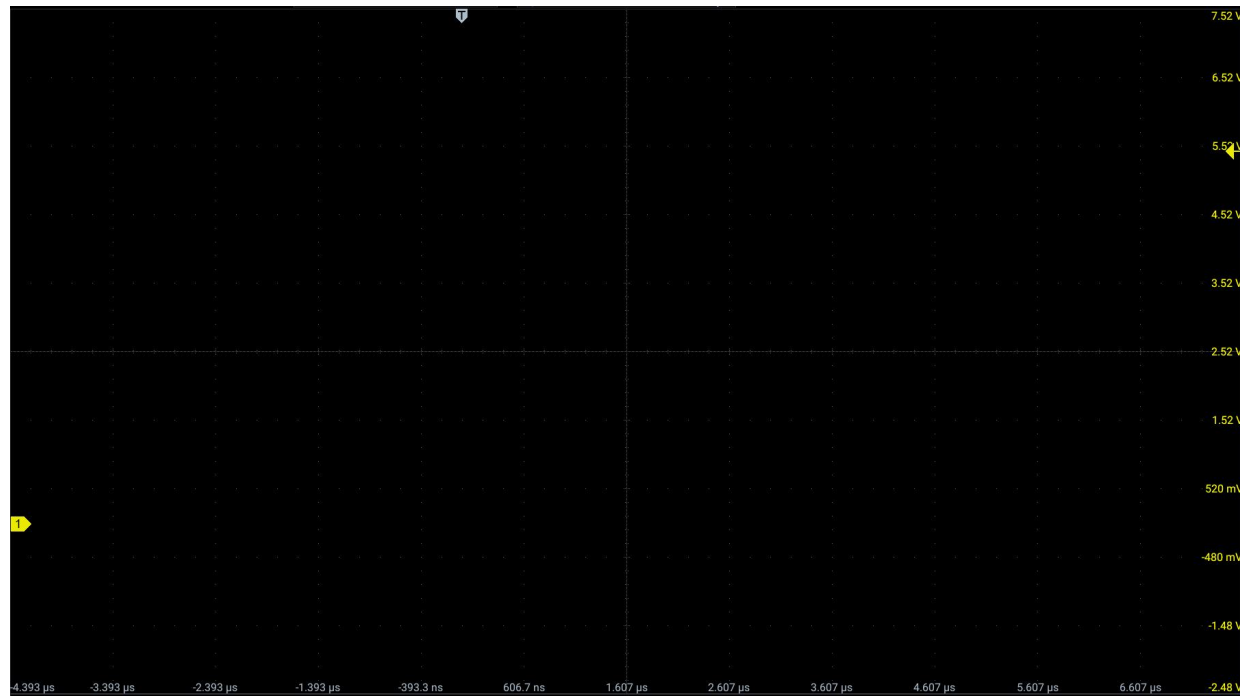


Figure 11-14 Single trigger segmented storage

During the sampling process, there is no waveform display on the screen. After the sampling is completed, all waveforms in the 1-1000 segment are fitted and displayed on the screen.

After observing, turn off the fit display:

- 1) Click the play button to start playing frame by frame;
- 2) Slide the indicator bar in reverse direction to play in reverse order;
- 3) Long press the play button to change the play rate;
- 4) Short press the play button to stop playing.

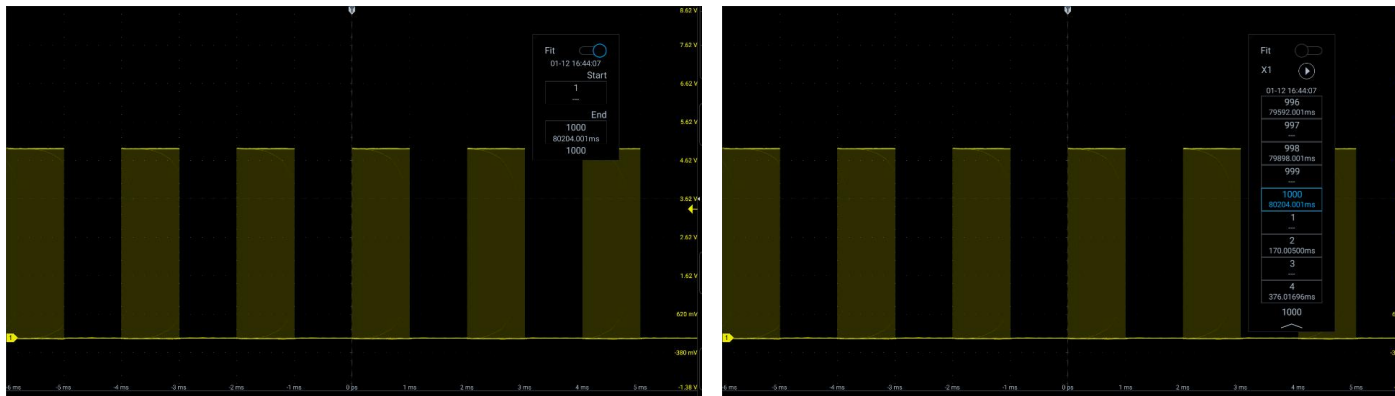


Figure 11-15 View after segment collection is completed


## Chapter 12 Serial Bus Trigger and Decode

This chapter contains the detailed information of serial bus decoding. You are recommended to read this chapter carefully to understand the setting and operation of MHO bus trigger and decode.

This chapter mainly include the below contents:

- UART (RS232/RS422/RS485) bus trigger and decode
- LIN bus trigger and decode
- CAN (FD) bus trigger and decode
- SPI bus trigger and decode
- I2C bus trigger and decode
- ARINC429 bus trigger and decode
- 1553B bus trigger and decode




Swipe up or down at the channel selection area to enter the second channel selection area, tap  to enable decoding, open bus configuration menu, select bus type, there are 8 bus types: UART (RS232/RS422/RS485), LIN, CAN, CAN FD, SPI, I2C, ARINC429, 1553B, where channels S1 and S2 can be used for decoding simultaneously. Open the trigger setting menu, choose an appropriate trigger type, the corresponding bus trigger type and trigger mode can be set when the bus trigger is selected, and the serial bus is displayed in graphic form.

In the serial bus decode mode, if it is screen rolling in other modes, the time base is automatically adjusted to 1ms when switching to serial decode (the maximum time base supported by the serial decode mode is 100ms); in Zoom mode, the enlarged signal can be decoded and displayed. The normal display window supports a maximum time base of 100ms. When decoding is enabled, clicking “AUTO” will set the trigger type to be the same as the decode channel bus type. The bus type selection menu is shown in Figure 12-1:



Figure 12-1 Bus Type Selection Menu

Click the bottom button , then swipe up from the bottom of the screen. Tap the key “Serials TXT” to open the text decoding mode.

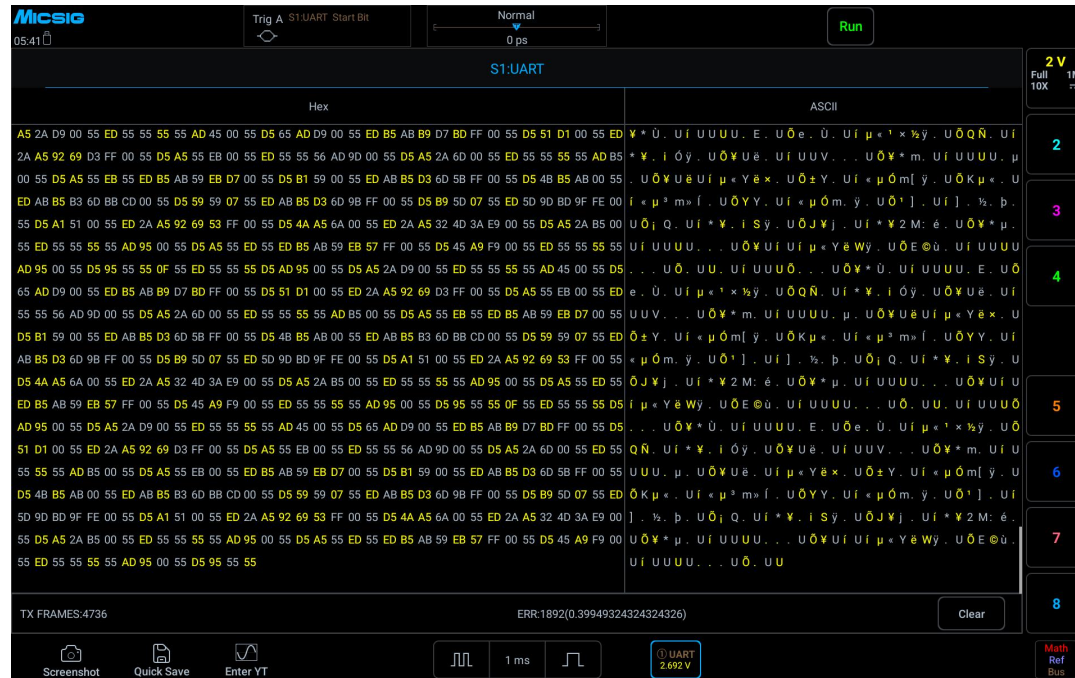




Figure 12-2 Bus Decode Text Mode

Tap the  to exit decoding text mode.

**Description:**

Two decode channels S1&S2 in the text interface must be configured identically to be opened, and each channel is displayed in chronological order with different colors;

S1/S2/S1&S2 are the channel configuration bus information, and X knob is rotated or the label is switched to change the bus channel;

Clicking  save during the text acquisition process can save all currently acquired data. If the data volume is too large, “Wait” will be displayed, and the save success prompt will be displayed.

Oscilloscope can be used as a USB storage device to view saved files on a computer, as shown in Figure 12-3:

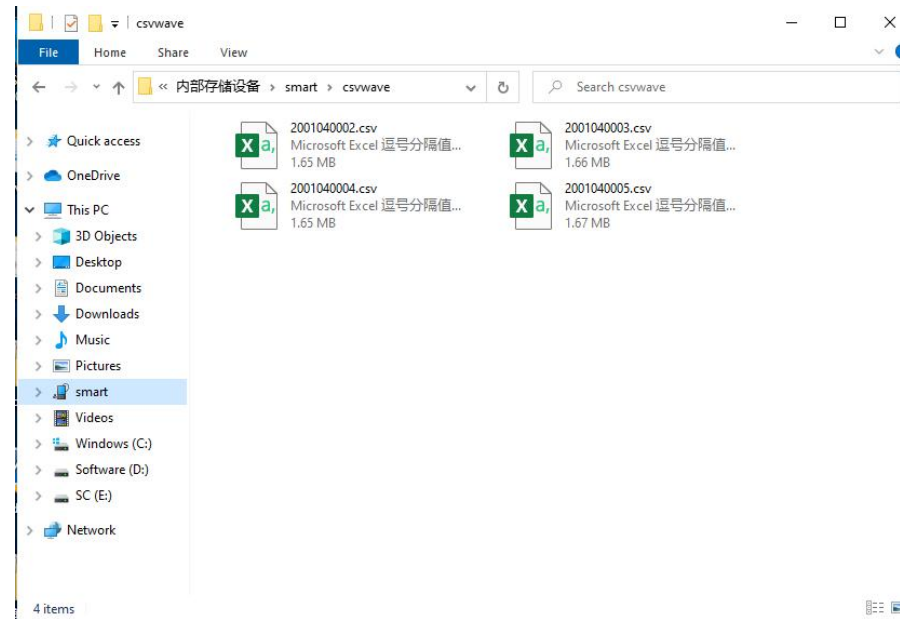




Figure 12-3 Bus Text Storage Files

**Note:** In decoding text mode, only decoding related operations are enabled, and the other buttons are not selectable by default.

## 12.1 UART (RS232/RS422/RS485) Bus Trigger and Decode

For correctly decoding UART(RS232/RS422/RS485) bus data and making trigger stable, the bus configuration, trigger mode setting and trigger level need to be adjusted.

- **Bus configuration**

Tap the button  and select  to open the bus configuration menu, as shown in Figure 12-4.

The RX channel must be chosen and the following parameters must be set according to measured signals:

**Idle Level** — Choose Idle Low or Idle High to match the idle state of measured equipment. For RS232, Idle Low may be chosen.

**Note: RS232 industry standard uses “negative logic”, namely high level is logic “0” and low level is logic “1”.**

**Parity Bit** — Choose odd, even or none depending on measured equipment.

**Word Length** — Set the number of bits in UART word to match measured equipment (5-9 bits available).

**Baud Rate** — Choose the baud rate that matches signal in measured equipment.

The baud rate can be set within the range from 1.2Kb/S to 8.000Mb/S.

**Bus Display** — Choose hexadecimal, binary or ASCII code display.



Figure 12-4 UART Bus Configuration Menu

When word is displayed in ASCII, 7-bit ASCII format is used. Valid ASCII characters are between 0x00 and 0x7F. To display in ASCII, at least 7 bits in the “Bus Configuration” must be chosen. If ASCII is chosen and the data exceeds 0x7F, the data will be displayed in hexadecimal.

Click the baud rate setting box to open the baud rate selection column. If Custom is chosen, click to pop up the virtual soft keyboard, select the bit to be modified, enter value, and click “Enter” on the virtual soft keyboard to complete setting. The baud rate can be set from 1.2Kb/S to 8.000Mb/S. The virtual soft keyboard is shown in Figure 12-5:

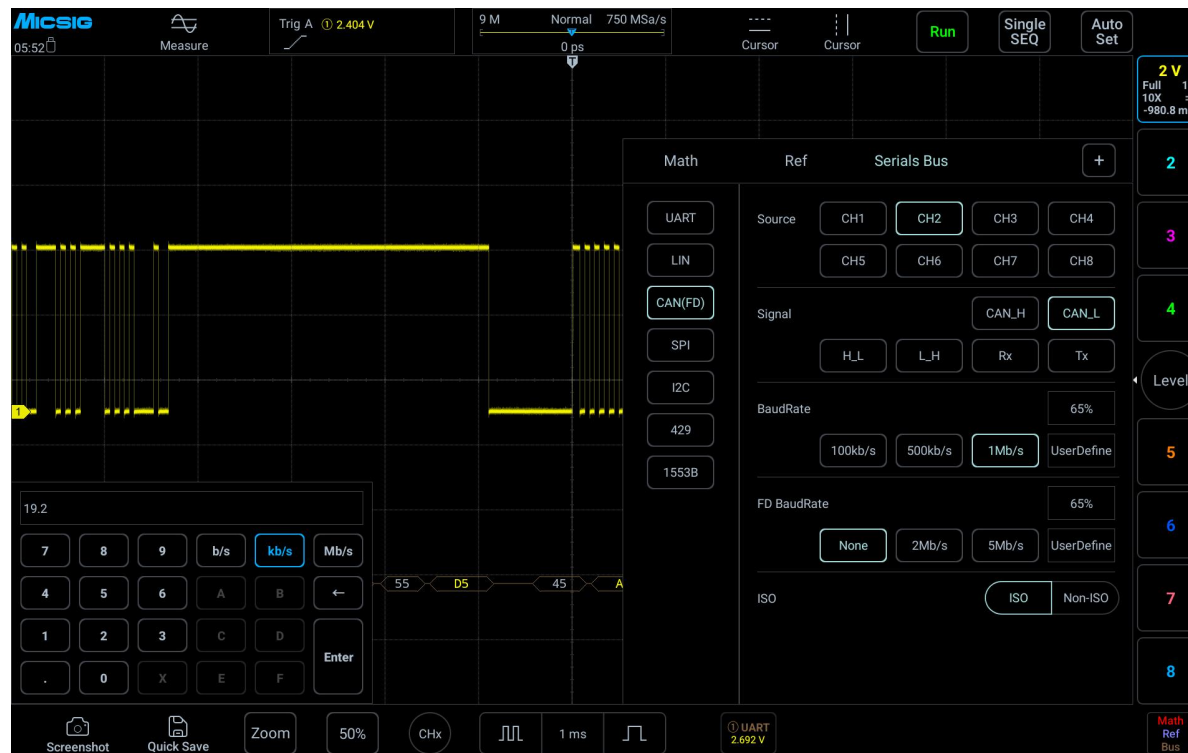


Figure 12-5 Baud Rate Default Setting

**Note:** When there is parity bit, the data word length indicates the total length of data bit plus parity bit. When there is no parity bit, the data word length is considered to be the length of data bit. For example, if the data word length is 8bit, when there is no parity bit, it means that the total length of data bits is 8bit; when there is parity bit, it means that the total length of data bits is 7bit, and there is parity bit of 1 bit.

- **Trigger mode**

Open the trigger configuration menu and select the appropriate trigger type; when choosing UART bus trigger, the trigger type, trigger relationship and trigger data need to be set, as shown in Figure 12-6:

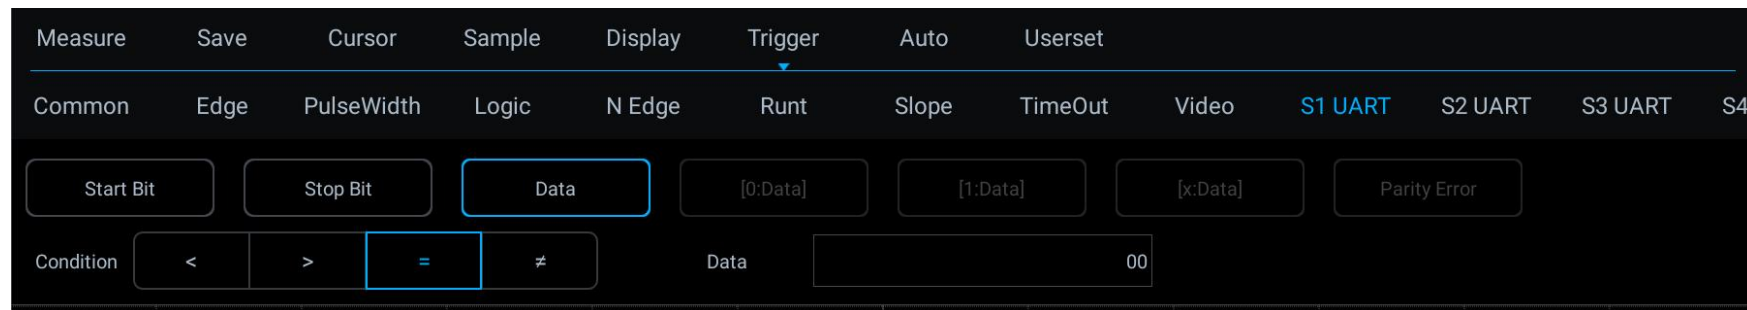


Figure 12-6 Trigger Setting Menu

After selecting the trigger data, use the pop-up virtual keyboard to modify it, enter the value, and click “Enter” on the virtual soft keyboard to complete the setting.

**UART trigger configuration menu description:**

- Start bit — trigger at the start bit of the measured signal;


- b) Stop bit — trigger at the stop bit of the measured signal, no matter the measured signal uses 1, 1.5, or 2 stop bits or not, the trigger will occur at the first stop bit.
- c) [data] — Trigger at the specified data bit, when measured signal data bits are effective as 5 to 8bits, select [data], and select the trigger relationship as “>”, “<”, “≠”, then select “Trigger Data”, press data on the touch screen, and use the pop-up virtual keyboard to modify;
- d) [0:data] — the measured signal data bits is 9bits (the 9th bit is parity bit). Only when the 9th bit is 0, then trigger. The trigger relationship, trigger data configuration are the same as those of [data] trigger;
- e) [1:data] — the measured signal data bits is 9bits (the 9th bit is parity bit). Only when the 9th bit is 1, then trigger. The trigger relationship, trigger data configuration are the same as those of [data] trigger;
- f) [x:data] — the measured signal data bits is 9bits (the 9th bit is parity bit). No matter what the value of the 9th bit is, trigger at the designated data bit. The trigger relationship, trigger data configuration are the same as those of [data] trigger;
- g) Parity error — valid when there is parity check at parity bit, trigger while parity error.

- **UART serial decode**

The measured signal word length is 8bit; parity bit, none; baud rate, 19.2kb/s, hexadecimal; trigger mode as data bit:55; follow the steps as below:

- (1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;
- (2) Select the bus type as “UART”, click “Ch1”, “Idle High”, “Parity None”, “8bit”, “19.20kb/s”, display “hexadecimal”, then close menu;
- (3) Open the trigger mode setting menu, click “Data”, enter 55 manually, and press “enter” to confirm;
- (4) Adjusting the threshold level according to the amplitude level of signal may make the signal to be stably triggered. The UART trigger graphic interface is shown in Figure 12-7:



Method 1: Click  configuration information to open the decode channel threshold level adjustment box, and drag the adjustment box upward and downward to adjust the threshold level.

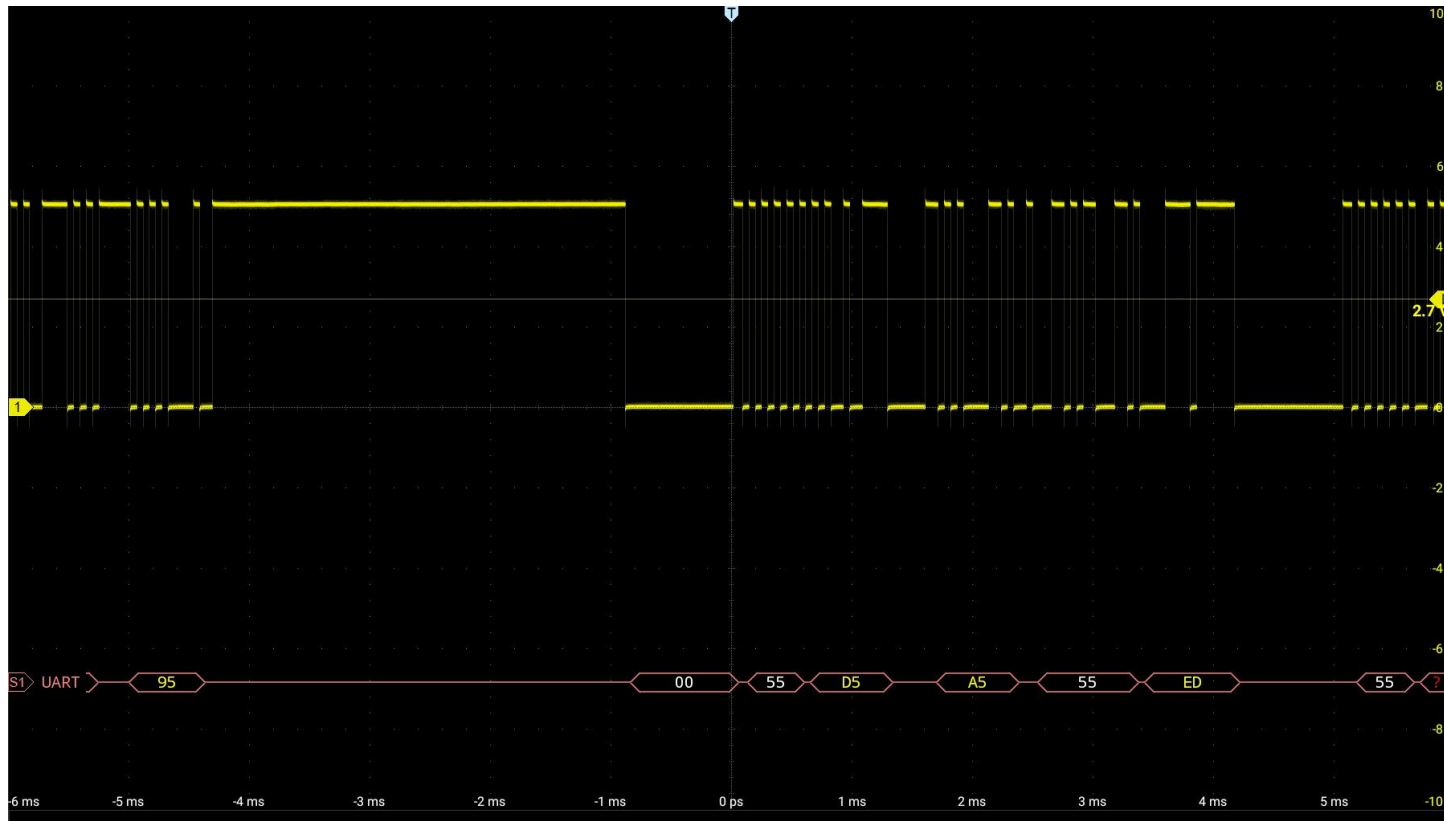


Figure 12-7 UART Decode Level Adjustment

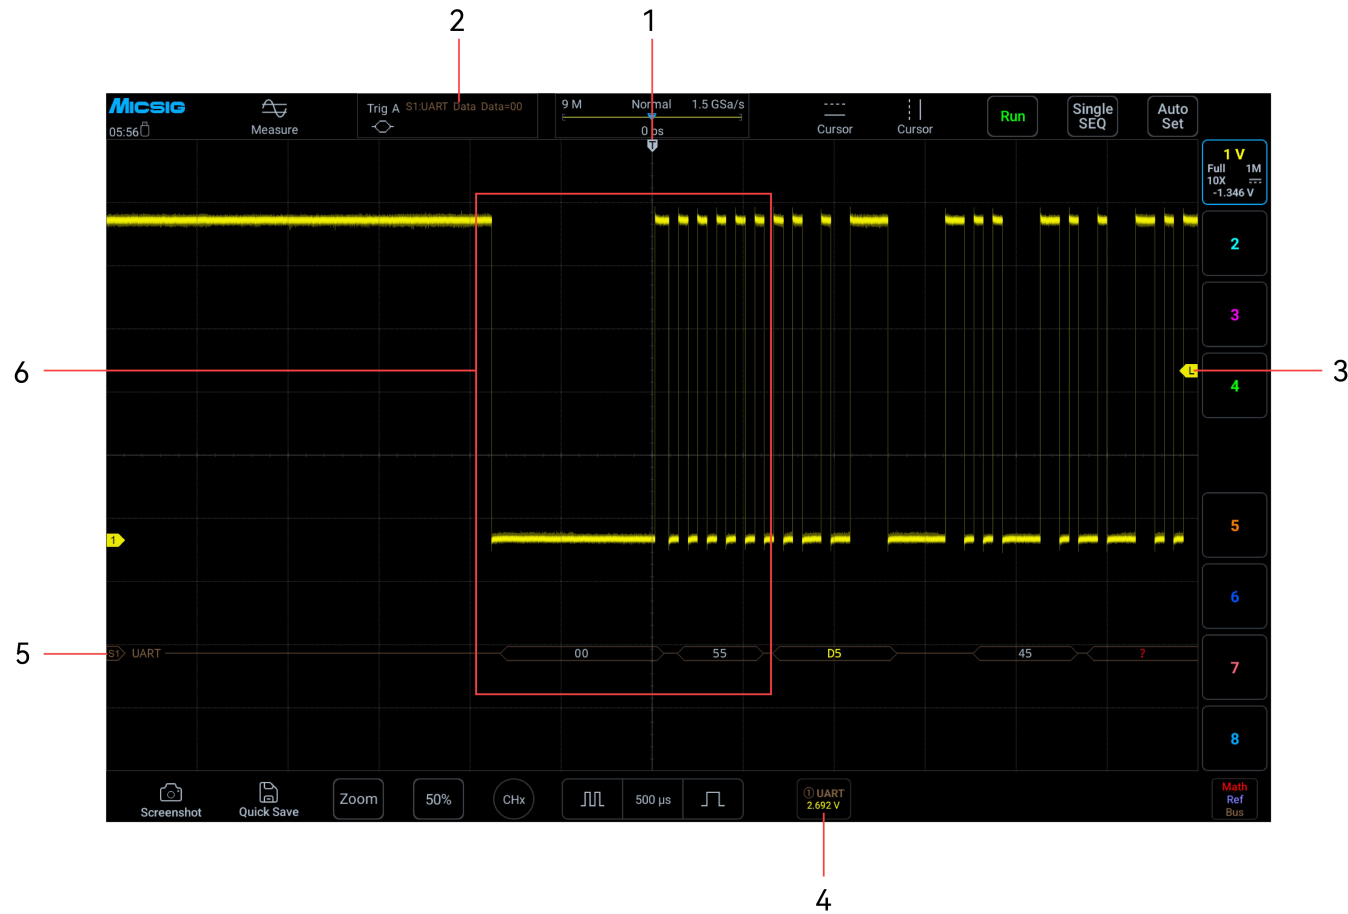


Figure 12-8 UART Graphic Interface

**UART graphic interface description:**

- (1) Trigger position

- (2) Trigger type
- (3) Threshold level
- (4) Configuration information
- (5) Decode the data packet, detailed as follows
- (6) Decode data and the corresponding waveform area

**UART decode data packet description:**

- (1) Decode data packet displays real-time data about the bus activities;
- (2) Decode data displays as hexadecimal system in white;
- (3) When the word length is 5-8 bits, the decode data displays as two bits of hexadecimal; when the word length is 9 bits, the decode data displays as 3 bits of hexadecimal, and the 9th bit displays at the left side;
- (4) When there is error in decode data, if the error is at stop bit, the data displays in yellow, if it is parity error, data displays in red;

(5) When “?” appears, the time base needs to be adjusted to view decode results.

The screenshot displays the Micsig UART Text Interface. At the top, it shows the trigger configuration: 'Trig A S1:UART Data Data=00', a time scale of '9 M', and a resolution of 'Normal 1.5 GSa/s'. A 'Run' button is visible in the top right. The main display area is split into two columns: 'S1:UART' (Hex) and 'S2:UART' (ASCII). The Hex column shows a sequence of hexadecimal values, and the ASCII column shows the corresponding decoded text. Annotations with red lines and numbers point to specific features: '1' points to the S1:UART header; '2' points to the Hex column; '3' points to the ASCII column; '4' points to the TX FRAMES:18356 status bar; '5' points to the Clear button; '6' points to the Math Ref Bus button; and '7' points to the UART 2.692V status bar. A 'Screenshot' button is also visible in the bottom left.

Figure 12-9 UART Text Interface

**UART text interface description, see Figure12-9:**



- (1) S1/S2/S1&S2 is channel configuration bus information.
- (2) Area for decode data.
- (3) ASCII code corresponding to the text data (when the data format is 9 bits and there is no parity bit, ASCII code corresponds to lower 8 bits of data on the left side).
- (4) Counter: Calculates the total number of frames and the percentage of ERR (parity error and stop bit error) frames.
- (5) Clear: Clear the counter data.
- (6) Roller bar.

In the decode data area, the stop bit error data is displayed in yellow, and the decode error data is displayed in red;

## 12.2 LIN Bus Trigger and Decode

For correctly decoding LIN bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

- **Bus configuration**

Tap the button  and select  to open the bus configuration menu, and the following need to be set according to measured signal:

Source — Select the signal source of decode.

Idle Level - high and low. Select whether to display high active or low active after the signal start bit of measured equipment.

Baud Rate — Select the baud rate that matches the signal being measured, and it can be customized.

The setting method is the same as that of UART, and will not be repeated here. As shown in Figure 12-10:



Figure 12-10 LIN Bus Configuration Menu

- **Trigger mode**

Open the trigger configuration menu and select the appropriate trigger type. When the LIN bus trigger is selected, the trigger mode includes: synchronous rising edge, frame ID, frame ID and data. See Figure 12-11:

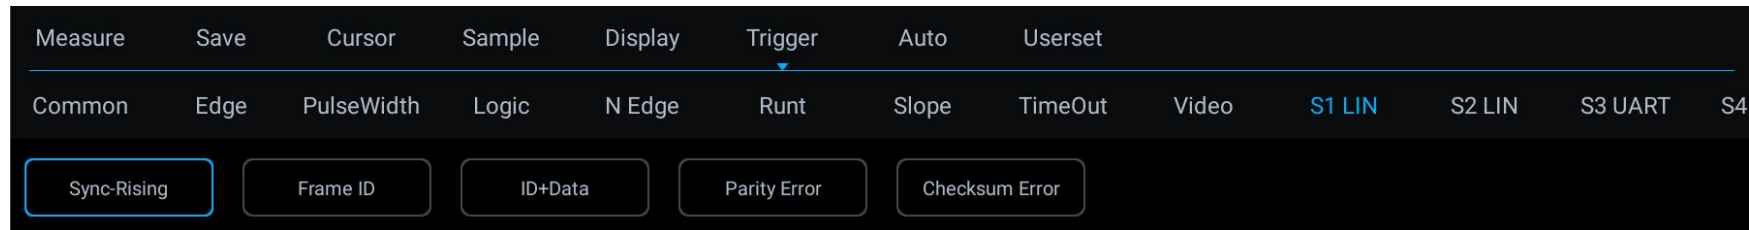



Figure 12-11 LIN Trigger Mode Configuration Menu

- a) Synchronous rising edge – When the “Sync Interval” of LIN bus ends, the rising edge triggers.
- b) Frame ID — Triggered when a frame with an ID equal to the set value is detected. Select “Frame ID”, click data on the touch screen, and use the pop-up virtual keyboard to modify it.
- c) Frame ID and data—triggered when a frame with ID and data equal to the set value is detected. After selecting “Frame ID and Data”, click ID or data, and set them.

- **LIN serial decode**

Ch1 is connected to measured signal. The idle level is high and the baud rate is 19.2 kb/s. The trigger mode is synchronous rising edge. Please follow these steps:

- (1) Tap S1 to open the decode channel, and click again to open the bus configuration menu;

- (2) Select the bus type as “LIN”, click “Ch1”, “Idle High”, “19.20kb/s”, and then close the menu;
- (3) Open the trigger mode configuration menu and click “Synchronous Rising Edge”;
- (4) Click  configuration information to open the decode channel threshold level adjustment box, and drag the adjustment box upward and downward to adjust the threshold level; adjust the threshold level according to the signal amplitude level to make the signal stably triggered. The LIN trigger graphic interface is shown in Figure 12-12:

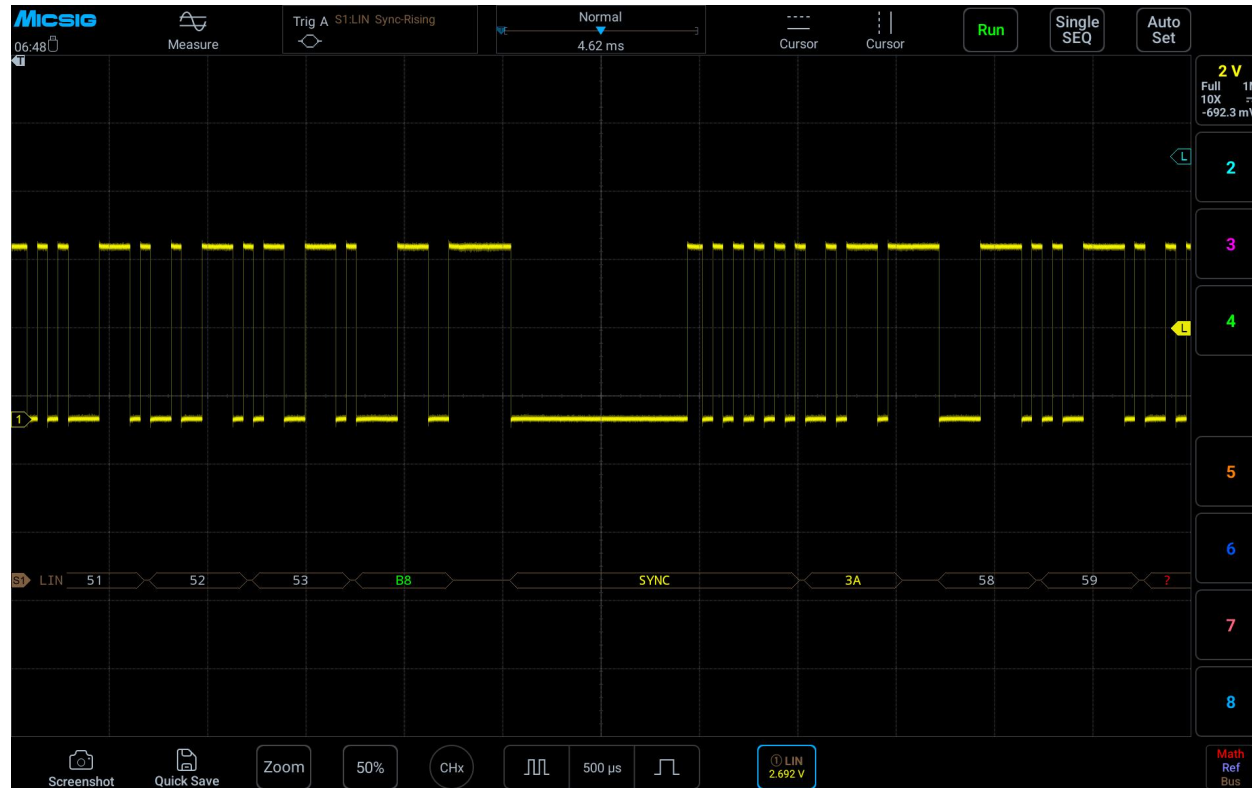


Figure 12-12 LIN Graphic Interface

**LIN decode data packet description:**

- (1) Decode data packet displays real-time data about the bus activities.
- (2) Decode data displays as hexadecimal system.

- (3) “Frame ID” displays in yellow, “Data” displays in white, and “Parity sum” displays in green. If the parity sum has error, it is displayed in red “E”.
- (4) When “?” appears, the time base needs to be adjusted to view decode results.



Figure 12-13 LIN Text Interface

**LIN text interface description, as shown in Figure 12-13:**

- (1) “Ch”: bus channel.
- (2) “Time”: Time intervals between the last frames to current frames.
- (3) “ID”: Frame ID value.
- (4) “Data”: Frame data.
- (5) “Parity sum”: Frame parity sum, the sum of parity error displays in red.
- (6) “Trigger”: “Yes” means the frame reaches trigger condition.
- (7) “Clear”: Clear counter data.

## 12.3 CAN (FD) Bus Trigger and Decode

MHO series support CAN bus, CAN FD bus trigger and decode. For correctly decoding bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

- **Bus configuration**



Tap the button  and select  to open the bus configuration menu, the signal source needs to be set, and the signal type and baud rate are set according to measured signal; the setting method is the same as that of UART and will not be repeated here. See Figure 12-14:



Figure 12-14 CAN / CAN FD Bus Configuration Menu

- **Trigger mode**

Open the trigger configuration menu and select the appropriate trigger type; when S1 CAN bus trigger is selected, as shown in Figure 12-15:

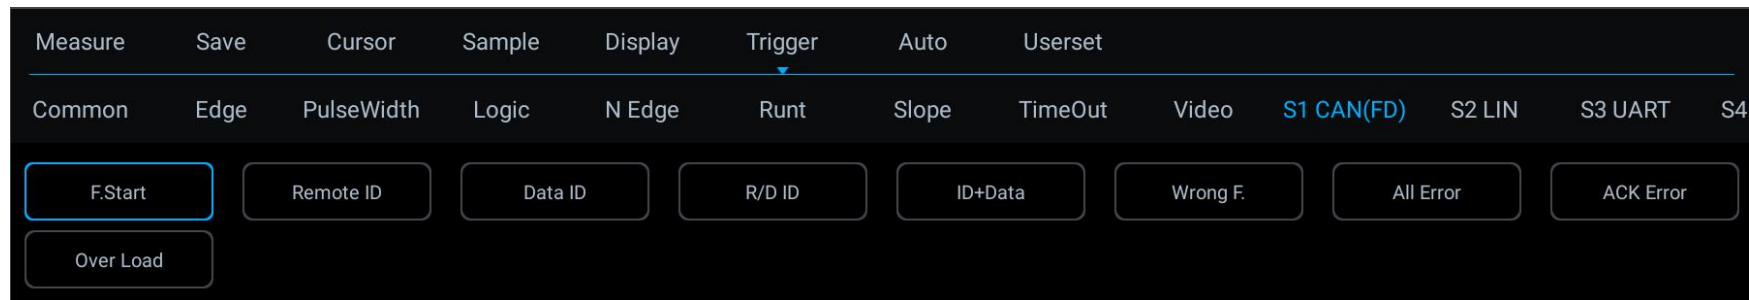


Figure 12-15 CAN FD Trigger Mode Configuration Menu

Trigger mode selection menu description:

- a) Frame start — trigger at the start of the frame;
- b) Remote frame ID — setting the ID matches the remote frame trigger. After selecting the “Remote Frame ID”, and then set the ID value at the bottom of the trigger data area

Operation description: Press the numbers on the touch screen and use the virtual keyboard to set;

- c) Data framed ID — trigger on data frame that matches set ID. Data frame ID configuration mode is the same as the remote data frame ID configuration;

- d) Remote frame/data frame ID — trigger on remote frame or data frame that matches set ID. Remote frame/data frame ID configuration is the same as the remote data frame ID configuration;
- e) Data frame ID and data ID — trigger on data frame that matches set ID and data. The configuration method is the same as the remote frame ID configuration;
- f) Error frame — trigger on CAN error frame;
- g) All errors — trigger when there is any error in format or activity;
- h) Ack error — trigger on recessive (high) Ack position;
- i) Overload frame — trigger on CAN overload frame.

- **CAN serial decode**

Ch1 is connected to measured signal. The idle level is high and the baud rate is 1Mb/s; the Trigger mode is the frame start. Please follow these steps:

- (1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;

- (2) Select the bus type as “CAN”, and then click “Ch1”, “Idle High” and “1Mb/s”, FD BaudRate set to None.  
After setting, click the blank area to close the menu;
- (3) Open the trigger mode configuration menu and click “Frame Start”;
- (4) Adjust the threshold level according to the signal amplitude; the CAN trigger graphic interface is shown in Figure 12-16:

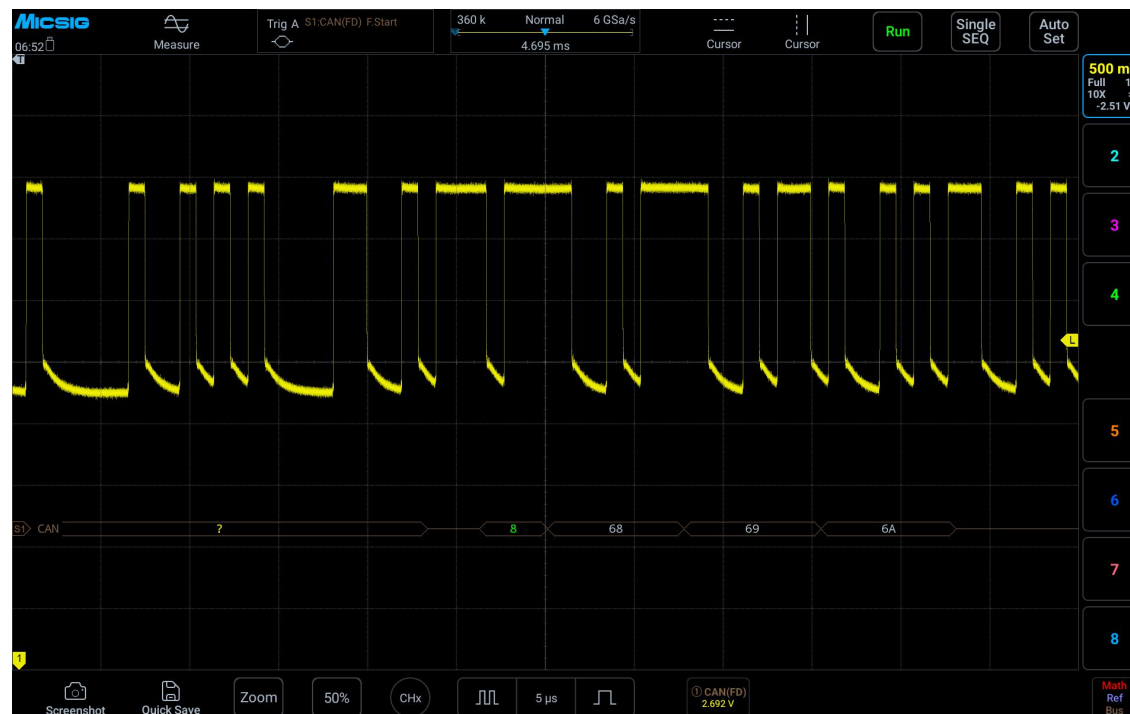


Figure 12-16 CAN bus decode interface

Understand the sampling position: The sampling point is the point in time at which the oscilloscope samples the bit level. The sampling point is represented by the percentage of "time from bit start to sampling point" and "bit time". Click the percentage on the right side of the sampling point to make relevant settings. The adjustable range of the sampling position is 0% to 99.9%.

**CAN decode data packet description:**

- (1) Decode data packet displays real-time data about the bus activities.
- (2) Decode data displays as hexadecimal system.
- (3) “Frame ID” displays in yellow, “Data” displays in white, and “DLC” and “CRC” codes display in green.  
If there is frame error, it is displayed in red “E”.
- (4) When “?” appears, the time base needs to be adjusted to view decode results, and “!” indicates that the bus waveform corresponding to the decode data packet is incomplete and the data cannot be displayed correctly.



Figure 12-17 CAN bus decode in Text mode

**CAN text interface description, as shown in Figure 12-17:**



- (1) “Ch”: bus channel.
- (2) “Time”: Time intervals between the last frames to current frames.

- (3) “ID”: CAN frame ID value displayed in hexadecimal, maximum 29 bits.
- (4) “Type”: Frame type, “SFF” standard data frame, “SRF” standard remote frame, “EFF” extended data frame, “ERF” extended remote frame.
- (5) “DLC”: Number of data bytes sent by this frame. This value can be ignored for remote frames.
- (6) “Data”: Frame data.
- (7) “CRC”: Frame CRC check code.
- (8) “Error”: Response error, bit stuffing error, format error, CRC error.
- (9) “Trigger”: “Yes” means the frame reaches trigger condition.
- (10) “Statistics”: counts the number of occurrences of frame type, data length, status, etc., and the percentage.

## 12.4 SPI Bus Trigger and Decode

For correctly decoding SPI bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

● Bus configuration

Tap the button  and select  to open the bus configuration menu, the following need to be set:

Clock source, data source, chip select signal, and data word length, as shown in Figure 12-18:

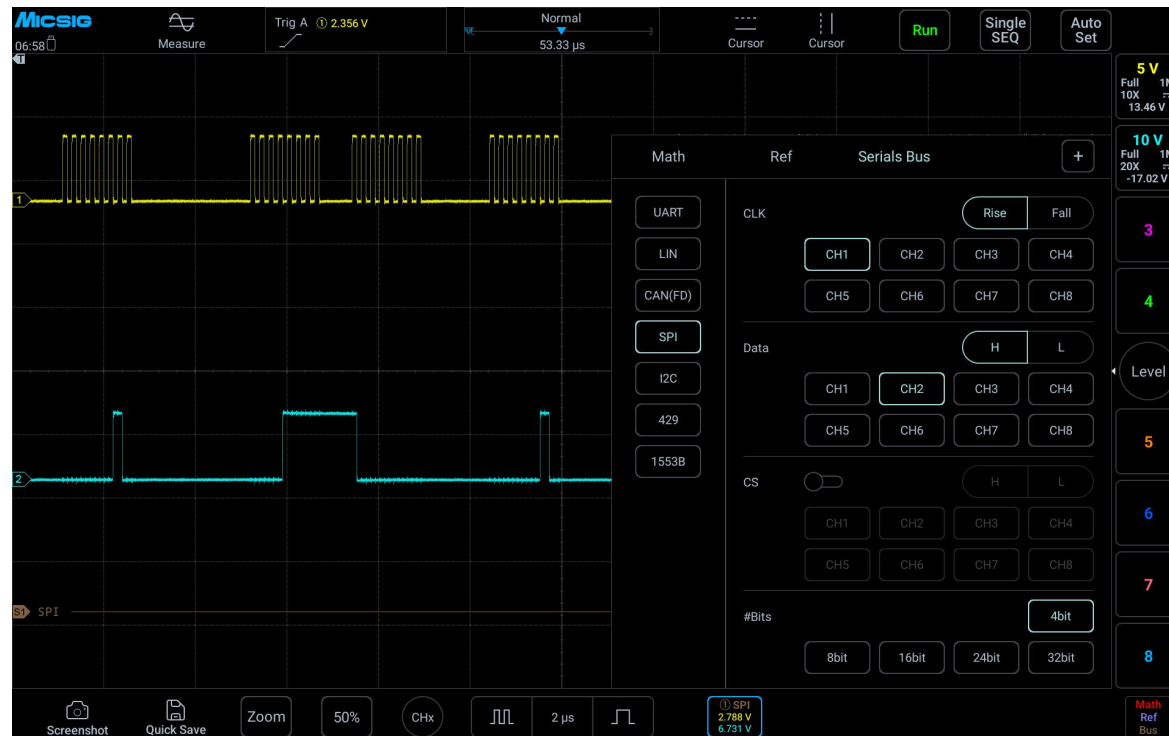


Figure 12-18 SPI Bus Configuration Menu

- **Trigger mode**

Open the trigger configuration menu and select the appropriate trigger type; when selecting the SPI bus trigger, as shown in Figure 12-19:

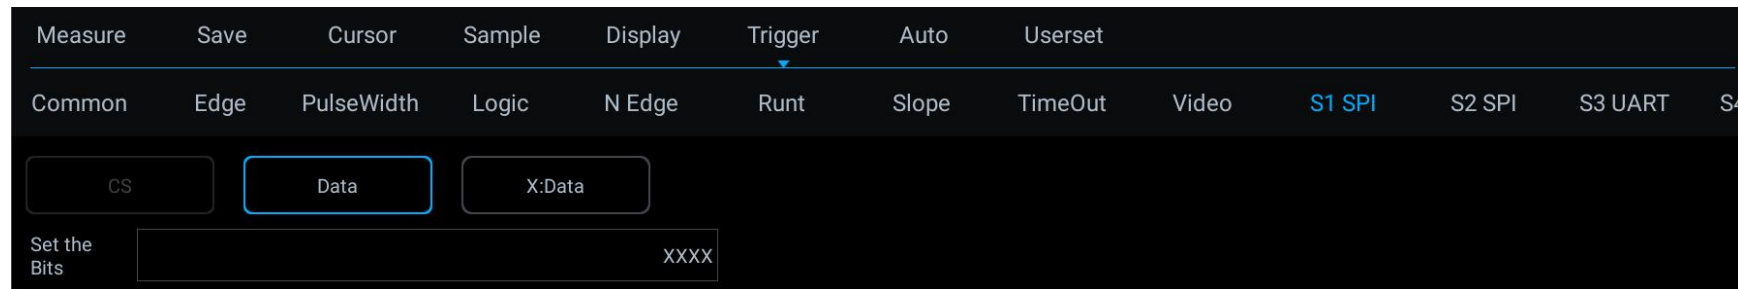


Figure 12-19 SPI Trigger Mode Configuration Menu

The operation method is the same as CAN frame ID to be matched in the configuration, and will not be repeated here.

**Note:** According to the data byte length set by bus decode, the value of the relevant bit within the byte length is set. Trigger when the corresponding bit on data bus matches the set value.

- **SPI serial bus**

The measured signal channel Ch1 is connected to CLK, Ch2 channel is connected to DATA, the bus idle state is high, the clock rising edge is sampled; the data word length is 4 bits; the CS chip select is off; the trigger mode matches the “Data” at 0001, please follow the steps below:

- (1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;
- (2) Select the bus type as “SPI”, click clock as “Ch1” rising edge, the data is “Ch2” high level, and the data word length is “4bit”;
- (3) Open the trigger setting menu, click data on the touch screen, and use the virtual soft keyboard to set the data to be matched as “0001”;
- (4) Adjust the threshold levels of two channels according to signal amplitude; the SPI trigger graphic interface is shown in Figure 12-20:

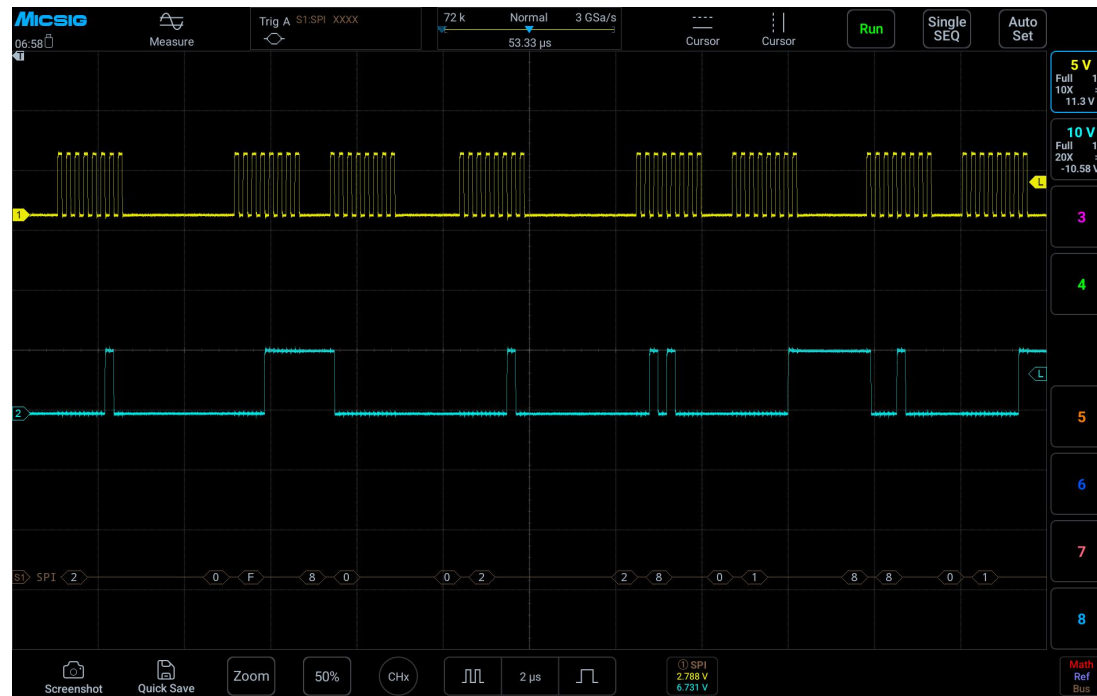


Figure 12-20 SPI bus decode interface

**SPI decode data packet description:**

- (1) Decode data packet displays real-time data about the bus activities.
- (2) Decode data displays as hexadecimal system.
- (3) Data displays in white.

(4) When “?” appears, the time base needs to be adjusted to view decode results.



Figure 12-21 SPI Text Interface

**SPI text interface description, as shown in Figure 12-21:**

(1) “Ch”: bus channel.



- (2) “Time”: Time intervals between the last frames to current frames.
- (3) “Data”: According to the data word length setting, the decode data is displayed. For example, if the data word length is 8bit, only one byte displays in the data column; if the data word length is 16bit, 2 bytes display in the data column; if the data word length is 24bit, 3 bytes display; and if the data word length is 32bit, 4 bytes display.
- (4) “Trigger”: “Yes” means the frame reaches trigger condition.

Note: “One frame” is measured by the set “data word length” and can meet 1 data bit code stream.

## 12.5 I<sup>2</sup>C Bus Trigger and Decode

For correctly decoding I2C bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

- **Bus configuration**

Tap the button  and select  to open the bus configuration menu, Bus configuration includes the serial clock (SCL) and the serial data (SDA) corresponding to the channel settings. See Figure 12-22:

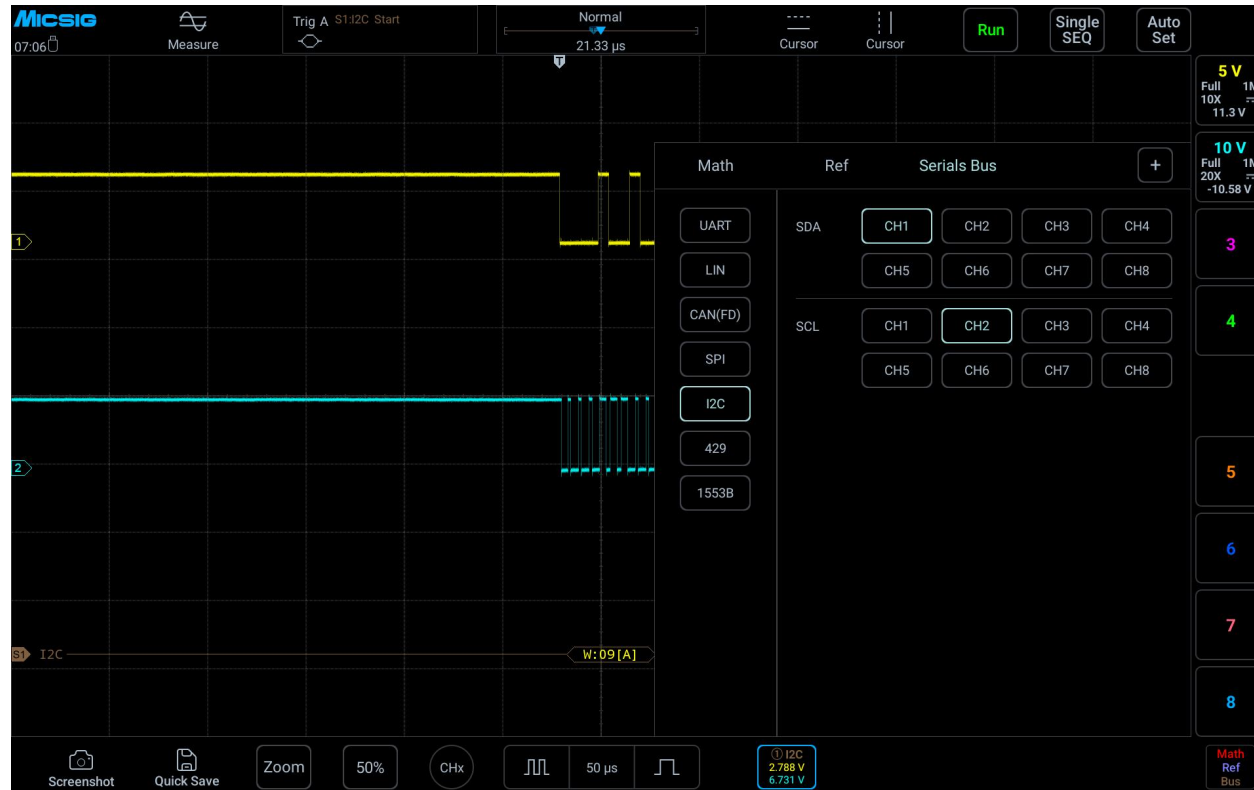


Figure 12-22 I<sup>2</sup>C Bus Configuration Menu

**Notes:** When SCL or SDA channel is set, the system will automatically set other channels.

- **Trigger mode**

Open the trigger configuration menu and select the appropriate trigger type. When the I<sup>2</sup>C bus trigger is selected, click the trigger type and relationship on the screen, as shown in Figure 12-23:

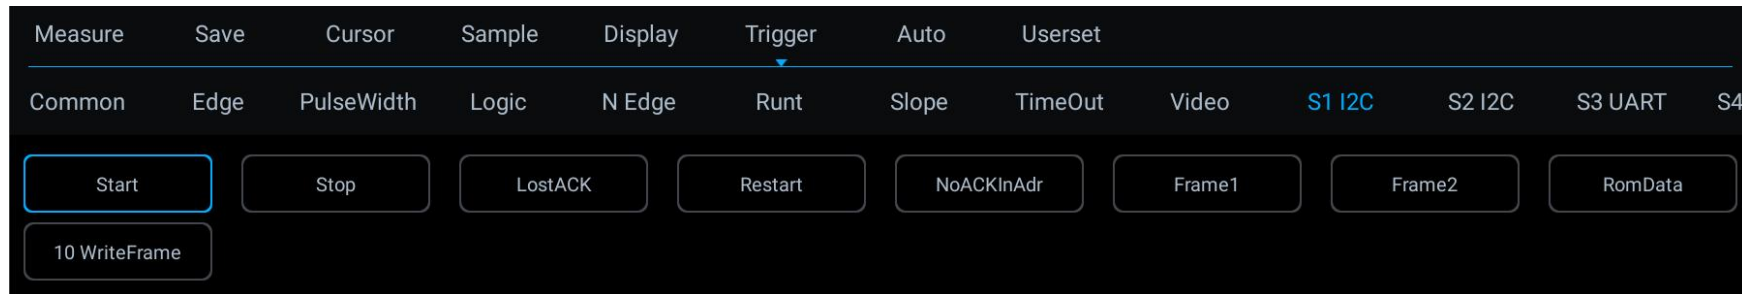


Figure 12-23 I<sup>2</sup>C Trigger Mode Configuration Menu

Trigger mode menu description:

- a) Start condition — trigger when SCL is high and SDA has a falling edge (includes restart).
- b) Stop condition — trigger when SCL is high and SDA has a rising edge.
- c) Ack Loss — Trigger when the bus Ack bit is high.
- d) Restart — triggered when a new start condition occurs before the stop condition.

- e) Address no ack — trigger when the ack bit in the set address field is invalid (ignoring W/R bit), select “Address” in the trigger data, and use the pop-up virtual soft keyboard to modify it.
- f) Frame Type 1 - Start + Address 7 + Read/Write + Acknowledge + Data; if all bits in the frame type match, trigger on read/write frames in 7-bit addressing mode on the 17th clock edge.

Frame type 1 operation method: Select values after the address/data, click values after the address/data on the touch screen, and modify them on the pop-up virtual soft keyboard.

- g) Frame type 2 — Start + Address 7 + Read/Write + Acknowledge + Data 1 + Acknowledge + Data 2; trigger on read/write frames in 7-bit addressing mode on the 26th clock edge if all bits in the frame type match. The operation method of configuring frame type 2 is the same as frame type 1, and will not be repeated here.
- h) EEPROM data read - When the read operation which contains 1010xxx control byte of the EEPROM appears on the bus and the Ack bit is correct, then the read data can be captured. If the captured data and the set data match the set relationship condition, trigger on the clock edge of Ack bit after the data byte.

After selecting “EEPROM Data Read”, click the relationship by “=” “>” “<” “≠”, and the setting method is the same as the address field.

- i) 10-bit write frame - Trigger on 10-bit write frame on the 26th clock edge if all bits in the pattern match.

Trigger mode is start condition, SCL connect to Ch2, SDA connect to Ch1, follow these steps as below:

- (1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;
- (2) Select the bus type as “I2C”, open the bus setting menu, and select the clock SCL as Ch2 channel;
- (3) Open the trigger mode configuration menu and click “Start Condition” on the touch screen.
- (4) Set the threshold level of two channels according to signal amplitude; I2C trigger graphic interface is shown in Figure 12-24:

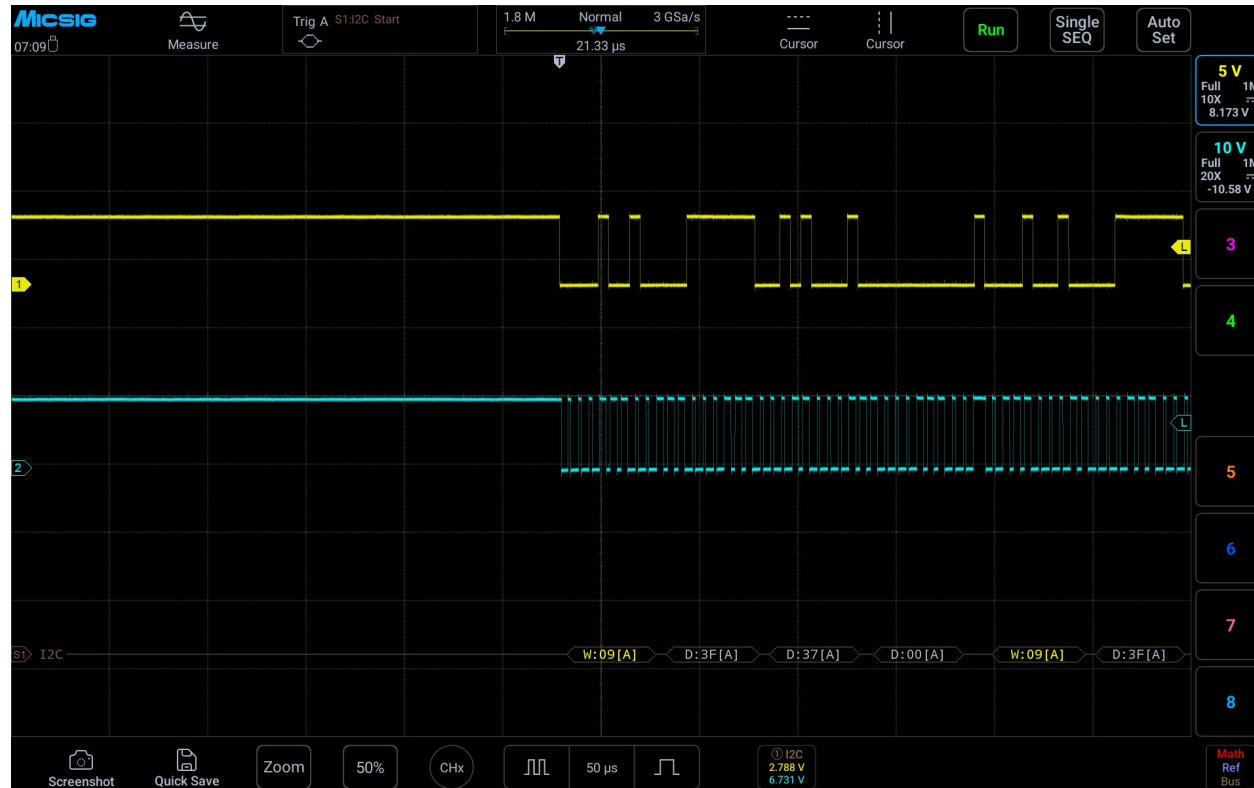


Figure 12-24 I<sup>2</sup>C Graphic Interface

I<sup>2</sup>C decode data packet description:

- (1) Decode data packet displays real-time data about the bus activities.
- (2) Decode data displays as hexadecimal system.

- (3) Address content display: Read address displays in green, write address displays in yellow, and data displays in white. “W” denotes write operation, “R” denotes read operation, “D” denotes decode data, and “~A” denotes no Ack bit.
- (4) When “?” appears, the time base needs to be adjusted to view decode results.



Figure 12-25 I<sup>2</sup>C Text Interface



**I<sup>2</sup>C text interface description, as shown in Figure 12-25:**

- (1) “Ch”: bus channel.
- (2) “Time”: intervals between the last read/write operations to current read/write operations
- (3) “Address”: in address bar, “R” means the read operation, and “W” means write operation
- (4) “Data”: data sent by one read and write operation is in the data bar.
- (5) “Ack”: in Ack bar, “X” means Ack bit lost.
- (6) “Trigger”: “Yes” means reach trigger condition.
- (7) “Restart”: “Yes” means reach restart condition.

## 12.6 ARINC429 Bus Trigger and Decode

For correctly decoding ARINC429 bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

- **Bus configuration**

Tap the button  and select  to open the bus configuration menu, the following needs to be set:

Data Source — Select channel for ARINC 429 signal.

Word format — Select ARINC 429 decode mode.

Bus Display — Set the format for ARINC 429 decode data.

Baud Rate — Set the speed of ARINC 429 signal.

As shown in Figure 12-26:



Figure 12-26 ARINC429 Bus Configuration Menu

- **Trigger mode**

Open the trigger configuration menu and select the appropriate trigger type; when the ARINC429 bus trigger is selected, click the trigger type and relationship on the screen, as shown in Figure 12-27:

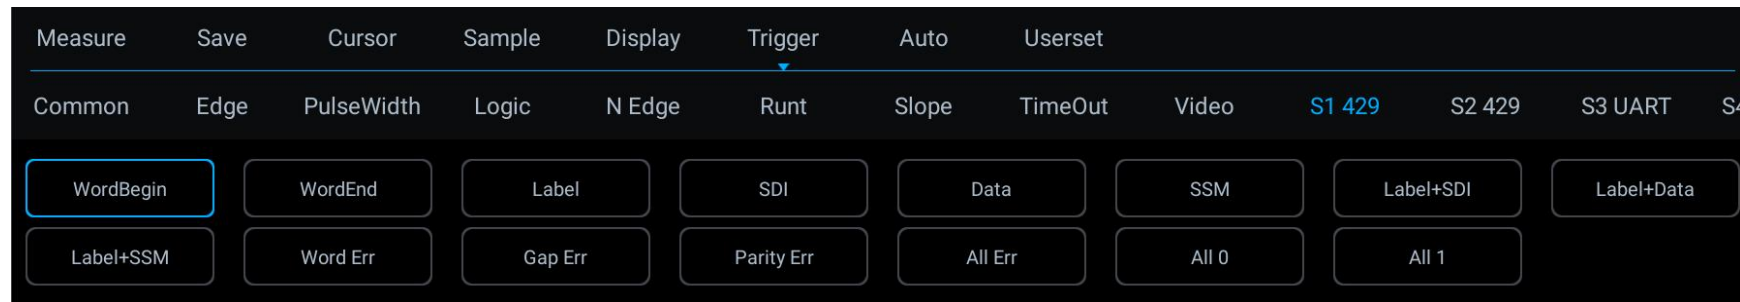


Figure 12-27 ARINC429 Trigger Mode Configuration Menu

If LABEL, SDI (source identifier), DATA or SSM (symbol/status mark) trigger are used, after selecting trigger mode, use the pop-up virtual keyboard to modify it, enter the value, and click “Enter” on the virtual soft keyboard to complete the setting.

Trigger configuration menu description:

- a) Word start: Trigger at the word start.
- b) Word stop: Trigger at the word stop.
- c) LABEL: Label, triggered when the specified tag value occurs.
- d) SDI: Source identifier, triggered on the specified source terminal.

- e) DATA: Trigger on the specified data.
- f) SSM: Symbol/status mark, triggered on the specified symbol status matrix.
- g) LABEL+SDI: Trigger on the specified label and the specified source terminal.
- h) LABEL+DATA: Trigger on the specified label and the specified data.
- i) LABEL+SSM: Trigger on the specified label and the specified symbol status matrix.
- j) Word Error - Triggered when a word error occurs.
- k) Word gap error: Triggered when a gap error occurs.
- l) Verification error: Triggered when a verification error occurs.
- m) All errors: Triggered when any of the above errors occur.
- n) All 0 bits: Triggered when any bit with the value of zero occurs.
- o) All 1 bit -: Triggered when any bit with the value of 1 appears.

● **ARINC 429 serial decode**

The measured signal source is CH1, the decode format is LABEL+DATA, the display is in hexadecimal, the baud rate is 12.5kb/s, and the trigger mode is LABEL, operate as follows:

- (1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;

Select bus type “429”, source as “CH1”, decode format as “LABEL+DATA”, display in “hexadecimal”, baud rate as 12.5kb/s.

- (2) Open the trigger setting menu, select the trigger type as bus trigger, S1-ARINC429, the trigger mode is LABEL, and enter LABEL as “106” on virtual keyboard.

Adjust **High trigger threshold level** and **Low trigger threshold level** according to signal amplitude; and ARINC429 trigger graphic interface is shown in Figure 12-28:

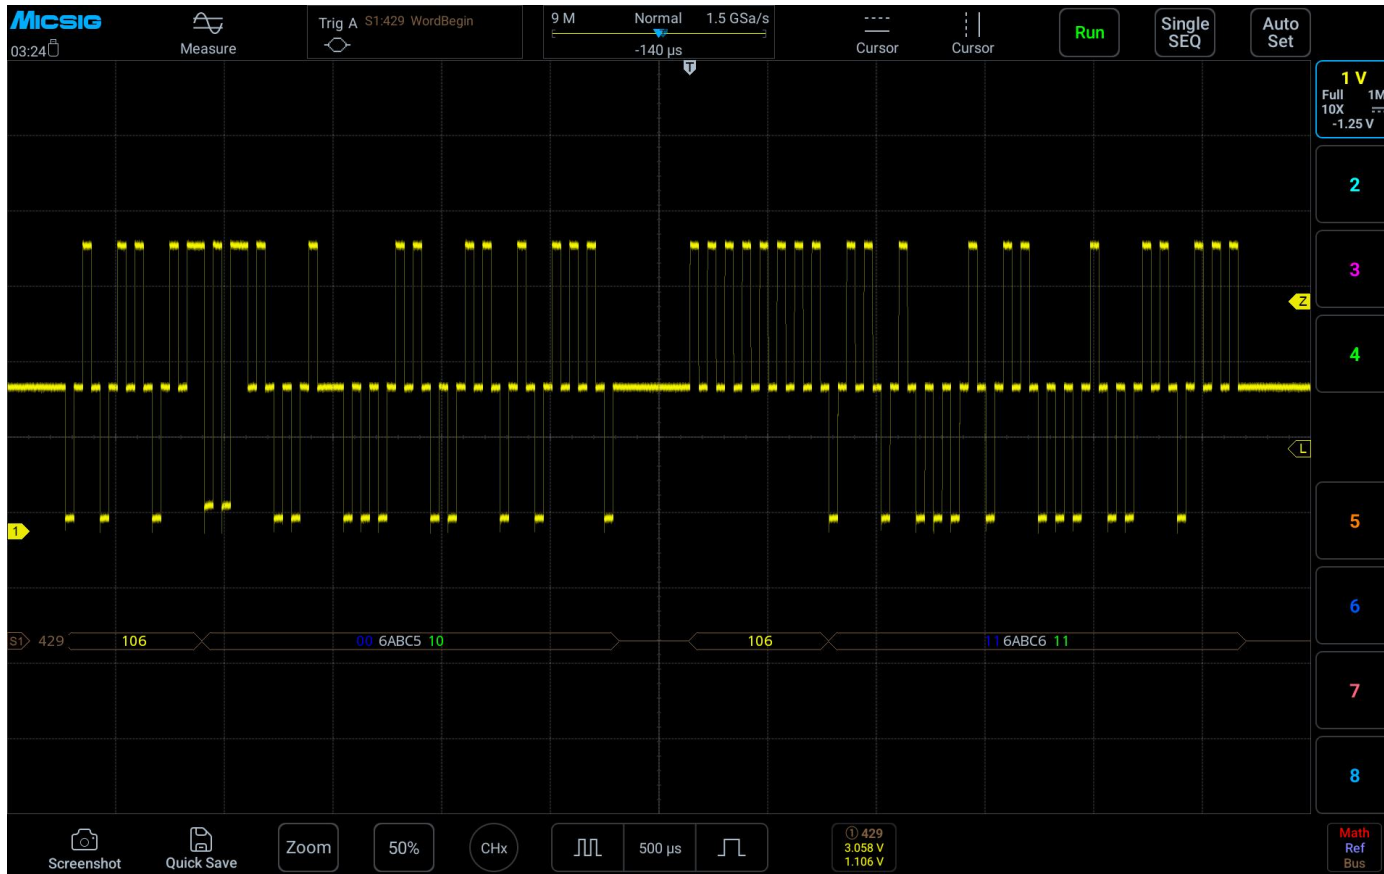


Figure 12-28 ARINC429 Graphic Interface

**ARINC429 decode data packet description:**

- (1) Data packet, a total of 32bits, the data format is 8~1 (label bit, high bit first) +9~10(SD) +11~29 (data bit, low bit first) +30~31 (symbol status bit) +32 (parity bit)
- (2) Label (8bits) - Displayed in octal: yellow
- (3) SDI (2bits) - Displayed in binary: blue
- (4) Data (19bits) - Displayed in selected numeration system: white, or red if there is parity error
- (5) SSM (2bits) - Displayed in binary: green

Ch	Time	Label	SDI	Data	SSM	Error	Trigger
S1	05s510.34	106	10	06 AB C7	11		Yes
S1	05s513.22	106	01	06 AB C8	11		Yes
S1	05s516.10	106	00	06 AB C9	11		Yes
S1	05s518.98	001	01	02 9B 9A	10		Yes
S1	05s522.18	144				Frm	Yes
S1	05s525.05	310	01			Frm	Yes
S1	05s527.92	133				Frm	Yes
S1	05s530.80	377	10	03 23 45	11	Par	Yes
S1	05s533.67	143				Frm	Yes
S1	05s534.55	143	11			Frm	Yes
S1	05s536.86	130	00	05 3A 6C	11	Frm	Yes
S1	05s548.13	102	00	06 EF 18	11		Yes
S1	05s551.01	074	10	02 BB 23	00		Yes
S1	05s554.06	106	00	06 AB C0	01		Yes
S1	05s556.94	106	01	06 AB C1	10		Yes
S1	05s559.82	106	10	06 AB C2	11		Yes
S1	05s562.70	106	11	06 AB C3	00		Yes
S1	05s565.58	106	00	06 AB C4	01		Yes
S1	05s568.46	106	00	06 AB C5	10		Yes
S1	05s571.33	106	11	06 AB C6	11		Yes

WORDS:1746      ERRORS:610(34.9%)      Clear

① 429  
3.058 V  
1.106 V

Math Ref Bus

Figure 12-29 ARINC429 Text Interface

**ARINC429 text interface description, as shown in Figure 12-29:**

- (1) “Ch”: bus channel.
- (2) “Time”: intervals between the last read/write operations to current read/write operations

- (3) “LABEL”: label, information identifier, displayed in octal.
- (4) “SDI”: source/target identifier, displayed in binary (displays XX if not identified separately).
- (5) “Data”: content of the transmitted information, displayed in the selected numeration system.
- (6) “SSM”: symbol/status matrix, displayed in binary (displays XX if not identified separately).
- (7) “Error”: displays the frame error type (parity error Par, frame error Frm).
- (8) “Trigger”: “Yes” means reach trigger condition.

## 12.7 1553B Bus Trigger and Decode

For correctly decoding 1553B bus data and making trigger stable, the bus configuration, trigger mode set and trigger level need to be adjusted.

- **Bus configuration**

Tap the button **Math Ref Bus** and select **Serials Bus** to open the bus configuration menu, the data source and display hexadecimal need to be set, as shown in Figure 12-30:

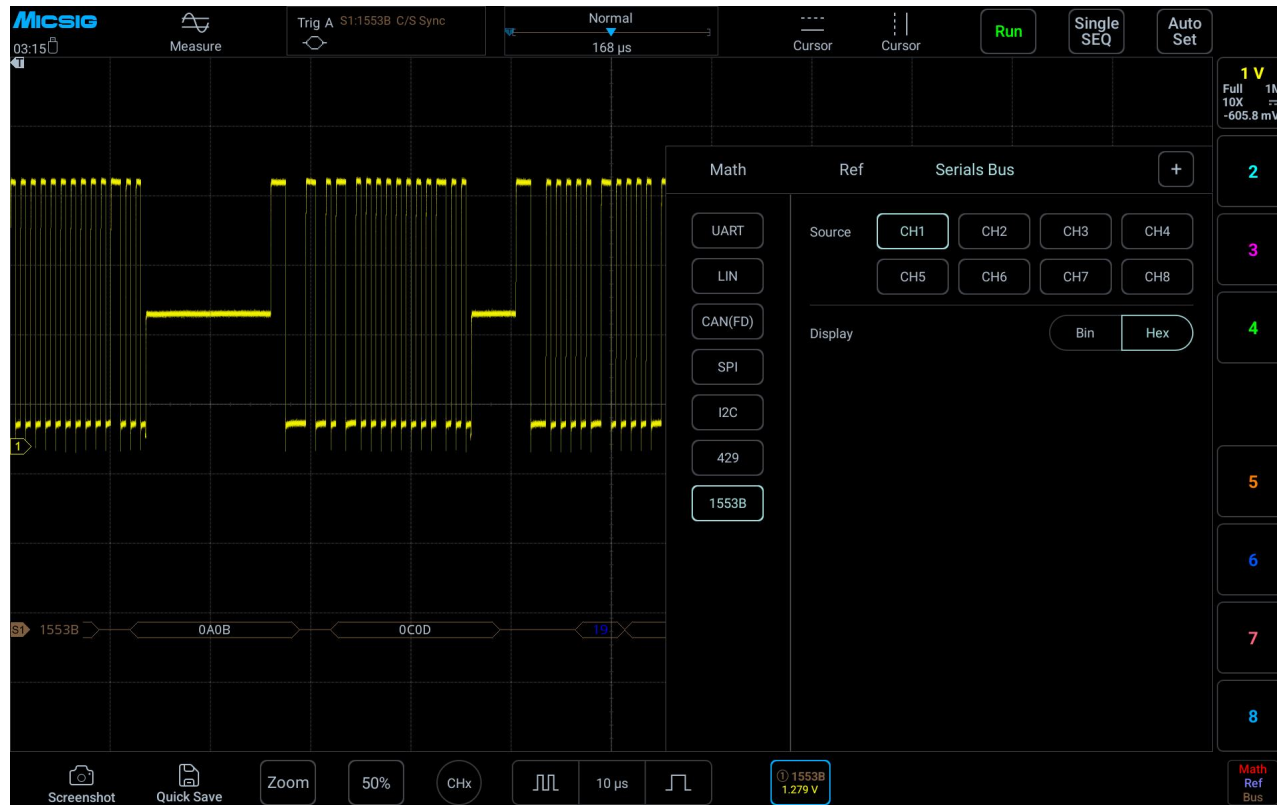


Figure 12-30 1553B Bus Configuration Menu

- **Trigger mode**

Open the trigger configuration menu and select the appropriate trigger type. When the trigger type is 1553B bus trigger, click the trigger type on the screen, as shown in Figure 12-31:

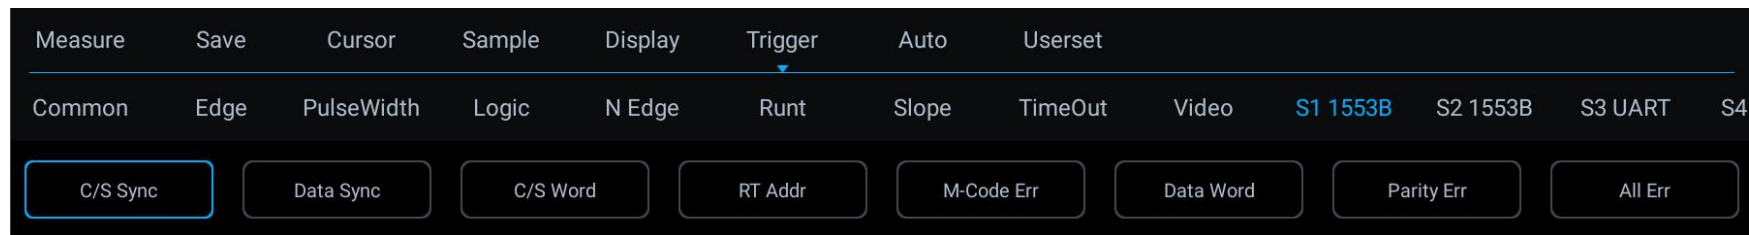


Figure 12-31 1553B Trigger Mode Configuration Menu

Trigger configuration menu description:

- a) Command/status word sync header: Triggered at the beginning of the command/status word (at the end of valid C/S sync pulse).
- b) Data word sync header: Triggered at the beginning of data word (at the end of valid data sync pulse).
- c) Command/status word: Triggered when the specified command/status word is detected.

- d) Remote terminal address: Triggered when RTA of command/status word matches the specified value.
- e) If you select this option, RTA softkey will be available, allowing you to select the hexadecimal remote terminal address value to be triggered on it. If you select 0xXX (irrelevant), oscilloscope will trigger on any RTA.
- f) Manchester coding error: Triggered when a Manchester coding error is detected.
- g) Data word: Triggered when the specified data word is detected.
- h) Odd parity error: Triggered when the odd parity bit is incorrect for data in the word.
- i) All errors: Triggered when an error is detected.

- **1553B serial decode**

The measured signal source is CH1, the bus display is hexadecimal, the baud rate is 12.5kb/s, and the trigger mode is the command/status word sync header, and operate as follows:

- (1) Tap S1 to open the decode channel, and click S1 again to open the bus configuration menu;

- (2) Select the bus type as “1553B”, source as “CH1”, and display in “hexadecimal”.
- (3) Open the trigger setting menu, select the trigger type as bus trigger, 1553B, and trigger mode as “command/status word sync header”.

Channel **threshold level** is adjusted according to signal amplitude. 1553B trigger graphic interface is shown in Figure 12-32:

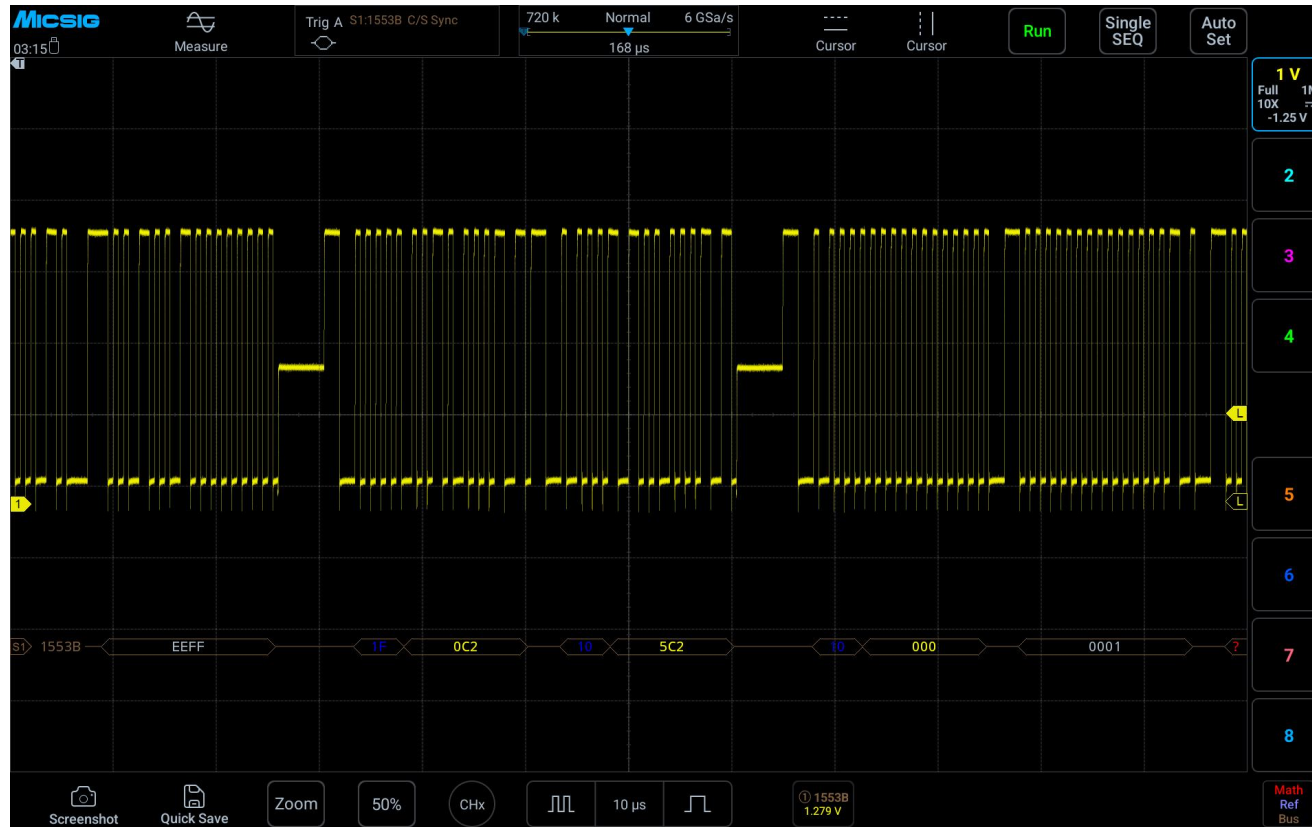


Figure 12-32 1553B Graphic Interface

**1553B decode data packet description:**

- (1) Remote terminal address (5-bit data): blue
- (2) The value of remaining 11 bits of the command/status word: yellow

- (3) Decoded data: white
- (4) If the command/status or data word has a parity error, its decoded text is displayed in red instead of green or white.
- (5) The sync error is displayed together with the word “SYNC”.



Figure 12-33 1553B Text Interface

**1553B text interface description, as shown in Figure 12-33:**

- (1) “Ch”: bus channel.
- (2) “Time”: intervals between the last read/write operations to current read/write operations.
- (3) “Type”: frame type (data frame DATA, command/status frame C/S, others N/A).
- (4) “RAdr”: remote terminal address, displayed in the selected numeration system (N/A for no content display).
- (5) “Data”: content of the transmitted information, displayed in the selected numeration system.
- (6) “Trigger”: “Yes” means reach trigger condition.
- (7) “Error”: displays the frame error type (parity error Par, Manchester coding error M-ch).

## Chapter 13 Homepage Functions

This chapter contains the functions of the oscilloscope homepage and describes the functions of all icons on the homepage and settings. You are recommended to read this chapter carefully to understand the homepage functions of the MHO series oscilloscope.

- App Store
- Settings
- File manager
- Calculator
- Browser
- Gallery
- Calendar
- Electronic Tools
- Clock
- Power Off
- ES File Explorer

The following figure shows the contents of the oscilloscope home page. Slide left or right to display the remaining applications. See Figure 13-1.

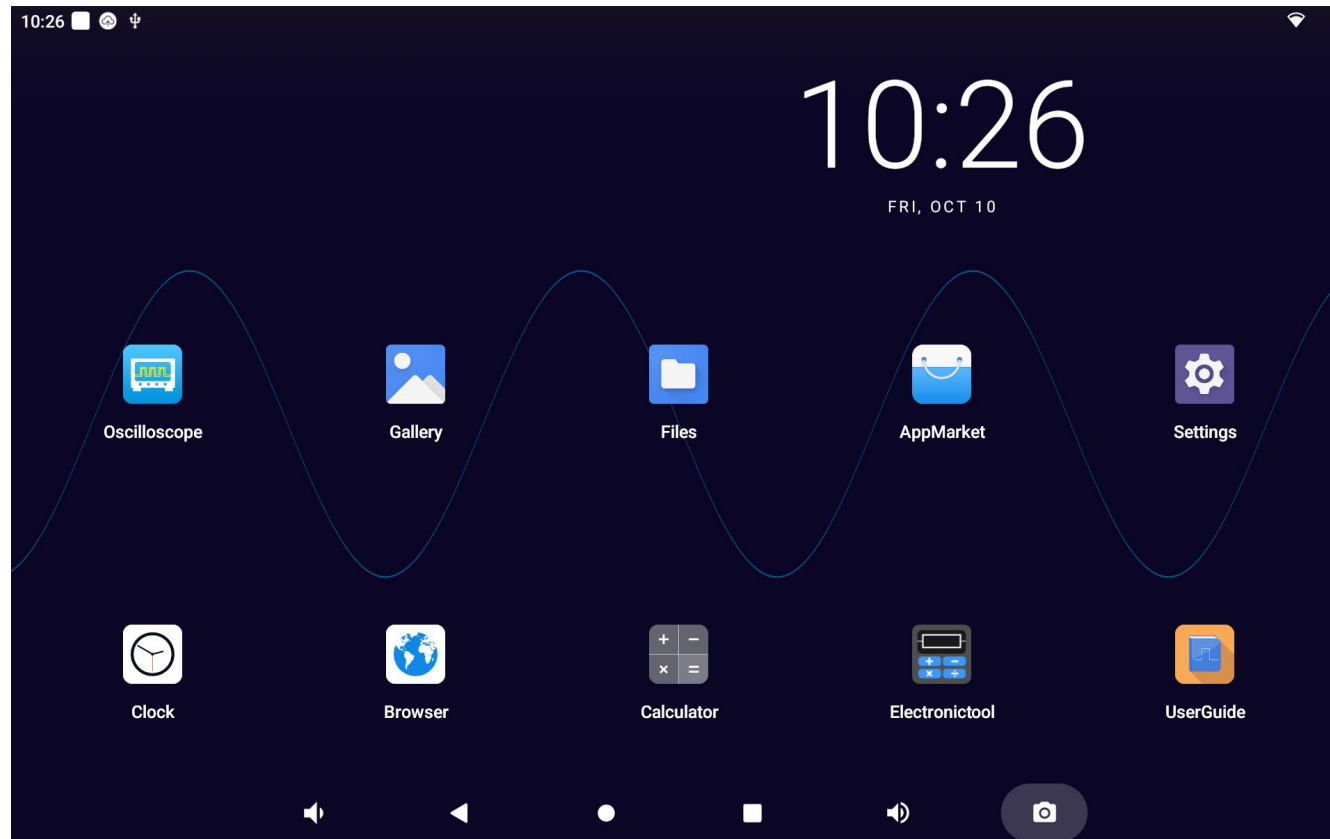


Figure 13-1 Homepage Interface

## 13.1 App Store

Tap the app store icon on the homepage to go to the app store interface, as shown in Figure 13-2. App store content includes Network, Local, U-disk, and About.

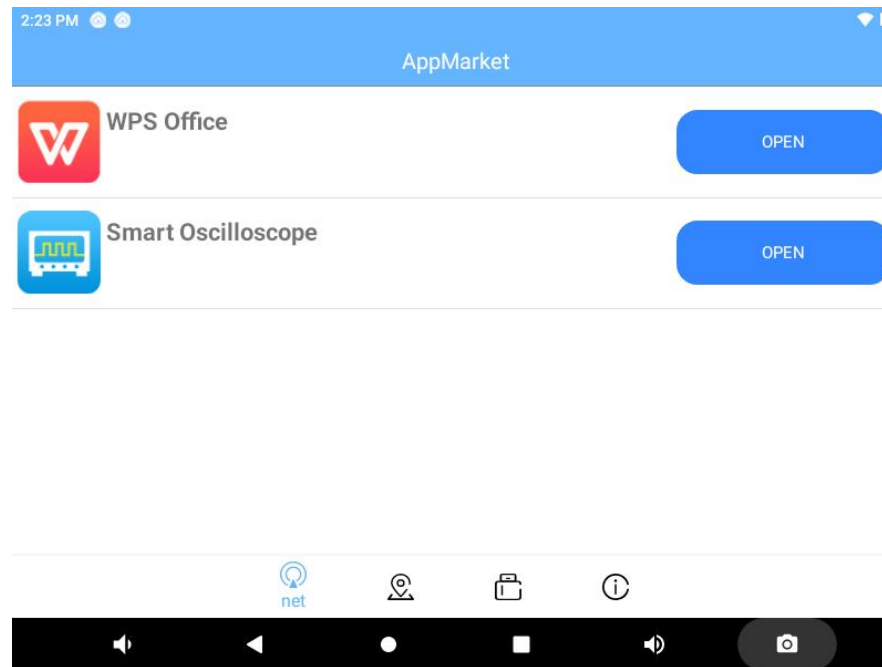


Figure 13-2 App Store

### Network

Tap “Network” to open the application list.

Tap app icon to view details such as version number of the current app and app description, and tap the green open option below to open or install the current app.

Tap the green option on the right of the app list to open and install the app.

### **Local**

Apps that have been downloaded and installed are displayed locally. When there is no downloaded application installation package file locally, the interface will display “There are no available apk files in the local directory”.

### **U-disk**

The U disk interface will display applications that can be opened in the USB disk.

If the USB disk is not plugged, the interface displays “U-disk not inserted”.

After USB disk has been plugged, if there are no apk files in the USB device for installation, the interface displays “There is no available apk file in the U disk directory”.

## About

In “About” interface, the equipment model, bandwidth, serial number, version information, shipment date and information about installed options can be viewed. Open the virtual keyboard and enter the license to install the corresponding options.

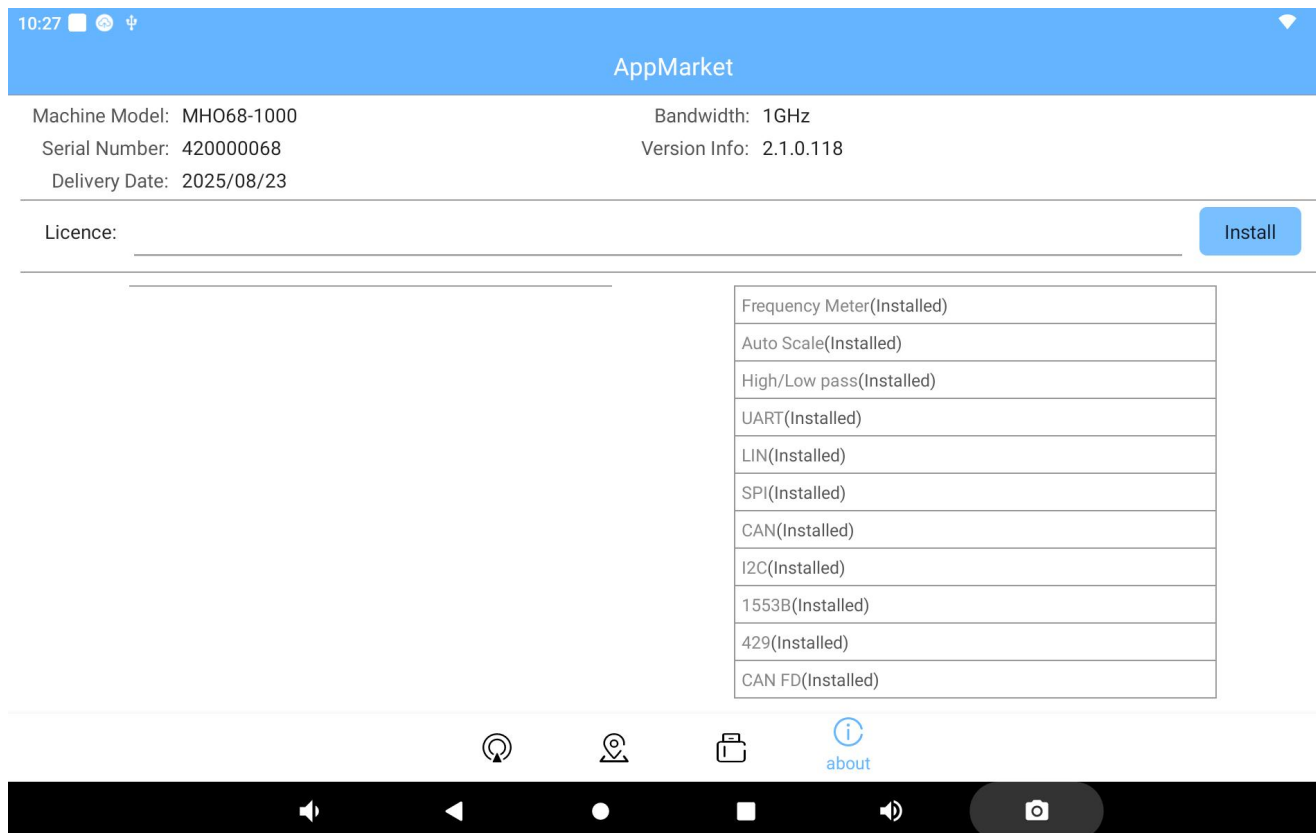


Figure 13-3 About Interface

The options that can be installed include: UART, LIN, SPI, CAN, I2C, 1553B, 429 and other serial decode (refer to [Chapter 12 Serial Bus Trigger and Decode](#)).

## 13.2 Settings

Tap settings on Homepage to enter the System Settings interface. Settings on the settings interface include Network & internet, display, sound, storage, system and About Oscilloscope, as shown in Figure 13-4.



Figure 13-4 System Setting Interface

**WLAN connection (Need to connect Wi-Fi module)**

Tap WIFI icon to enter the WLAN settings interface, as shown in Figure 13-5.

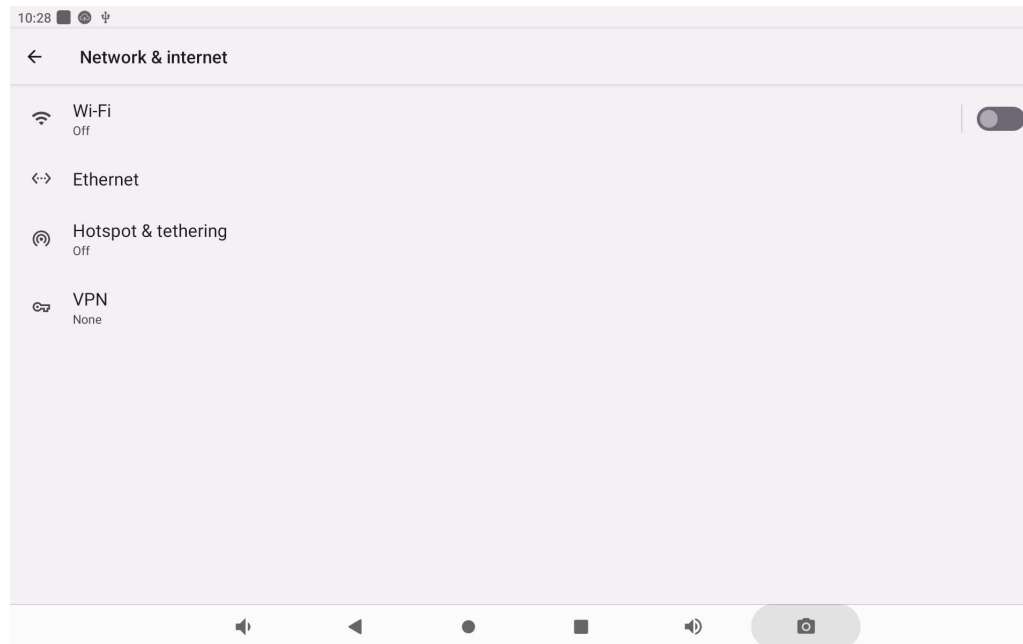


Figure 13-5 WLAN Connection Setting

Tap on/off bar to turn the WLAN function on. Oscilloscope can automatically scan the surrounding wireless networks and display their names by list.

Tap the wireless network to be connected and the password input box will pop up. After entering password using the virtual keyboard, tap Enter to connect oscilloscope to the wireless network.

After the network is linked, click the settings gear on the right side of the network to view the network's MAC address, IP address, gateway, DNS and other detailed information.

Click the current network can advanced settings for WIFI.

## **Ethernet**

Connect the oscilloscope LAN interface to the Ethernet. After connecting, tap Ethernet to enter the Ethernet setting interface, see Figure 13-6.



13-6 Ethernet connection settings

**Hotspot and tethering (requires Wi-Fi module connection)**

Tap Network & Internet -> Hotspot & Network Sharing to enter the WLAN hotspot setting interface.

Tap "WLAN Hotspot" to enter and open the hotspot. You can use the virtual keyboard to enter the network name and password for settings, as shown in Figure 13-7. Other devices can share scope files by linking to the scope hotspot.

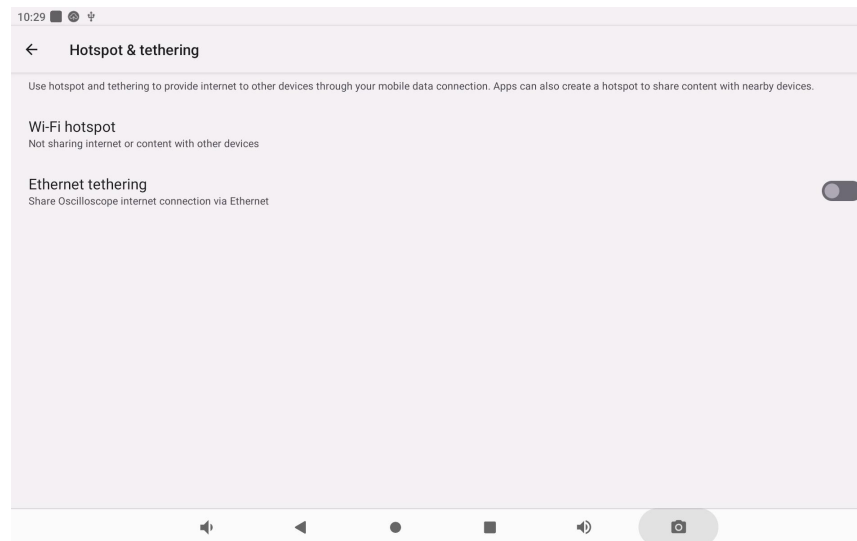


Figure 13-7 Portable WLAN Hotspot Setting

## Display

Tap display icons to set the oscilloscope Brightness level, Dark theme, Wallpaper, Font size and Display size.

Brightness level: The progress bar can be dragged to set the brightness of the screen display.

Dark theme: Set Dark theme uses a black background to help keep battery alive longer on some screens.

Wallpaper: Set the screen wallpaper.

Font size: Change the system display font size.

Display size: Make the items on your screen smaller or larger. Some apps on your screen may change position.

## **Sound**

Tap the “sound” icon and drag the progress bar in the sound section to change the media volume, alarm volume and notification volume. After clicking the default notification ring tone, drag up and down to select the ring tone, then click OK.

## **Storage**

Tap storage to enter the storage space view interface, then view the total storage capacity, size of available space, as well as memory size of applications (application data and media content), pictures, videos, audio (music, ringtones, podcasts, etc.), download content, cache data, and others.

If USB device is plugged, it will display the total storage capacity and available memory size, and can also uninstall and format SD card.

### **Screenshot**

Tap the screenshot to enter the screenshot save location settings and turn on the "Save screenshot to U disk" setting.

When the U disk connection is recognized, the screenshot will be stored in the U disk first (the path is Picture-Screenshot). If there is no U disk If the disk is connected, it is saved in local storage.

### **Language and input method**

Tap System →language & input icons to set your system language and input method.

Language: add a language and drag it to the first position of language list to make it as system language.

Spell Checker: When this function is turned on, it will automatically check for correctness as you type.

On-screen keyboard includes Android keyboard and Gboard, tap +manage on-screen keyboards to turn off one of them.

Advanced setting include Spell checker, Autofill service, Personal dictionary, Pointer speed.

## **Date and time**

Tap System →Date & time icons to set your system date and time

Use network-provided time: When turned on, the time provided by the network will be used as the system time.

Date and time cannot be set manually after turning this on.

Set date: Set the system date manually.

Set time: Set the system time manually.

Select time zone: Set the time zone manually.

Use 24-hour system: If on, the system time will be 24-hours, and off for 12 hours.

## About Oscilloscope

In the “About” interface, view legal information, Android version, IP address, build number and other information.

Accept online updates: turn off/on System update, app update, boot interface update, userguide update ...

## 13.3 File Manager

File manager app can enable quick access to and management of various files stored on the equipment.

Tap the Files app icon on the homepage screen to enter the file manager interface.

Recent: shows files that have been opened recently

Classification: views files by types, including images, videos, Audio, Documents, Downloads, STO etc.

Local: views the content stored in the oscilloscope by the traditional folder list mode. When USB device is plugged, the content in the USB device can also be accessed through external storage.

To operate files, simply press and hold a single file to select it. The selected file will show blue ✓. Then, click the remaining files to select them. If all files must be selected, tap the ⋮ icon at the right top of the screen and click Select all, which also includes copy, cut, compress, rename and more operations. Tap the trash icon to delete files.

## 13.4 Calculator

Tap calculator icon on the homepage to open the calculator app.

Calculator can perform simple addition, subtraction, multiplication and division calculations as well as scientific calculations.

## 13.5 Browser

Tap the browser icon on homepage interface to enter the browser interface, and then it can access to the internet if the network condition is good, as shown in Figure 13-8.

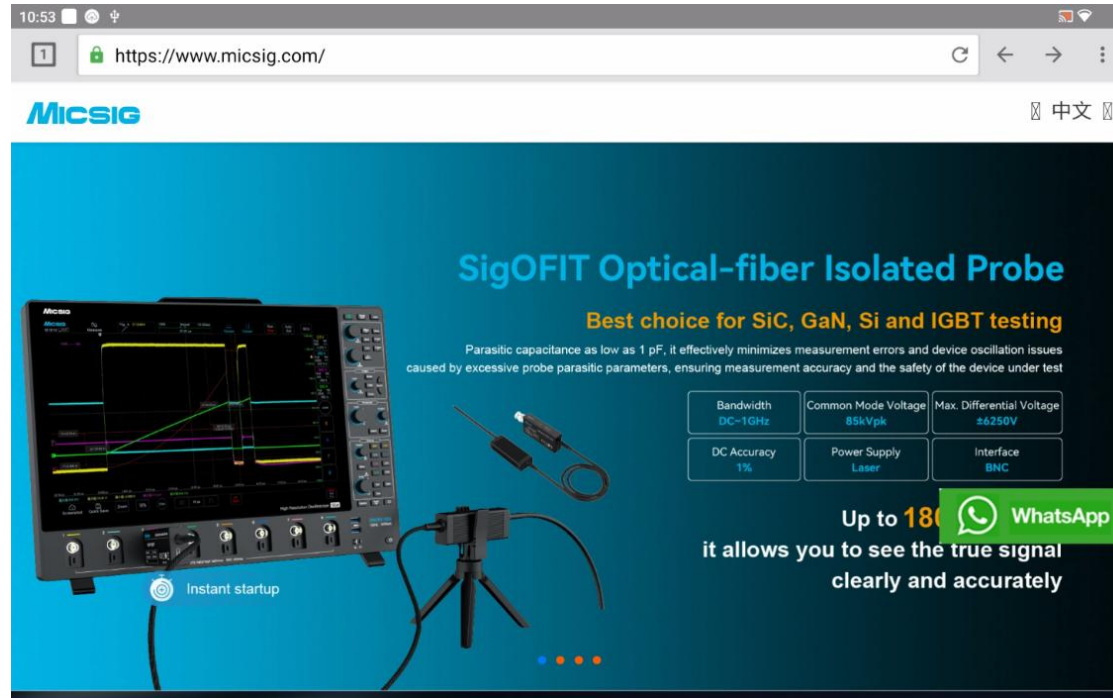


Figure 13-8 Browser Interface

## 13.6 Gallery

Tap gallery application on the homepage interface to enter the picture viewing interface, as shown in Figure 13-9.

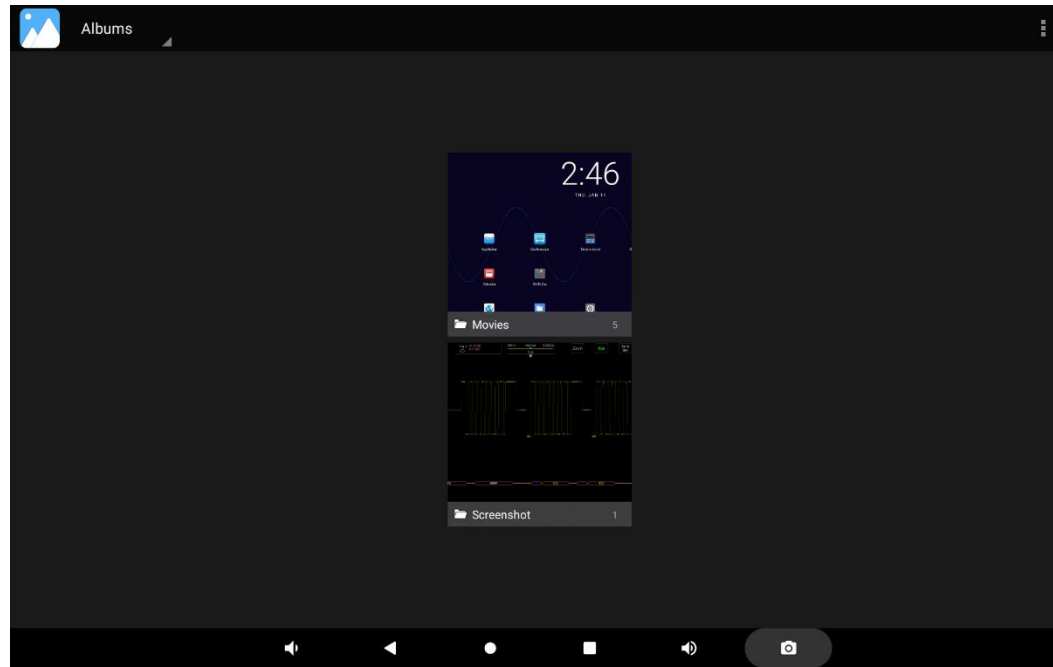


Figure 13-9 Picture Viewing Interface

Gallery provides locally stored photos/videos with the functions of picture/video viewing and photo editing.

In the picture view interface, pictures and videos can be classified into different categories according to the method in the upper left corner, and tap them to view pictures or videos.

When viewing pictures, click to display them in full screen. When viewing videos, swipe left and right to select the video you want to play. Click the triangle play button, and the video will play automatically. Tap the screen to pause play. Drag the pictures left and right when displaying in full screen to view previous and next pictures. Tap the back button to exit the full screen display, as shown in Figure 13-10.

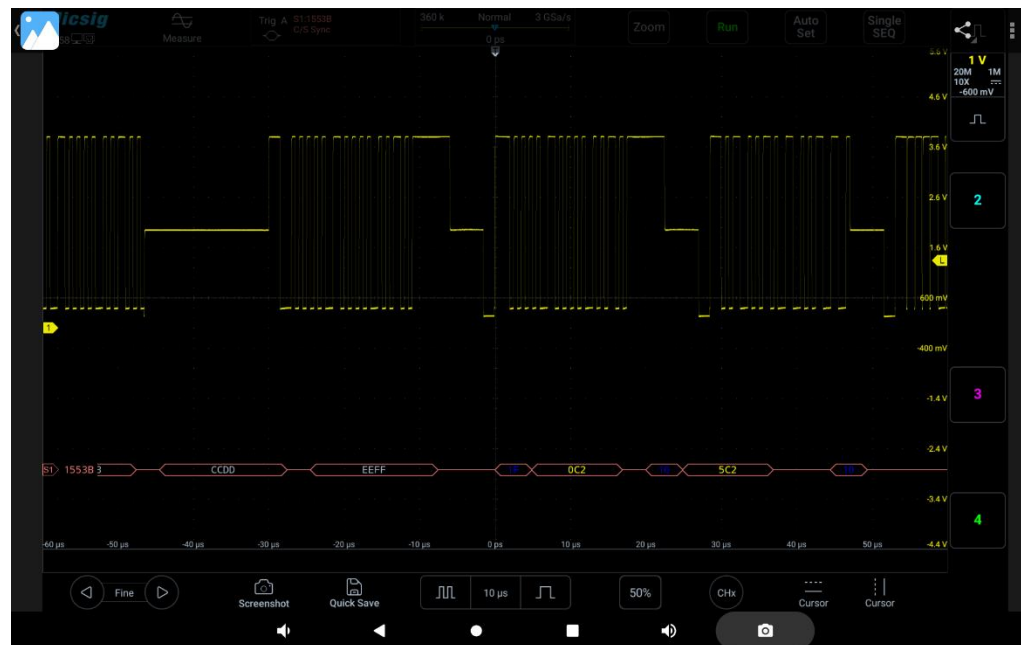


Figure 13-10 Full-Screen Picture Viewing Interface

When viewing pictures and videos, tap the option at the top right of the screen and click to select items. The pictures and videos can be selected. Click the recycle bin icon in the upper right corner of the screen to delete pictures or videos.

After the USB device is connected to oscilloscope, if there are pictures or videos in the USB device, they will be automatically displayed on the picture viewing interface.

## **13.7 Calendar**

Tap the calendar app icon on the homepage to enter the calendar interface.

Tap TODAY at the top right of the screen to navigate directly to today's date.

Tap the date at the top left of the screen to adjust the calendar display style by day, week and month.

## **13.8 Electronic Tools**

Electronic tools can provide a convenient set of electronic calculation tools.

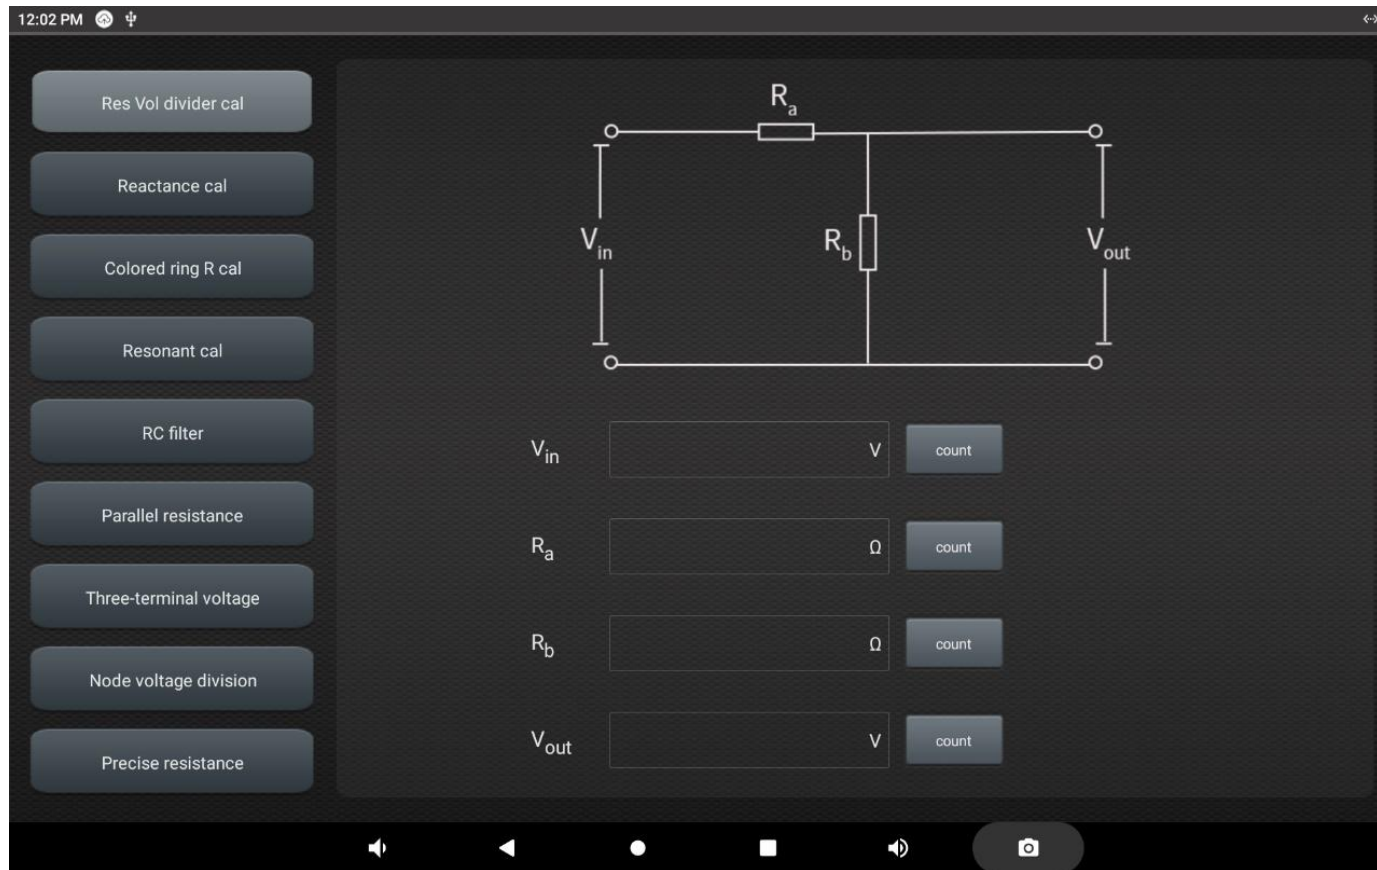


Figure 13-11 Electronic Calculation Tool Function

## 13.9 Clock

Tap time icon on the homepage or tap clock app icon to enter the clock settings screen, as shown in Figure 13-12.

## **Alarm clock**

Add an alarm: Click “+” button below to add an alarm clock and create settings.

Alarm time: Drag pink dot in the dial to set the hour, and drag again to set the minute.

Repeat: Monday to Sunday available and click calendar icon on the right to enter the calendar for custom selection.

Alarm ringtone: Select alarm ringtone, support local ringtone, system ringtone, none.

Label: The alarm will be displayed on the screen when it rings.

Delete alarm: Click the alarm to be deleted in the list and select “delete” at the bottom of the alarm edit page.

Switch status: Click the switch behind the alarm to turn it on and off.

## **World clock**

Add region: Click the bottom globe button and select city in the list of cities.

## **Timer**

Add timer: Enter the hour, minute and second, click the triangle button to start countdown.

Delete timer: Click “DELETE” to delete the timer.

Pause: Click the double rectangle button to pause timer.

## Stopwatch

Start: Click “Triangle” to start timing.

Pause: Click “Double Rectangle” below to pause the stopwatch.

Mark: Click the LAP to mark it.

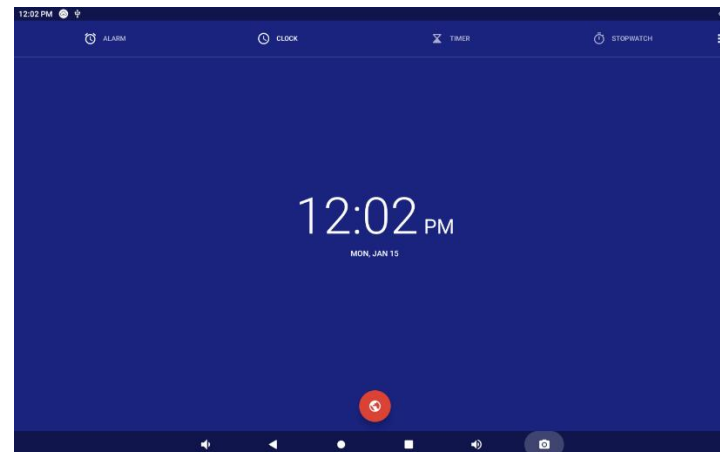



Figure 13-12 Time Setting

## 13.11 Power Off

Long press power button  to enter the power off interface, as shown in Figure 13-13. Power off contains 4 options: Shutdown, Reboot, Standby, Lock Screen.

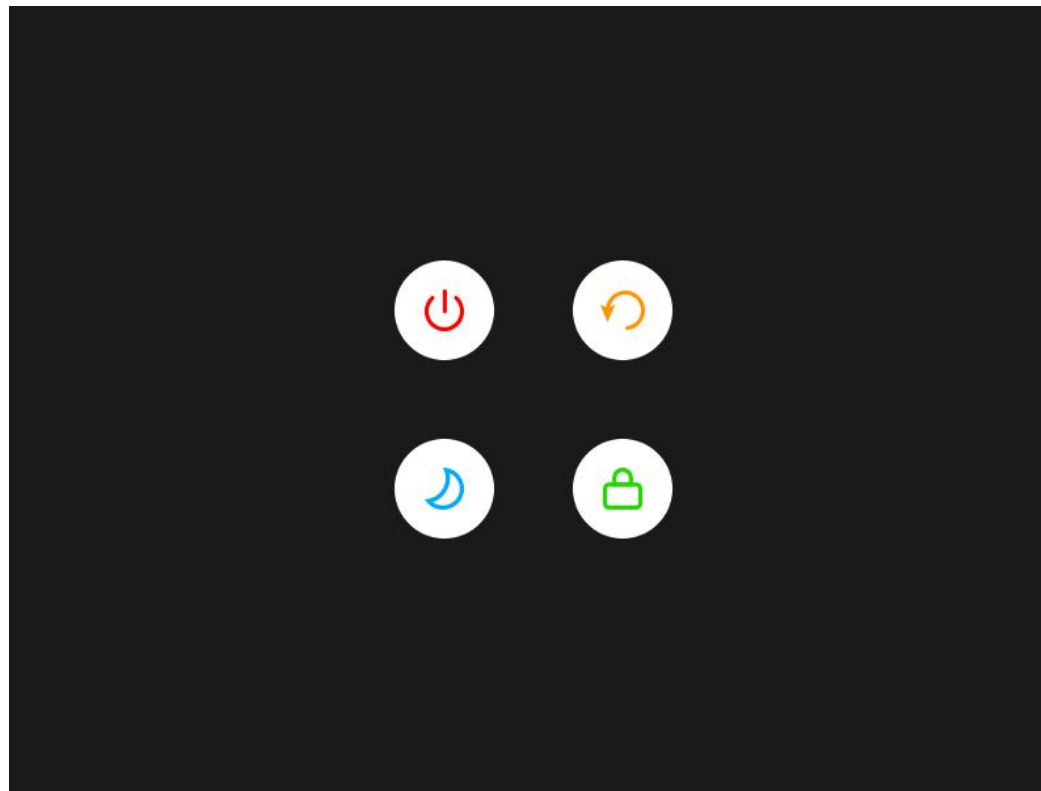





Figure 13-12 Power Off Interface

**Shutdown:** Click the  button to turn off the oscilloscope.

**Reboot:** Click the  button to restart the oscilloscope.

**Standby:** Click the  button to standby the oscilloscope, press power button  to wake.

**Lock Screen:** Click the  button to lock the oscilloscope screen, repeat the step to unlock.

## 13.11 ES File Explorer

Use the ES file browser to realize wireless transfer of oscilloscope files to computers and smartphones.

Connect the oscilloscope to the Wi-Fi and be in the same network gateway as the computer/smartphone, click "Network" on the right side of the ES file Explorer UI, then click "View on PC", and "TURN ON" to obtain the ftp address and port.

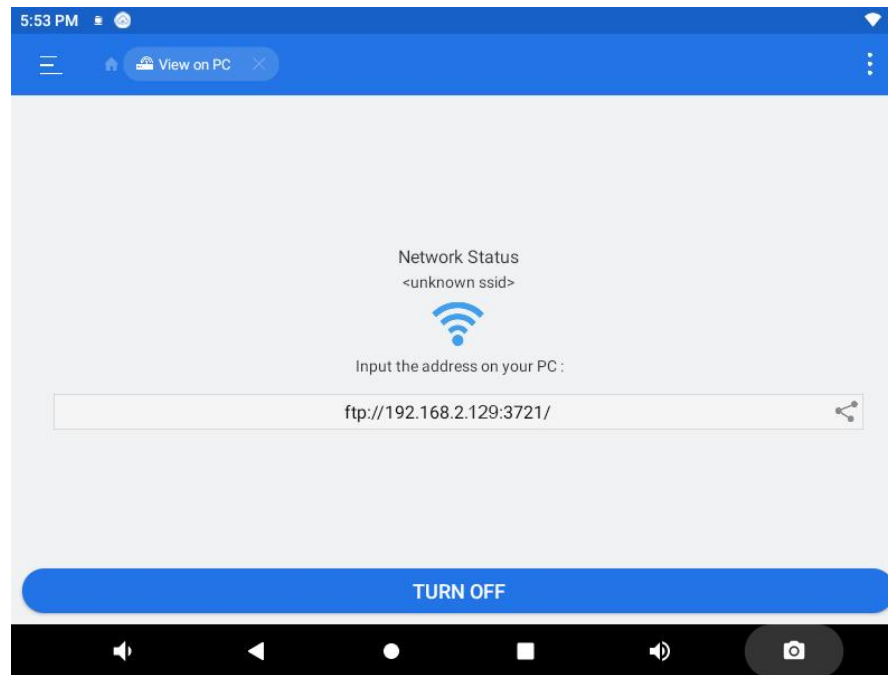


Figure 13-14 ES File Explorer

**On PC:** Get an ftp client software, here FileZilla is used as an example. Put the computer and the oscilloscope in the same network gateway, create a new site, use the FTP file transfer protocol, enter the Host address and port number generated by the oscilloscope ES file explorer, and set the logon type to anonymous.

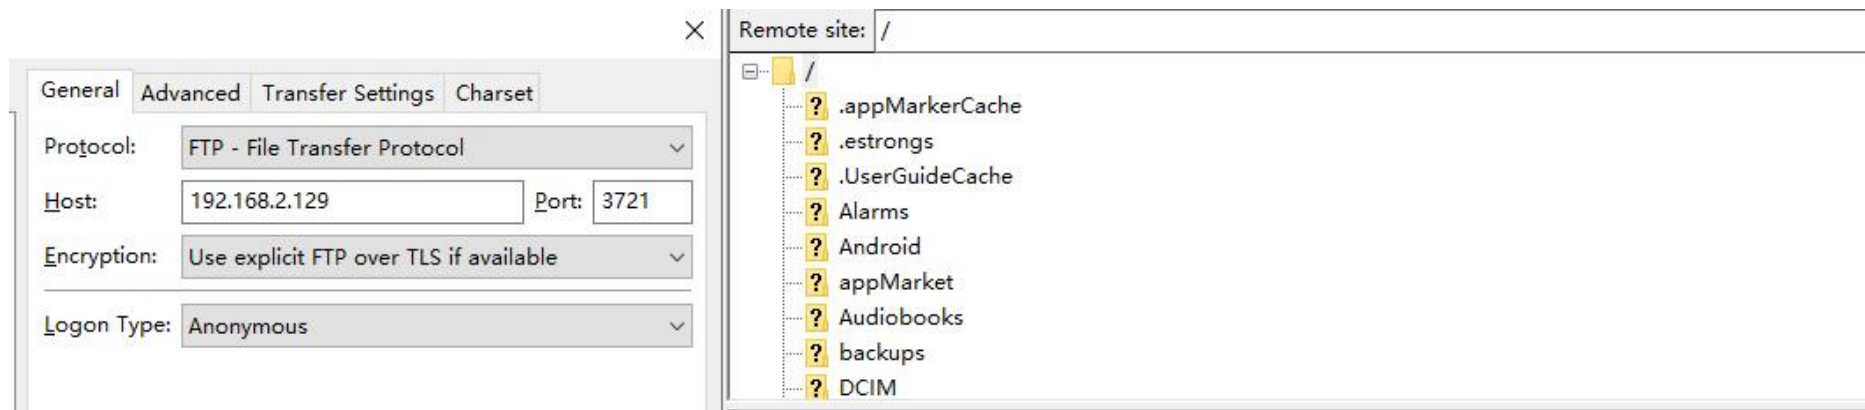


Figure 13-15 FileZilla

**On smartphone:** Get an ftp client application, take the ES file explorer app as an example. Place the smartphone and the oscilloscope on the same network gateway, open ftp and enter the URL address and Port number generated by the oscilloscope ES file explorer, and connect (no need input account & password).

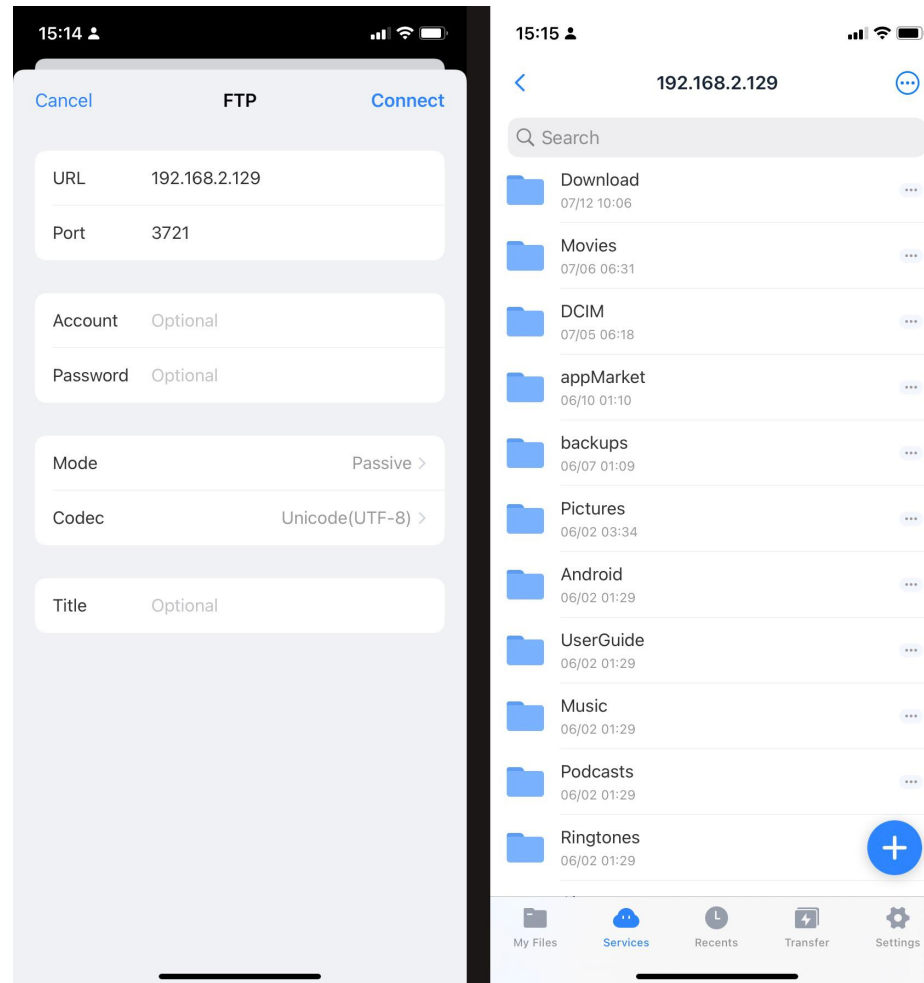
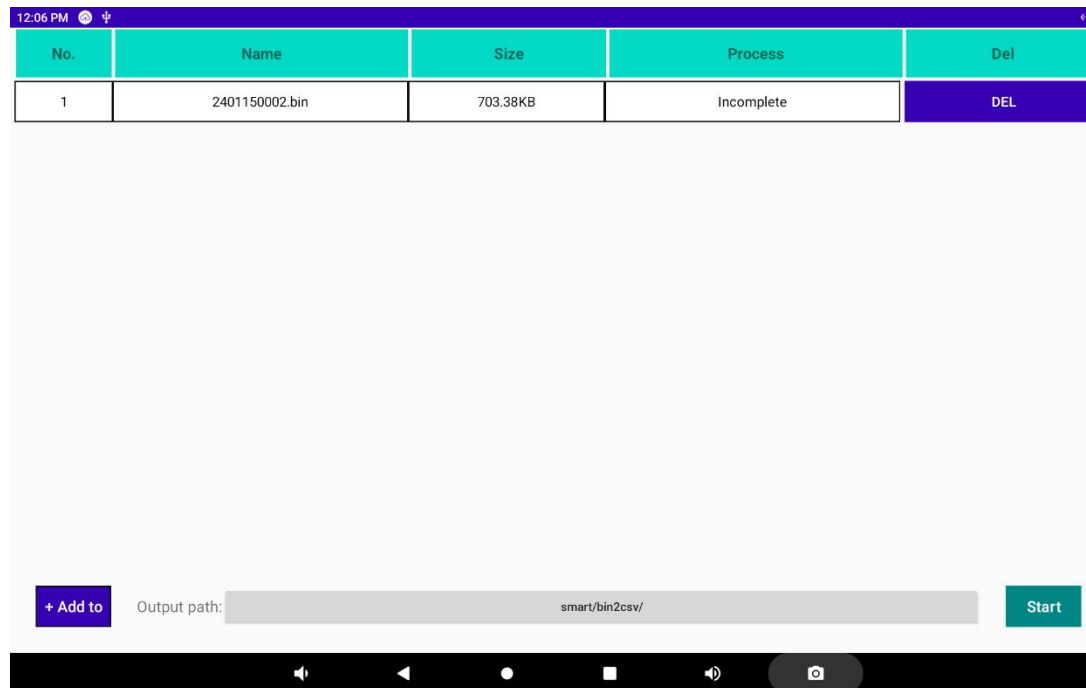


Figure 13-16 Smartphone ftp

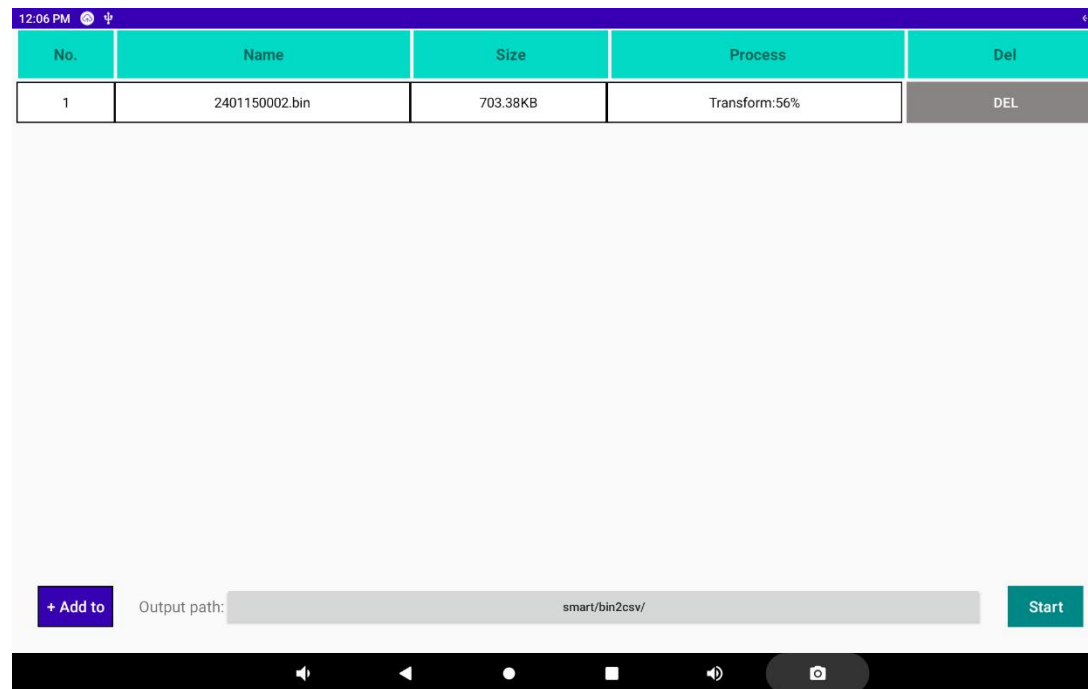
## 13.12 BinToCsv

CSV file, data and length can be saved up to 360K. When the storage depth is greater than 360K and you still want to save complete data points, you need to save the waveform in BIN format, and then convert the BIN format to CSV format through the desktop BinToCsv tool to retain all data points.



## 13-17 BinToCsv App

**Usage:** Save the waveform in BIN format, see Chapter 8 8.3 Waveform Storage for details. Go to the desktop and open the BinToCsv application. Click the "Add" button in the lower left corner. It will automatically jump to the default save location of the BIN file and open the saved BIN file. , click "Start" in the lower right corner and wait for the conversion to complete. The output path does not support modification.



### 13-18 BIN to CSV conversion in progress

After the conversion is completed, open the file application and enter the smart/bin2csv path to find the successfully converted csv file. Such files occupy a large capacity. Please pay attention to the remaining storage space of the oscilloscope (32G, excluding system space occupied) before conversion.

## **Chapter 14 Remote Control**

This chapter contains the application of host computer, mobile remote control and SCPI commands in order to understand remote control functions of the MHO series oscilloscope.

- Host computer
- Mobile remote control
- SCPI

## 14.1 Host Computer

To control the instrument using the host computer software, you need to install the NI driver first, then the RemoteDisplay software is downloaded and installed. This software is only suitable for Micsig MHO Series oscilloscopes.

### 14.1.1 Installation of Host Computer Software

**Note:** The host computer software only supports Win7 or higher edition operating system. The computer needs to install NI-VISA driver first.

The host computer and needed NI-VISA driver can be downloaded from Micsig official website:


<http://www.micsig.com>


Download the host computer software on official website of Micsig, open RemoteDisplaySetup.exe file, and complete the software installation.



Figure 14-1 RemoteDisplay Software

### 14.1.2 Connection of Host Computer

**USB connection:** Connect USB Device to the computer and oscilloscope through USB data cable. After the computer recognizes the USB device, open the host computer, set the connection mode to USB , and display the device information in the device information display box in the lower right corner. This indicates that the oscilloscope has been found. Click to connect to the selected oscilloscope.

**WIFI connection:** Under the oscilloscope settings → WLAN menu, choose and connect the same WIFI with the computer to ensure that **the computer and the oscilloscope are in the same network**. Open the host computer, set the connection mode to Net , and display the device information in the device information display box in







the lower right corner. This indicates that the oscilloscope has been found. Click to connect to the selected oscilloscope.

**Enter IP connection:** In case of network connection (WIFI or LAN), directly type oscilloscope IP to be connected in the oscilloscope device information display box in the lower right corner, and then click the oscilloscope connection status button, the host computer will be connected to the oscilloscope corresponding to the entered IP address.

### 14.1.3 Main Interface Introduction



Figure 14-2 Host Computer Interface

1.  Host computer on/off button	Click to exit the host computer software
2.  Oscilloscope connection status button	<p>The button has two states:</p> <p>Green: Connect to selected oscilloscope when clicked</p> <p>Red: Disconnect from oscilloscope when clicked</p>
3.  Quick camera button	Click to take photo quickly. Pictures are stored in the local directory C:\Users\Public\Pictures
4.  Video record button	Click to open or close video record function. Videos are stored in local directory C:\Users\Public\Videos
5.  Host computer storage button	Set photo taking and video recording storage locations
6.  Select oscilloscope connection mode	<p>USB and WIFI connections are available</p> <p><b>Note: WIFI connection must ensure that oscilloscope and</b></p>

	<b>computer are in the same network</b>
7. Host computer display area	Synchronous display with oscilloscope
8. Oscilloscope information display	Display oscilloscope model, connection mode, SN, IP and other information, select the oscilloscope to be connected
9. Host computer waveform control area	Waveform control area button has the same function with that button on the oscilloscope

#### 14.1.4 Operation Interface Introduction

The host computer and the oscilloscope are synchronously displayed, and the waveform operation mode and the menu opening and closing mode are the same as those on the oscilloscope; the left mouse button and the single finger operation mode are the same, and both of them can perform the operations of slide, click, drag, etc.

#### 14.1.5 Storage and View of Pictures and Videos

### Storage setting of pictures and videos:

Open the host computer storage setting , set the storage location of pictures and videos, as shown in the figure below:

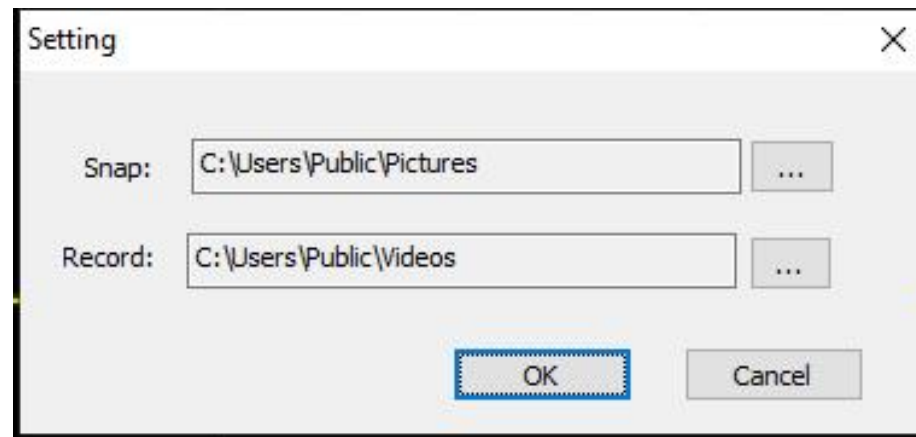


Figure 14-3 Host Computer Storage Setting

Pictures are stored in the local directory C:\Users\Public\Pictures by default. We can also store them under the directory defined by ourselves according to our own needs. For example, we store pictures in a “mini photo” directory under E-drive disk. We can set the video storage location in the same way, then click OK.

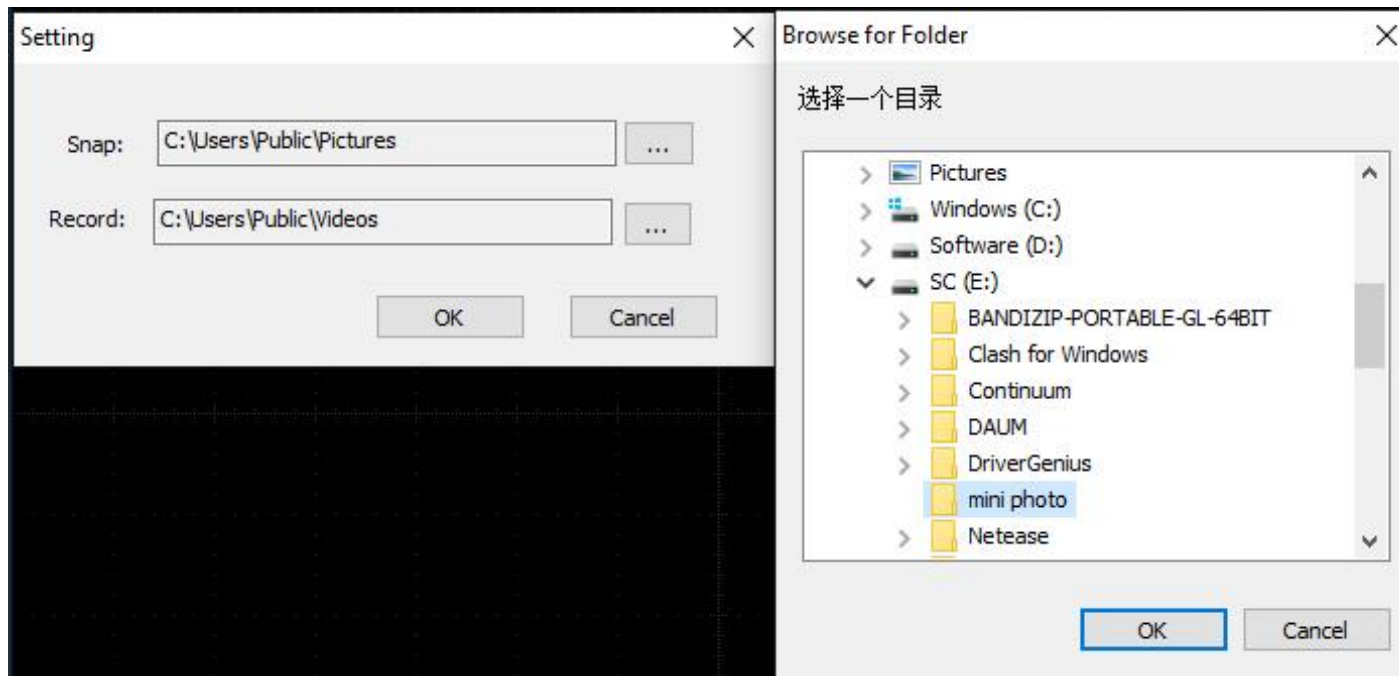


Figure 14-4 Change Storage Directory

**View pictures and videos:**

Open picture (video) storage directory to view pictures (videos) stored on the host computer.

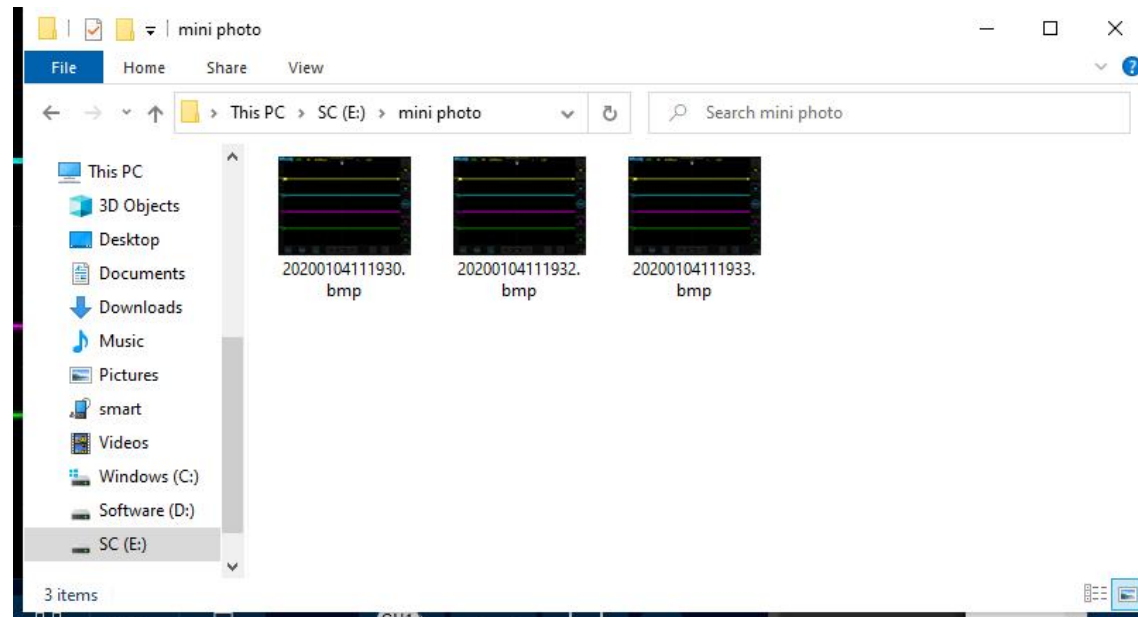


Figure 14-5 View Pictures

## 14.2 Mobile Remote Control

Micsig MHO series oscilloscopes support remote control on mobile phone (android & iOS). You need to download Android app from the official website of Micsig (address: <http://www.micsig.com>) and install it. For iOS, go to apple store search Tablet Oscilloscope or Micsig to get it.

After App is successfully connected, mobile device can be used to control the oscilloscope and display the oscilloscope interface in a real time manner.



Figure 14-6 APP interface



Figure 14-7 Successful Connection of APP

Android APP can be connected by two methods:

1. Use oscilloscope portable hotspot: Mobile phone can be connected to the hotspot of oscilloscope. Enter the oscilloscope IP 192.168.195.149 in the IP box at the lower right corner of the screen to connect successfully for control;
2. Connect mobile phone and oscilloscope to the network segment under the same router: view the IP address of the oscilloscope, and enters such IP address in the lower right corner of the mobile phone to connect successfully.

The first connection method is recommended.

## **14.3 SCPI**

MHO series support users to use SCPI (Standard Commands for Programmable Instruments) commands a computer via USB, LAN or Wi-Fi to program and control the digital oscilloscope.

For more information, refer to the programming guide for this product.

## **Chapter 15 Update and Upgrade Functions**

This chapter describes the methods of software update and increasing the optional function. You are recommended to read this chapter carefully understand the upgrade functions of the MHO series oscilloscope.

- Software update
- Add optional functions

## 15.1 Software Update

Micsig often releases software updates for its products. To update your oscilloscope software, you can connect the oscilloscope to WIFI for networking, and open the SystemUpgrade application to check and install update.

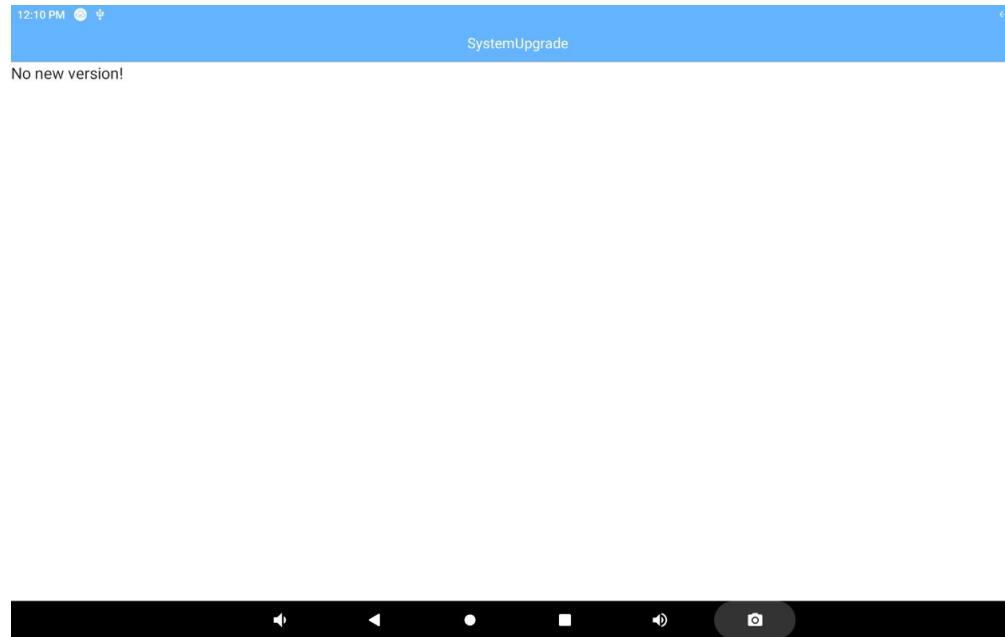



Figure 15-1 SystemUpgrade application

 **Note:** Please pay attention to keep the oscilloscope power more than 50% when installing updates or connect the oscilloscope to the adapter, so as to prevent the oscilloscope from becoming abnormal due to insufficient power for update.

To view the currently installed software and firmware, tap the “App Store” software in the “Home” page to display the oscilloscope software and firmware information on the “About” screen. Please refer to [13.2 App Store](#).

## 15.2 Add Optional Functions

Tap the “App Store” software in the “Home” page to display the installed and uninstalled decoded options on the “About” screen. Please refer to [13.2 App Store](#).

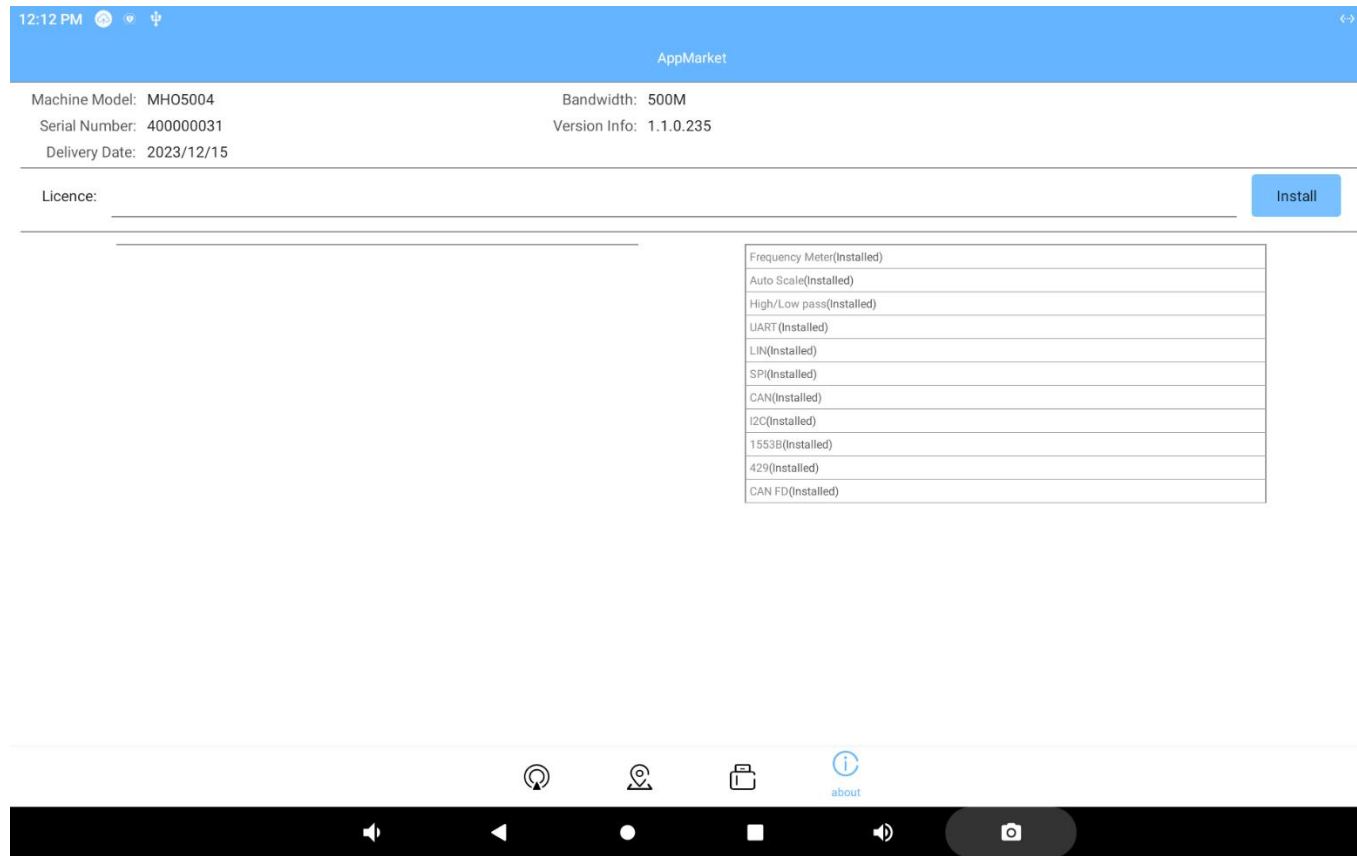


Figure 15-2 Installed function (right)

## Chapter 16 Reference

This chapter contains the measurement category suitable for the oscilloscope and the environmental level of pollution degree supported. You are recommended to read this chapter carefully to understand the conditions of use of the MHO series oscilloscope.

- Measurement Category
- Pollution Degree

## 16.1 Measurement Category

### Oscilloscope measurement category

MHO oscilloscopes are primarily used for measurements in Measurement Category I.

### Measurement category definitions

Measurement category I is for measurements performed on circuits not directly connected to MAINS. Examples are measurements on circuits not derived from MAINS, and specially protected (internal) MAINS derived circuits. In the latter case, transient stresses are variable; for that reason, the transient withstand capability of the equipment is made known to the user.

Measurement category II is for measurements performed on circuits directly connected to the low voltage installation. Examples are measurements on household appliances, portable tools and similar equipment.


Measurement category III is for measurements performed in the building installation. Examples are measurements on distribution boards, circuit-breakers, wiring (including cables, bus-bars, junction boxes, switches, socket-outlets)

in the fixed installation, and equipment for industrial use and some other equipment, for example, stationary motors with permanent connection to the fixed installation.

Measurement category IV is for measurements performed at the power source of the low-voltage installation.

Examples are electricity meters and measurements on primary overcurrent protection devices and ripple control units.

### **Transient withstand capability**

 Maximum input voltage of the analog input

Category I 300Vrms, 400Vpk.

## **16.2 Pollution Degree**

Pollution Degree	MHO Series oscilloscopes can operate in environments with pollution degree 2 (or pollution degree 1).
------------------	---

<p>Pollution Degree Categories</p>	<p>Pollution degree 1: No pollution or only dry, non-conductive pollution occurs. The pollution has no influence. For example: a clean room or air-conditioned office environment.</p> <p>Pollution degree 2: Normally only dry, non-conductive pollution occurs. Occasionally temporary conductivity caused by condensation may occur. For example: general indoor environment.</p> <p>Pollution degree 3: Conductive pollution, or dry, non-conductive pollution occurs which becomes conductive due to condensation. For example: sheltered outdoor environment.</p> <p>Pollution degree 4: Pollution that generates persistent conductivity through conductive dust, rain, or snow. For example: outdoor locations.</p>
--	---


## Chapter 17 Troubleshooting

**1. If the oscilloscope does not start up at power on, please follow steps below:**

- Check the power cord to verify whether it has been connected properly and whether the power supply is normal;
- Check the power on/off buttons to ensure it has been pushed, and if you are using battery, check whether the battery is in good condition;
- Check the Power-off lock on the side of oscilloscope;
- Contact Micsig if the problem persists, and we will provide service to you.

**2. If acquired waveforms do not display on the screen when the signal source is connected, please follow the steps below:**

- Check whether the probe is connected correctly in the BNC socket;
- Check whether the probe is connected correctly in the signal source;

- Check whether the trigger type is correctly selected;
- Check whether trigger conditions are set correctly
- Check whether signal source is working properly;
- Check whether the channel is turned on;
- Check whether the vertical scale factor is set correctly;
- Check whether the instrument is in single-sequence waiting state for trigger
- Tap  to resample signal.

**3. If the measured voltage amplitude is 10 times greater or smaller than the actual value:**

- Check whether the set attenuation factor of the channel is consistent with the attenuation factor of the actually used probe.

**4. There is a waveform display, but cannot be stable:**

- Check the trigger source on the trigger type menu to ensure that it is consistent with the actually used signal channel;
- Check the trigger type: edge trigger is adopted for general signal, and video trigger mode for video signal. Only the correct trigger mode is used, the waveform can be displayed stably;
- Check signal source noise. Set the trigger coupling mode to be high-frequency rejection or low-frequency rejection to filter out high frequency or low frequency noise interference

**5. A waveform is displayed but inconsistent with the input waveform:**

- Check whether the coupling mode setting in the channel menu is correct.

**6. If there is no display after pressing  button:**

- Check whether the trigger mode is “Normal”, and whether the trigger level is beyond the scope of the waveform. Center the trigger level and set the trigger mode as “Auto”.
- Check whether the picture is displayed in full screen, and if so, exit the display.

**7. If the display becomes slower after setting average times of sampling:**

- If the average times are above 32, it is normal for the general speed to become slow.
- You can reduce the average times.

**8. Staircase waveform is displayed:**

- This phenomenon is normal because the horizontal time base is too low, and the horizontal time base may be increased to raise the horizontal resolution, and then improve the display;
- The display type may be “line”. The connection between sampling points may lead to the display of staircase waveform. This problem can be solved by setting the display type as “point” display mode.

**9. There is persistence of vision in waveform display:**

- This phenomenon is normal because the persistence time may be set too long, and the waveform persistence shows persistence of vision;
- The reason may be that sampling mode is set to envelope of sampling, and the sampling mode can be modified to normal waveform for normal display

**10. During measurement, the measured value is displayed as -----:**

- This phenomenon is normal. When the channel waveform displays beyond the waveform display area, the measured value is displayed as ----- . If the channel vertical sensitivity or vertical position is adjusted, the measured value can be displayed correctly;
- This phenomenon is normal. When there is no full-cycle waveform in the waveform display area, the measured value may be displayed as ----- . If the time base is adjusted, the measured value will be displayed correctly.
- This phenomenon is normal, and the measured value of the FFT waveform is displayed as ----- .

**11. CSV files cannot be selected when loading reference:**

- CSV files are not the supported format that can be loaded into reference channels.

**12. Tap the button during the use of oscilloscope, there is no beep sound:**

- Check whether the sound volume setting is correct.

**13. Oscilloscope backlight has low brightness:**

- Check whether the backlight settings are correct.

**14. A waveform being moved changes abruptly:**

- Check whether the picture is displayed in full screen.

**15. Turn off the channel at Auto state:**

- This phenomenon is normal. At Auto state, the channel with an amplitude less than 10mV will be turned off.

**16. Function buttons are pressed without response:**

- Check whether the picture is displayed in full screen.

## Chapter 18 Services and Support

**Service Commitments :** Micsig guarantees that the products are manufactured and tested according to national standards or enterprise standards, no unqualified products will leave our factory and the first-class customer services are provided for all sold products. The warranty period for our products is three years since date of shipment, and three months for the sold spare parts and the product repair and maintenance. For the details of warranty service, please read the “Scope of Limited Warranty and Services” chapter. Micsig provides lifetime repair and maintenance services for products. In accordance with the relevant provisions of after-sale service of industrial products and the enterprise’s own capacities, Micsig commit as follows:

**Repair Commitments :** Micsig commits to use the original factory parts for products returned by the user for repair (under warranty or not) and the commissioning and testing standards are identical with new products. Micsig the obligation to inform the customer, but without any other obligations for non-product defects or products with decreased performance not for objective reasons.

**Service Time Commitments :** Micsig will give a reply of the time and cost for repair within 2 working days after receiving the product returned by the user for repair. After the reply is confirmed, the repair period for a general fault is 5 working days and shall not exceed 10 working days for any special fault.

## Contact us

Shenzhen Micsig Technology Co., Ltd.

Address: 6F, Jinhuan Building, No. 56, Tiezai Rd, Bao'an District, Shenzhen, Guangdong, China.

Tel: +86 (0755)-8860-0880

Website: [www.micsig.com](http://www.micsig.com)

Email: [sales@micsig.com](mailto:sales@micsig.com)

Postal Code: 518126

## Annex

### Annex A: Maintenance and Care of Oscilloscope

#### General maintenance

**Do not put or leave the instrument in a place where the LCD display will be exposed to direct sunlight for long period.**

**⚠Caution:** To avoid damage to the oscilloscope or probes, do not expose them to sprays, liquids, or solvents.

### **Clean oscilloscope**

Examine the oscilloscope and probes as often as operating conditions require. To clean the exterior surface, perform the following steps:

- Use a soft cloth to remove floating dust on the outside of the oscilloscope and probes. Take care to avoid scratching the touch screen while cleaning.
- Use a soft cloth dampened with water to clean the oscilloscope while doing this please keep the power off. Wipe with a mild detergent and water. Do not use any corrosive chemical cleaning agent, in order to avoid damaging the oscilloscope or probe.
- Clean the ventilation hole with a soft brush to keep it unimpeded. Do not use any corrosive chemical cleaning agent, so as to avoid damage to the oscilloscope motherboard.

- If the fan needs to be cleaned, please consult the after-sales service personnel, so as to avoid damage to the oscilloscope.

 Warning

*Make sure the instrument is dry before recharging, to avoid electrical short circuit or personal injury caused by moisture.*

## **Annex B: Accessories**

### **Standard accessories**

- 1) MSP500 Passive Probe X 4
- 2) MSP-BNC adapter X 4
- 3) Power adapter (24V DC, 7.5A) X 1
- 4) Power cord X 1
- 5) MHO calibration certificate X 1

- 6) MHO packing list X 1
- 7) MHO Quick Operation Guide X 1

**Optional accessories**

- 1) Oscilloscope suitcase/handbag
- 2) High voltage probe
- 3) Differential probe
- 4) Current probe
- 5) Optical-fiber isolated probe

## Disclaimer and Copyright Notice

**The final interpretation of this content belongs to Shenzhen Micsig Technology Co., Ltd. For any updates, please refer to our official website ([www.micsig.com](http://www.micsig.com)) or to obtain the latest information.**

**Shenzhen Micsig Technology Co., Ltd. strives to ensure that the contents of this manual are accurate and reliable. However, we welcome your feedback if you find any omissions or have questions during use.**

**Please note: Safe and correct use of the product is the foremost priority. We strongly recommend following all instructions in this manual. Micsig shall not be held responsible for any accidents or damages resulting from failure to follow the manual.**

**The copyright of this manual belongs to Micsig. Without written authorization, no organization or individual may reproduce, copy, or distribute it in any form. Any infringement will be pursued in accordance with the law.**

**Micsig 麦科信** Shenzhen Micsig Technology Co., Ltd.

TEL: +86-(0)755-88600880 Email: [sales@micsig.com](mailto:sales@micsig.com) Web: [www.micsig.com](http://www.micsig.com)

Address: 6F, Jinhuan Building, No. 56, Tiezai Rd, Bao'an District, Shenzhen, Guangdong, China.



Official Website